

Initial commissioning

⚠ Before using the machine for the first time, ensure that it is correctly installed and connected. Please read the separate Operating Instructions supplied with the appliance.

For safety reasons, spinning is not possible until the machine has been prepared for use for the first time. To activate the spinning function, you must run a wash program without laundry and without detergent.

Using detergent could result in an excessive build-up of foam!

The ball valve is activated at the same time. The ball valve prevents detergent escaping from the suds container into the sump during a wash program, thus making maximum use of the detergent.

Running the first program

- Turn on the water supply.
 - Turn the program selector to *Normal*.
- The washing machine is now switched on and the temperature *hot+* lights up on the control panel.
- Touch the *Start/Stop* sensor button.
- The program starts and the symbol lights up on the control panel.


At the end of the program

- The symbol lights up on the control panel, *0:00* appears on the time display, and the drum occasionally rotates.
- Touch the *Start/Stop* sensor button.
- The door will be unlocked.
- Reach under the recessed grip and pull the door open.

Note: Leave the door slightly open to allow the drum to dry.

- When the program has ended, turn the program selector to .

Operation

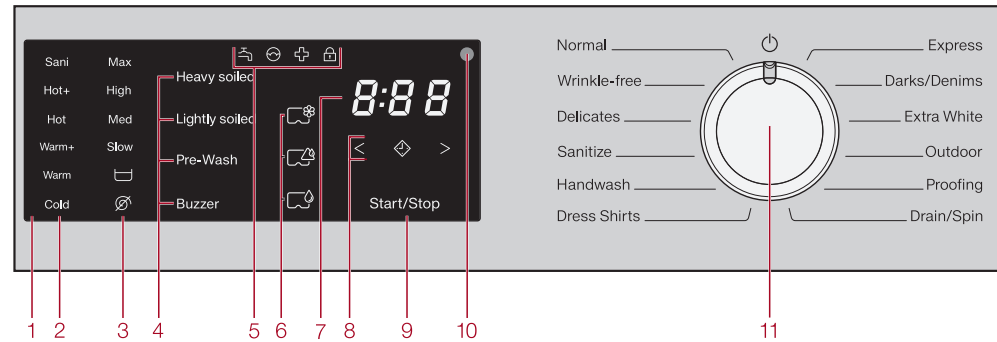

Temperature	Spin speed	Laundry type	
		Full load (17.6 lb/8 kg)	Half load (8.8 lb/4 kg)
Normal hot+; hot; warm+; warm; cold	max.; 1; 2	Cotton, linen, and mixed fiber textiles made of both cotton and linen.	Synthetic or mixed fiber fabric, or wrinkle-free cotton.
Wrinkle-free hot+; hot; warm+; warm; cold	fast; medium; slow; 1; 2; 3		
Delicates hot+; hot; warm+; warm; cold	medium; slow; 1; 2; 3	For fine textiles made from synthetic fibers.	
Sanitize hot+; hot; warm+; warm; cold	max.; fast; 1; 2; 3	Cotton or linen fabrics with direct skin contact or for which special hygiene requirements apply.	
Handwash warm+; warm; cold	fast; medium; slow; 1; 2; 3	Small load (4.4 lb/2 kg) For fine textiles which are only suitable for hand washing.	
Dress Shirts hot+; hot; warm+; warm; cold	medium; slow; 1; 2; 3	Small load (4.4 lb/2 kg) Pre-treat collars and cuffs depending on the level of soiling.	
Express warm+; warm; cold	fast; medium; slow; 1; 2; 3	Half load (7.7 lb/3.5 kg) Cotton textiles that have hardly been worn or are only very lightly soiled. Selecting the lightly soiled extra option will reduce the washing time by 10 minutes.	
Darks/Denims warm+; warm; cold	fast; medium; slow; 1; 2; 3	Small load (4.4 lb/2 kg) Black and dark garments made from cotton, mixed fibers, and denim.	
Extra White hot+	max.; fast; 1; 2; 3	Full load (17.6 lb/8 kg) For white textiles made of cotton or linen without special hygiene requirements.	
Outdoor warm+; warm; cold	medium; slow; 1; 2; 3	Small load (5.5 lb/2.5 kg) Performance outerwear (e.g., jackets and trousers) made from membrane fabric.	
Proofing warm+	fast; medium; slow; 1; 2; 3	Small load (5.5 lb/2.5 kg) Treating microfiber fabric, ski wear, or table linens/drapes made from mainly synthetic fibers to provide a finish which is resistant to water and dirt.	
Drain/Spin Cold	max.; fast; medium; slow; 1; 2; 3	Full load (17.6 lb/8 kg) Drain only. Set spin speed to 1. Make sure you select the appropriate spin speed.	



Miele recommended detergents					
The Miele detergents have been developed by Miele especially for the Miele washing machine. You can order the Miele detergents from Miele's online store.					
Programs	Miele UltraWhite	Miele UltraColor	Miele Cap	Miele Cap	Miele Cap
Normal	✓	✓	–	F	H
Wrinkle-free	–	✓	–	F	H
Delicates	–	✓	A, B, C	F	–
Sanitize	✓	–	–	F	H
Handwash	–	–	A, D, E	F	–
Dress Shirts	✓	✓	–	F	H
Express	–	✓	–	F	–
Darks/Denims	–	✓	–	F	–
Extra White	✓	✓	–	F	H
Outdoor	–	–	C	–	–
Proofing	–	–	–	G	–

✓ = Recommended; – = Not recommended
A = Sportswear; B = Downs; C = Outdoor; D = WoolCare; E = SilkCare; F = Fabric Softener; G = Proofing; H = Booster

Cleaning the detergent dispensing drawer

Washing at low temperatures and the use of liquid detergent can lead to a build-up of bacteria in the detergent dispensing drawer.

 
- Clean the entire drawer at regular intervals for hygiene reasons, even if you are using the TwinDos system exclusively.
- Pull out the detergent dispenser drawer until a resistance is felt.
- Press down the release button and, at the same time, pull the drawer completely out of the machine.

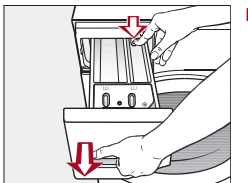

Removing and cleaning the insert for liquid detergents

An insert for liquid detergents is located in the compartment of the detergent dispenser drawer.


- Remove the insert. Clean the insert thoroughly with warm water.

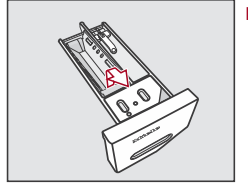

Cleaning the compartment


The compartment has a siphon for better dispensing of the chlorine bleach.

- Remove the release catch.

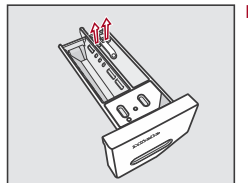

Cleaning the detergent dispenser drawer housing


- Clean all parts and the detergent drawer with warm water.

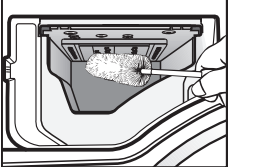

Cleaning the drum (hygiene info)


Washing at low temperatures and/or using liquid detergent can cause bacteria and unpleasant odors to build up in the washing machine.


Use the Normal program to clean the machine. This should be done at the latest when the indicator light comes on.

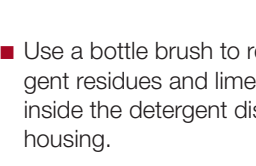

Cleaning the detergent dispensing drawer

- Remove and clean the siphon.
- Pull the siphon out of the chamber

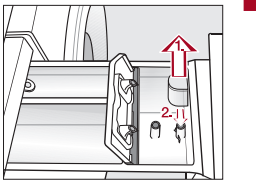

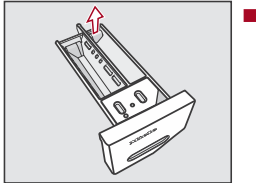


To switch off the fault messages: Switch the washing machine off with the button. The messages will appear at the end of the program and when the washing machine is switched on, and need to be confirmed with the OK sensor button.

Problem/Fault message	Possible cause and solution
The control panel remains dark.	There is no power to the machine. ■ Check whether the plug is plugged in. ■ Check whether the fuse has tripped. The washing machine has switched off automatically to save energy. ■ Switch the washing machine on again by turning the program selector.
F and 34 appear alternately on the time display.	The door is not closed properly. The door lock could not engage. ■ Close the door again. ■ Start the program again. If the fault message appears again, contact Technical Service.
The fault indicator light lights up, and F and 10 appear alternately on the time display, and the buzzer sounds.	The water intake is blocked or restricted. ■ Check whether the water supply is turned on properly. ■ Check whether the intake hose is kinked. ■ Check whether there is sufficient water pressure. The filter in the water intake is blocked. ■ Clean the filter (see the Operating Instructions).
The fault indicator light lights up, and F and 11 appear alternately on the time display, and the buzzer sounds.	The drain is blocked or restricted. The drain hose has been fixed too high. ■ Clean the filter and the pump. ■ The maximum drain height is 1 m.
The fault indicator light lights up, and F and 138 appear alternately on the time display, and the buzzer sounds.	The water protection system has reacted. The washing machine is switched off. ■ Close the water supply. ■ Contact Technical Service.
F and XXX appear alternately on the time display and the buzzer sounds.	There is a fault. ■ Disconnect the washing machine from the power supply, either by unplugging the machine or by disconnecting it at the breaker ■ Wait at least 2 minutes before reconnecting the washing machine to the electricity supply. ■ Then switch the washing machine on again. ■ Restart the program. If the fault message appears again, contact Technical Service.

Problem/Fault message	Possible cause and solution
-0- lights up	The program selector was moved to a different position after the program had started. ■ Turn the program selector back to the original position.
The indicator light lights up.	The program has been interrupted. ■ Open the door. ■ Close the door. Close the door.
The indicator light lights up.	Excessive foam has built up during washing. ■ Use less detergent next time and follow the manufacturer's instructions on dosage given on the packaging.
The door cannot be pulled open during a program.	A temperature program above 140°F (60°C) has not been run for a long period of time. ■ In order to prevent bacteria and unpleasant odors building up in the machine, run the Normal program using Miele washing machine cleaner or universal powder detergent.
After the program is canceled, flashing bars ... appear on the time display.	The drum is locked during a program. ■ Touch the Start/Stop button and cancel the program. The program is canceled, the door will unlock, and you will be able to pull it open. There is still water in the drum and the machine is unable to drain. ■ Clean the drain filter and the drain pump (see the operating instructions).
F and 35 appear alternately on the time display.	To protect the user against scalding, the door cannot be opened if the suds temperature is higher than 130°F (55°C). ■ Wait until the temperature in the drum has decreased and the bars have stopped flashing on the time display.

Quick Guide Washer

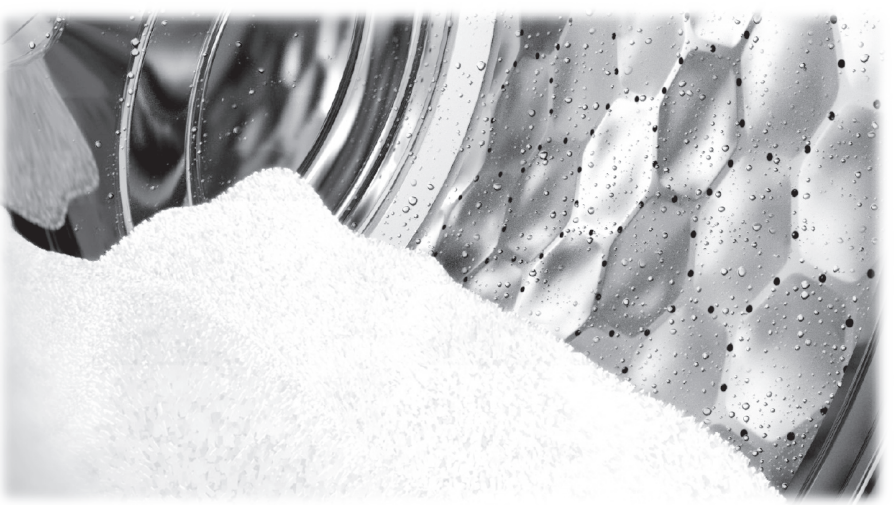

These short instructions are not a substitute for the Operating Instructions supplied with the appliance! Please read the Operating Instructions supplied with your washing machine before using it for the first time and take note of the IMPORTANT SAFETY INSTRUCTIONS, as well as the full descriptions on how to use your appliance.