


# Miele

TOUCHTRONIC

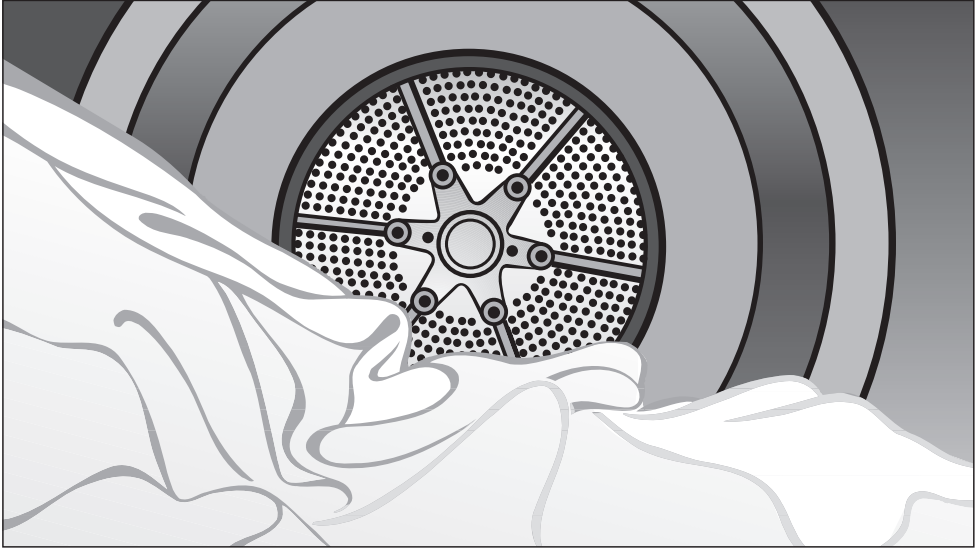

## Operating Instructions T 9822 Gas Dryer

To prevent accidents  
and appliance damage  
read these instructions

**before**

installation or use.

en - US, CA

M.-Nr. 07 759 020



 **WARNING**

**For your safety the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death.**


- **Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**
- **WHAT TO DO IF YOU SMELL GAS**
  - **Do not try to light any appliance.**
  - **Do not touch any electrical switch.**
  - **Do not use any phone in your building.**
  - **Clear the room, building or area of all occupants.**
  - **Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.**
  - **If you cannot reach your gas supplier, call the fire department.**
- **Installation and service must be performed by a qualified installer, service agency or the gas supplier.**  
**(In Massachusetts a licensed plumber / gas fitter)**

# Contents

---

<b>IMPORTANT SAFETY INSTRUCTIONS</b> . . . . .	5
<b>Control panel</b> . . . . .	8
<b>First use</b> . . . . .	9
<b>Before loading the dryer</b> . . . . .	10
Fabric care labels . . . . .	10
Drying tips . . . . .	10
<b>Use</b> . . . . .	11
1. Sort the laundry . . . . .	11
2. Load the laundry . . . . .	11
3. Select a program . . . . .	13
4. Select an option . . . . .	14
5. Start the program . . . . .	15
6. Program end - Unload the laundry . . . . .	16
Changing a running program . . . . .	16
To cancel a program . . . . .	16
Adding/removing laundry during a drying program . . . . .	16
<b>Quick Guide</b> . . . . .	17
<b>Program guide</b> . . . . .	17
<b>Frequently asked questions</b> . . . . .	19
General problems . . . . .	19
Fault indicators . . . . .	21
<b>After sales service</b> . . . . .	23
<b>User Maintenance Instructions</b> . . . . .	25
<b>Dryer Care</b> . . . . .	26
Cleaning the lint filter . . . . .	26
Cleaning the exterior and the control panel . . . . .	27
Changing the light bulb . . . . .	28
<b>Caring for the environment</b> . . . . .	29

# IMPORTANT SAFETY INSTRUCTIONS

 **WARNING** - To reduce the risk of fire, electric shock or injury to persons when using your appliance follow basic precautions, including the following:

**The T9822 gas dryer is only approved for use in the USA and Canada. It is not approved for use in Mexico.**

**This dryer is intended for residential use only!**

- ▶ It is **essential** to read all instructions before using the appliance.
- ▶ Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- ▶ Always close the door after use to prevent child or pet hazards.
- ▶ Before this appliance is removed for service or discarded, remove the door to the drying compartment.
- ▶ Do not reach into the dryer if the drum is moving.
- ▶ Do not install or store the appliance where it will be exposed to the weather.
- ▶ Do not lean on the door. The dryer may tip over.
- ▶ Do not tamper with the controls.
- ▶ Do not use fabric softeners or products to eliminate static unless recommended by the fabric manufacturer.

▶ To prevent the risk of fire, the following textiles must not be dried in this dryer:

- items which have not been washed.
- items, such as work-wear, exposed to grease, oils, or other deposits (such as lotions or cosmetics). If these items have not been thoroughly cleaned there is a danger that they may contribute to a chemical reaction that could cause the laundry to ignite when heated even after being removed from the dryer.
- items that have been previously cleaned, washed, soaked or spotted with gasoline, dry-cleaning solvents or other flammable or explosive substances. They may give off vapors that could ignite or explode.
- items treated with flammable cleaning agents or items containing acetone, alcohol, petrol, stain remover, wax or chemicals from buffing, etc.
- items which have been splashed with hair spray, nail polish remover, etc.

When washing heavily soiled items ensure that sufficient detergent is used with a high temperature. If in doubt wash the item several times.

- items containing foam rubber or similarly textured rubber-like materials.
- items with padding or filling (e.g. pillows or jackets) which have been damaged. Loose filling could catch fire.

# IMPORTANT SAFETY INSTRUCTIONS

---

▶ Allow the dryer to complete each stage of the program selected, including the cooling down phase. This will ensure that the items being removed are not too hot to handle.

▶ Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in these Operating instructions. Repairs to appliances should only be performed by qualified personnel. Incorrectly repaired machines may pose a considerable risk to the user.

▶ Clean the lint filter before or after each load.

▶ Keep the area around the air intake (toe-kick) and adjacent surrounding areas free from lint, dust and dirt.

▶ The interior of the machine and exhaust duct should be cleaned periodically by qualified personnel.

▶ **Danger of suffocation or toxication** Adequate ventilation is essential, especially when another appliance which also uses the room air (e.g. gas, oil or coal fired heater, continuous flow or other water heater) is installed in the same or an adjacent room. Allow sufficient room ventilation by unlockable ventilation openings in the wall.

Check with your building inspector for a riskless use to avoid a low pressure of 4 Pa or more.

▶ The dryer must only run if the moist exhaust air is conducted outside by an installed exhaust duct vent. Provide sufficient venting in the room where the dryer is installed, e.g. by opening a window.

▶ This dryer must not be used without an exhaust hose, lint filter or a damaged lint filter.

## ▶ GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

▶ Do not install or use a dryer with visible damage.

▶ Proper installation is the responsibility of the installer.

▶ **WARNING** – Improper connection of the equipment grounding conductor can result in the risk of electric shock. Contact a qualified electrician if you are in doubt as to whether the appliance is properly grounded.

▶ Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

# IMPORTANT SAFETY INSTRUCTIONS

---


- ▶ Product failure due to improper installation is not covered under the Warranty.
- ▶ Gas dryers are not approved for mobile home installation.
- ▶ Check regularly on the exhaust parts (e.g. wall vent duct, louvered wall vent, bends, etc.) if enough air gets through. Lint can collect and block the air flow. If an exhaust hose is already installed, it should be checked before connected to the dryer.
- ▶ Faulty components must only be replaced with original Miele spare parts.
- ▶ If the power cord is damaged it must only be replaced by a Miele Service technician with a genuine Miele power cord.

## Using accessories

- ▶ Only use genuine Miele accessories. If unapproved parts are used, guarantee, performance and product liability claims may become void.

## SAVE THESE INSTRUCTIONS

# Control panel

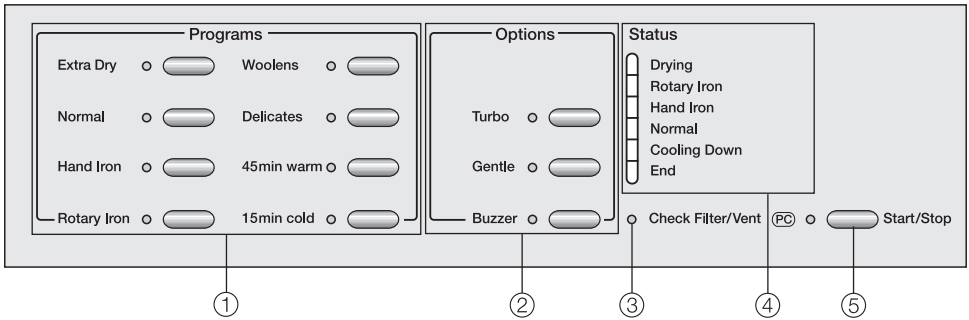

## ① Program buttons

To select a drying program

## ② Options buttons

Special features to enhance a drying program

## ③ Check Filter/Vent indicator

Indicates to clean the filter or vent

## ④ Status indicator

Shows the current cycle of the drying program

## ⑤ Start/Stop button

Starts and stops a program, or if pressed and held in cancels a program.

Flashes during program selection and lights continuously once the program starts.



Metal components of the dryer's gas burner have a protective coating which may give off a slight odor the first time the appliance is turned on.

The smell will dissipate after a short time and does not indicate a faulty connection or appliance defect.

# Before loading the dryer

---

Clean the drum interior before the first use.

## Fabric care labels

Before drying, check fabric care labels for special drying instructions.

- ☉ = Drying with a normal temperature
- ☺ = Drying with a low temperature
- ☒ = Do not dry in a tumble dryer

## Drying tips

- Observe the maximum loads, see the "Program Guide".


Overloading the dryer will result in poor drying results and wrinkling.

- Dry delicate fabrics with the fabric care symbol ☺ with the "Gentle" option.
- Do not dry dripping wet items in the dryer. Spin the laundry after the wash for at least 30 seconds.
- Open jackets to allow even drying.
- Wool and wool blends tend to felt and shrink. Dry these items in the "Woolens" program.

- The fine cotton fabric or down filled items tends to shrink.
- Dry pure linen items only if it is advised on the fabric care label. The surface of the fabric otherwise tends to become "rough".
- Knitted fabrics (e.g. T-Shirts and underwear) tend to shrink when washed and dried for the first time. Do not over-dry these fabrics.
- Permanent press and delicate fabrics tend to crease more the bigger the load size. For better drying results reduce the load size or select the "Delicates" program.
- Starched laundry can be dried in the tumble dryer. However, the amount of starch must be doubled during the wash.
- Wash new, colored items before drying for the first time and do not dry with light-colored items. These fabrics can "bleed" (also on plastic parts of the dryer). Colored lint could adhere to light-colored items.


## 1. Sort the laundry

- Sort the laundry by desired dryness, fabric, size and similar residual moisture after spinning to assure even drying results.

 Do not dry items that may melt or ignite in the dryer such as plastics or rubber. They could melt and damage the laundry.


- Check hems and seams, so that no filling can fall out.
- Duvet covers and pillowcases should be fastened in order to prevent small items from rolling inside of them.
- Close zippers, hooks and eyelets.
- Tie up fabric belts and apron ties.
- Remove or sew up loose bra under-wires.

## 2. Load the laundry

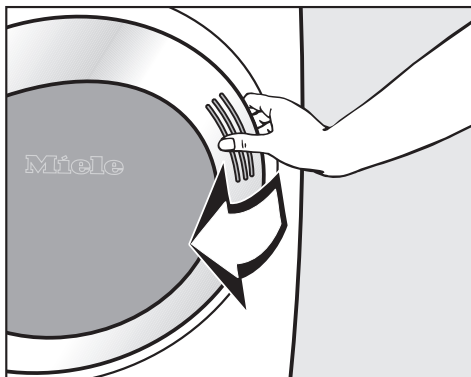

- Open the door.

### 2.1. Without the laundry basket

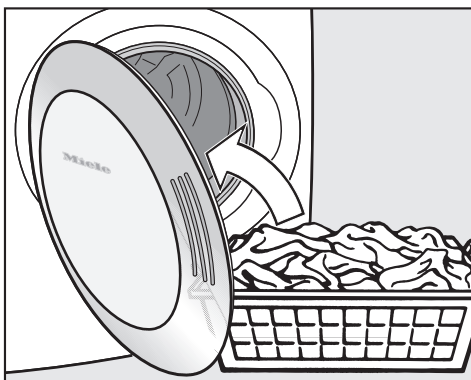

- Load the laundry loosely into the drum.


Do not overload the drum. Overloading strains the fabrics and leads to poor drying results.

# Use

## 2.2. With laundry basket


Reduce the load size to 1/2 of a normal load.

Use the laundry basket to dry or air e.g. sneakers.  
The laundry basket is designed in such a way that it does not turn with the drum and avoids strain on the drying item.

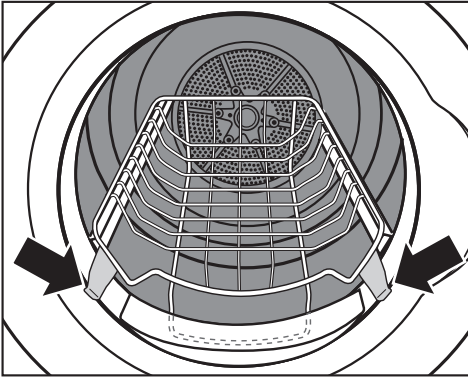


- Hang the laundry basket in the opening.


The laundry basket supports itself with the bottom in the dryer and is held in place with the front straps (arrows).

 Make sure **no sleeves, ties, belts, etc. stick out of the basket.** They might get entangled which could damage the laundry basket and the drum.


Drying with the laundry basket is only possible with the programs "45 min. warm" and "15 min. cold". All other programs are not suitable since the moisture sensor does not recognize a load and cancels the program.

### 2.3. Close the door

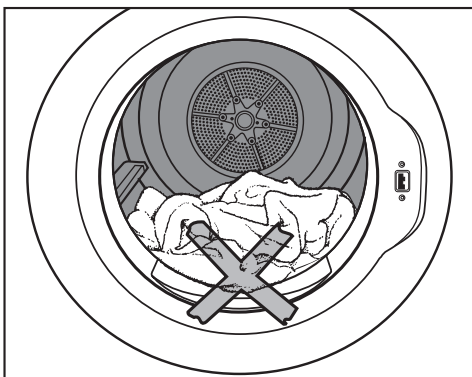


 To prevent fabric damage, check that laundry will not be caught in the closed door.

The lint filter must always be inserted in the door opening.

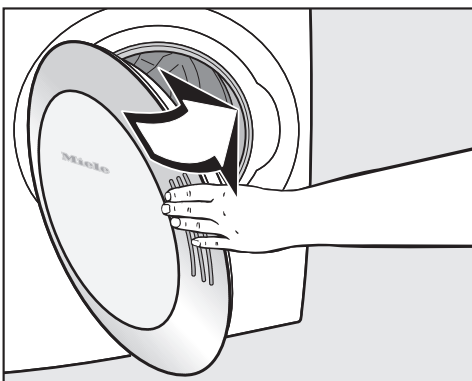


- Close the door with a firm swing and push it closed.

### 3. Select a program

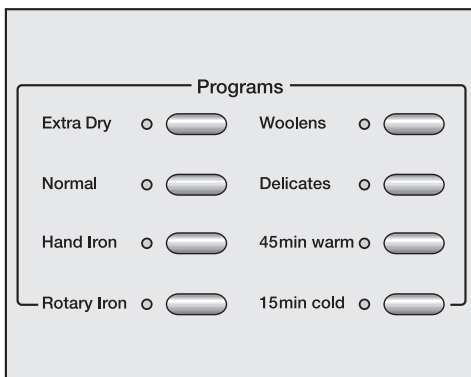

- Press the button of the desired program.
  - The respective program indicator lights.
  - "Options" indicators may be lit (Memory function).

## 4. Select an option

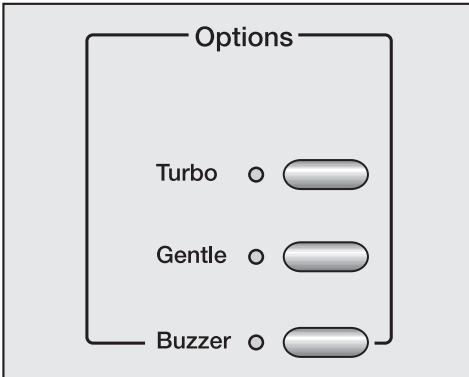

- Press any button.

The combination "Turbo/Gentle" is not possible.

### **Turbo**

Heat resistant items (with fabric care symbol ☺) will be dried at a high temperature.

- Laundry will be dried faster.

### **Gentle**

Items sensitive to high temperatures (with fabric care symbol ☹) will be dried at a low temperature.

- For delicate or permanent press fabrics, like acrylic.
- Extended program length

### **Buzzer**

An signal sounds at the end of a program in intervals for up to 1 hour.


The buzzer can be turned on or off after the program starts.

The constant tone to signal a fault is independent from the turned on or off buzzer.

By pressing the "Buzzer" button the buzzer volume can be adjusted between normal - loud - off.


### 5. Start the program

During the program selection the "Start/Stop" indicator flashes meaning that the program can be started.

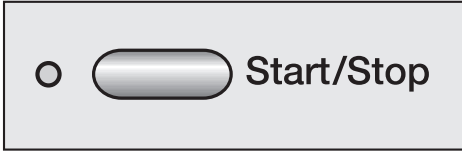

- Press the "Start/Stop" button.

The "Start/Stop" indicator lights.

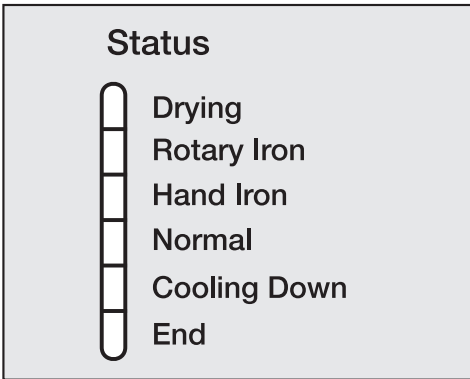

The "Status" indicator of the reached drying degree lights.

### Before the end of a program

The heating phase is followed by the cooling phase which cools the laundry ("Cooling Down" indicator). Only after the cooling phase has ended has the program finished.

The "Woolens" program does not have a cooling phase.

# Use

---

## 6. Program end - Unload the laundry

The "End" indicator will light at the end of the program and the buzzer will sound if it was selected.


The indicator of the reached drying degree lights (depending on program).

To avoid wrinkles, the drum turns in intervals for up to one hour, if the laundry is not immediately removed.


- Open the door.

If the door remains open, the light goes off after a few minutes (saving energy).

- Remove the laundry.

 Check the drum for any missed pieces of laundry. Any items left in the dryer may be damaged because of over drying.

- Clean the lint filter after each use (see "Dryer care").

 Take care when inserting the lint filter not to hurt your fingers.

- Insert the lint filter with the yellow handle edge towards the drum.
- Close the door.

## Changing a running program

A running program cannot be changed (protection from accidental changes).

To select a different program the running program must be canceled.

## To cancel a program

- Press the "Start/Stop" button.


The laundry will be cooled in case a certain drying time and temperature were reached.

If you press the "Start/Stop" button again during the cooling phase, the "End" indicator lights and the drum stops.

- Open and close the door.
- Select the new program.


## Adding/removing laundry during a drying program

- Open the door.

 Do not touch the rear of the drum while adding or removing items! Danger of burns.

- Add or remove items.
- Close the door.
- Press the "Start/Stop" button.



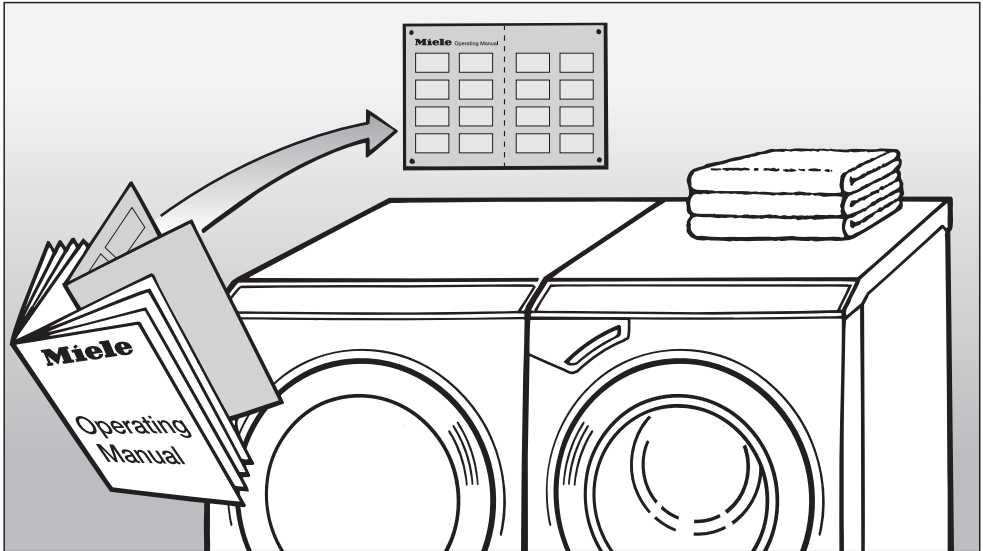

## Quick Guide

**Remove this guide for easy reference**

To prevent accidents  
and appliance damage  
read these instructions


**before**  
installation or use.

# Quick Guide

## 1. Prepare and sort the laundry


- Check for damages and foreign objects.
- Close zippers, hooks and eyelets.
- Tie up belts and apron ties.

## 2. Load the laundry

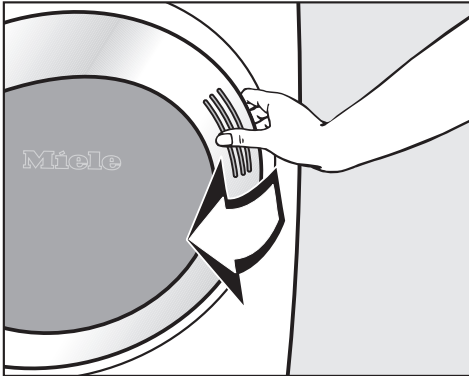

- Open the door.

## Without the laundry basket

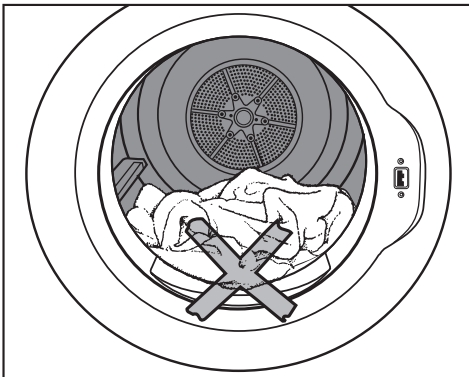


- Load the laundry loosely in the drum.

 To prevent fabric damage, check that laundry will not be caught in the closed door.

## With the laundry basket


Reduce the load size to  $\frac{1}{2}$  of a normal load.

Drying with the laundry basket is only possible in the programs "45 min warm" and "15 min cold".

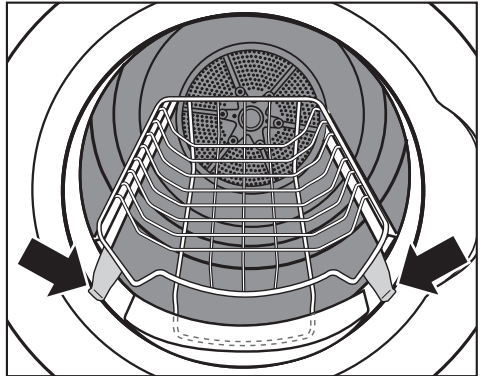


- Hang the laundry basket in the opening.
- Close the door.

## 3. Select a program

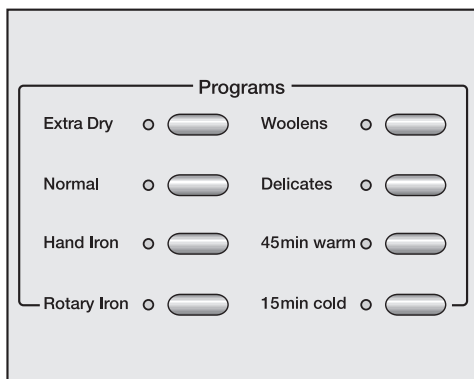

- Press the desired program button.


## 4. Select an option

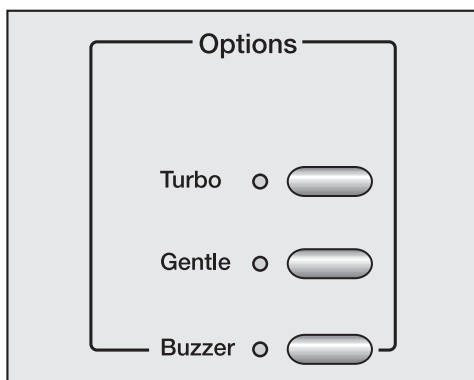

- Select an option button, if desired.

The combination "Turbo/Gentle" is not possible.


## 5. Starting a program

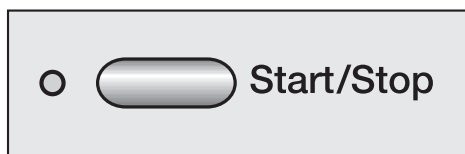


- Press the "Start/Stop" button.

## 6. Program end - Unload the laundry

The "End" indicator lights.

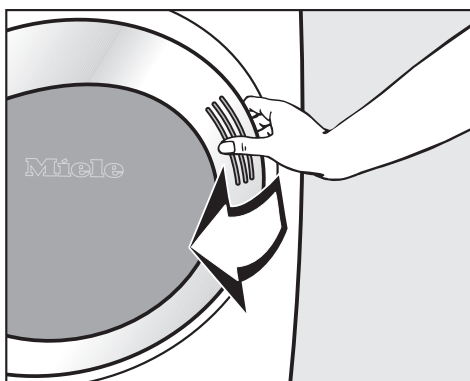

- Open the door.

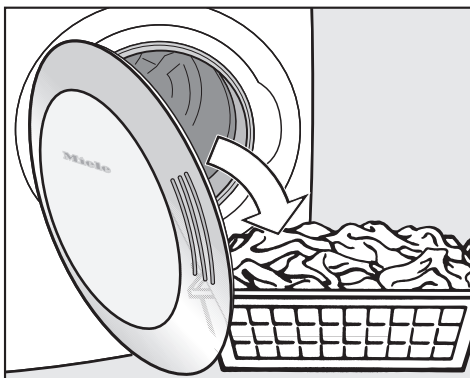

- Remove the laundry/laundry basket.
- Clean the lint filter.
- Close the door.

# Quick Guide

---

## Short program guide

### Extra Dry

Multi-layer, mixed loads of sturdy cottons, e.g. towels, bath robes.

The "Extra dry" program should not be selected for jersey materials. Items may shrink.

**Options:** Turbo or Gentle, Buzzer

### Normal

Single and multilayered cotton and linen laundry e.g. terry towels, beach towels, bath robes, T-Shirts, underwear, cottons, bed linens, baby clothing.

**Options:** Turbo or Gentle, Buzzer

### Hand iron / Rotary iron

Cotton or linen fabrics to be left damp for easier ironing. e.g. table cloths, bed linens, starched laundry.

Roll up items until they are ironed to keep them damp.

**Options:** Turbo, Buzzer

### Woolens

Woolen items which allow machine drying.

**Load size:** Reduce the load size to  $\frac{1}{3}$  of a normal load.

**Options:** Buzzer, Gentle (cannot be deselected)

### Delicates

Permanent Press items made of cotton, mixed fabrics or synthetics e.g. Sweaters, dresses, pants, table cloths.

**Load size:** Reduce the load size

- to  $\frac{1}{2}$  of a normal load without any option selected.
- to  $\frac{1}{2}$  of a normal load with the "Turbo" option selected.
- to  $\frac{1}{3}$  of a normal load with the "Gentle" option selected.

**Options:** Turbo or Gentle, Buzzer

### 45 min warm

Final drying of multi-layer fabrics, with unique drying characteristics e.g. jackets, pillows and voluminous textiles.

Drying of single items: beach towels, bathing suits, etc.

Airing articles

**Load size:** When using the laundry basket reduce the load size to  $\frac{1}{2}$  of a normal load.

**Options:** Turbo or Gentle, Buzzer

### 15 min cold

Airing or fluffing articles

**Load size:** When using the laundry basket reduce the load size to  $\frac{1}{2}$  of a normal load.

**Options:** Buzzer


## Program guide

<b>Extra Dry</b>	
Items	Multi-layered, mixed loads of sturdy cottons, e.g. towels, bath robes.
Note	The "Extra dry" program should not be selected for jersey materials. Items may shrink.
Options	Turbo or Gentle, Buzzer
<b>Normal</b>	
Items	Single and multilayered cotton and linen laundry e.g. terry towels, beach towels, bath robes, T-Shirts, underwear, cotton bed linens, baby clothing, etc.
Options	Turbo or Gentle, Buzzer
<b>Hand iron</b>	
Items	Cotton or linen fabrics to be left damp for easier ironing e.g. table cloths, bed linens, starched laundry, etc.
Options	Turbo or Gentle, Buzzer
<b>Rotary iron</b>	
Items	Cotton or linen fabrics to be left damp for easier ironing. e.g. table cloths, bed linens, starched laundry, etc.
Note	Roll up items until they are machine ironed, to keep them damp.
Options	Turbo or Gentle, Buzzer

# Program guide

Woolens	
Items	Woolen fabrics
Note	<ul style="list-style-type: none"> <li>– Reduce the load size to 1/3 of a normal load.</li> <li>– Woolen items will be fluffed for a short time, but not completely dried.</li> <li>– Remove the items immediately after the program end and allow them to air dry.</li> </ul>
Options	Buzzer, Gentle (cannot be deselected)
Delicates	
Items	Permanent Press items of cotton, mixed fabrics or synthetics e.g. sweaters, dresses, pants, table cloths, etc.
Note	Reduce the load size: <ul style="list-style-type: none"> <li>– to ½ of a normal load without any option selected.</li> <li>– to ½ of a normal load with the "Turbo" option selected.</li> <li>– to 1/3 of a normal load with the "Gentle" option selected.</li> </ul>
Options	Turbo or Gentle, Buzzer
45 min warm	
Items	<ul style="list-style-type: none"> <li>– Final drying of multi-layer fabrics with unique drying characteristics e.g. jackets, pillows and voluminous textiles.</li> <li>– Drying of single items: beach towels, bathing suits</li> </ul>
Tip	Use this program to freshen cotton clothing with warm air. To freshen the items even more, dampen the items before drying or use a dryer sheet.
Note	The laundry basket can be used with this program. <b>When using the laundry basket reduce the load size to ½ of a normal load.</b>
Options	Turbo or Gentle, Buzzer
15 min cold	
Items	To air items
Note	The laundry basket can be used with this program. <b>When using the laundry basket reduce the load size to ½ of a normal load.</b>
Options	Buzzer

## Frequently asked questions

 Repairs to electrical and gas appliances must only be carried out by a qualified and trained person in accordance with local and national safety regulations. Repairs and other work by unqualified persons could be dangerous.

The following section will help you avoid placing a service call by identifying issues you may encounter while operating the machine:

### General problems

#### A drying program cannot be started.

Possible fault	Solution
The "Start/Stop" button was not pressed.	Make sure the dryer is on. Press the "Start/Stop" button to begin the drying program.
The circuit breaker has tripped or the dryer is unplugged.	Make sure the dryer is plugged in or reset the circuit breaker.
The door is not closed.	Close the door properly.

#### The dryer turns off automatically.

To ensure proper performance, the dryer is equipped with a safety feature to prevent it from operating when there is an insufficient electrical supply. The machine will automatically shut itself down to avoid risks due to decreased performance and airflow levels. Once a sufficient electrical supply is restored to the machine it will automatically reactivate and can be used as normal.

#### Lint has built-up on laundry.

Lint is the result of friction caused by items being worn and washed. Machine drying causes minimal strain of the laundry and has no significant effect on the durability. Dryers have no detrimental effects on the lifetime of fabrics.	The lint is collected in the lint filters and can be easily cleaned (see "Dryer Care").
---	---

#### The items dried have static cling.

Add fabric softener to laundry when washing or use dryer sheets.

## Frequently asked questions

<b>The laundry is not dry enough.</b>	
<b>Possible fault</b>	<b>Solution</b>
The load contained too many dissimilar items (size and fabrics.)	<ul style="list-style-type: none"> <li>– Continue drying using the "Warm air" program.</li> <li>– Select a suitable program.</li> </ul>
<b>The laundry is still wet. The program runs too long.</b>	
The air flow is insufficient.	Check the lint filter, air intake and vent for obstructions.
<b>The drum light does not come on.</b>	
The light turns off automatically (energy saving).	Close and open the door, the light should come on.
The bulb may be bad or burned out.	Change the light bulb. See "Dryer Care".
<b>The program runs too long or stops.</b>	
<b>Important: To fix the following problems, open and close the dryer door.</b>	
The air supply is insufficient.	Open a window or door to increase air flow.
The lint filter is clogged with lint.	Clean the lint filter.
The exhaust hose or the connection is clogged with lint.	<ul style="list-style-type: none"> <li>– Check the exhaust parts (e.g. wall vent duct, louvered wall vent, bends, etc.) regularly for air permeability.</li> <li>– Remove the lint.</li> </ul>
The laundry was not spun sufficiently in the washer.	Spin laundry thoroughly before drying.
The dryer is over loaded.	Regard the maximum load size per program.
Metallic zippers prevent a correct measurement of the laundry's residual moisture.	<ul style="list-style-type: none"> <li>– Open the zippers of the laundry before drying.</li> </ul> <p>If the problem persists, dry items with long zippers using the "45 min. warm" program, if necessary use the laundry basket.</p>



## Frequently asked questions

### Fault indicators

#### The "Check Filter/Vent" indicator lights.

Possible fault	Solution
The dryer does not work at its optimum or not efficiently. The lint filter might be clogged with lint or detergent residues.	<ul style="list-style-type: none"> <li>– Usually cleaning the lint filter fixes the problem. If the problem persists, check all possibilities as described under "The program runs too long or stops".</li> <li>– Open and close the door to turn off the indicator.</li> </ul>
The exhaust duct may be too long. This is not a fault.	With a long exhaust duct, program times and energy consumption increase. See Installation Instructions.

#### A program is canceled.

#### The "Check Filter/Vent" indicator flashes.

The fault cannot be detected immediately.	<ul style="list-style-type: none"> <li>– Check the possible faults as described above.</li> <li>– Open and close the door to turn off the indicator.</li> <li>– Start a program.</li> </ul> <p>If the problem persists contact Technical Service.</p>
---	---

#### The "Drying" indicator flashes.

#### The "Check Filter/Vent" and "Cooling down" indicators are lit.

#### The drum rotates for approx. 2 minutes.

This is a technical fault.	Contact Technical Service.
----------------------------	----------------------------

#### The program is canceled.

#### The "Drying", "Rotary Iron", "Hand Iron", and "Normal" indicators flash.

#### A new program start is not possible and the indicators will continue to flash.

This is a technical fault.	Contact Technical Service.
----------------------------	----------------------------

#### The dryer is making a thumping or grinding sound.

The sound is caused by the high airflow rate in the ducting of the dryer. This is not a fault.	<ul style="list-style-type: none"> <li>– To determine if the noise is due to airflow, temporarily remove the exhaust duct from the machine. If the noise lessens, the ductwork is the cause of the noise. Rigid or flexible aluminum ducting is the best option for reducing the noise.</li> </ul> <p>If the problem persists please contact Technical Service.</p>
--	---

## Frequently asked questions

<p><b>The program is canceled.</b>  <b>The "End" indicator lights.</b>  <b>The buzzer sounds.</b></p>	
<p><b>Possible fault</b></p>	<p><b>Solution</b></p>
<p>This is not a fault.          The electronic has detected that there is no laundry in the drum and cancels the program.          Single items or already dried laundry can also cause a program stop.</p>	<ul style="list-style-type: none"> <li>– The indicator goes out by opening and closing the door.</li> <li>– Single items should be dried with the "45 min. warm" program, if necessary use the laundry basket.</li> </ul>
<p><b>The program is canceled.</b>  <b>The "Rotary iron" or "Hand iron" indicator flashes.</b>  <b>The buzzer sounds.</b></p>	
<p>The fault cannot be detected immediately.</p>	<ul style="list-style-type: none"> <li>– The indicator goes out by opening and closing the door.</li> <li>– Start a program.</li> </ul> <p>If the problem persists call Technical Service.</p>
<p><b>The laundry is pressed on the door and below the door.</b></p>	
<p>The restriction insert in the vent opening at the rear of the dryer was removed.</p>	<ul style="list-style-type: none"> <li>– Reinsert the restriction insert in the vent opening. Removing it may result in poor drying results, damage to the laundry and higher CO<sub>2</sub> emissions.</li> </ul>

### Repairs

In the event of a fault which you cannot fix yourself, please contact the service number on the back of this manual.

When contacting Technical Service, please quote the model and serial number of your appliance. These can be found on the data plate.

### Optional accessories

Optional accessories can be obtained by contacting Miele.

### MieleCare

(USA only)

**MieleCare**, our Extended Service Contract program; gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership.


**MieleCare** is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability and longevity of your Miele appliance.

Please note that unless expressly approved in writing by the Miele Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home.

To learn more about **MieleCare** Extended Service Contracts, please contact your appliance dealer or visit us online at:

<http://mieleusa.com/mielecare>



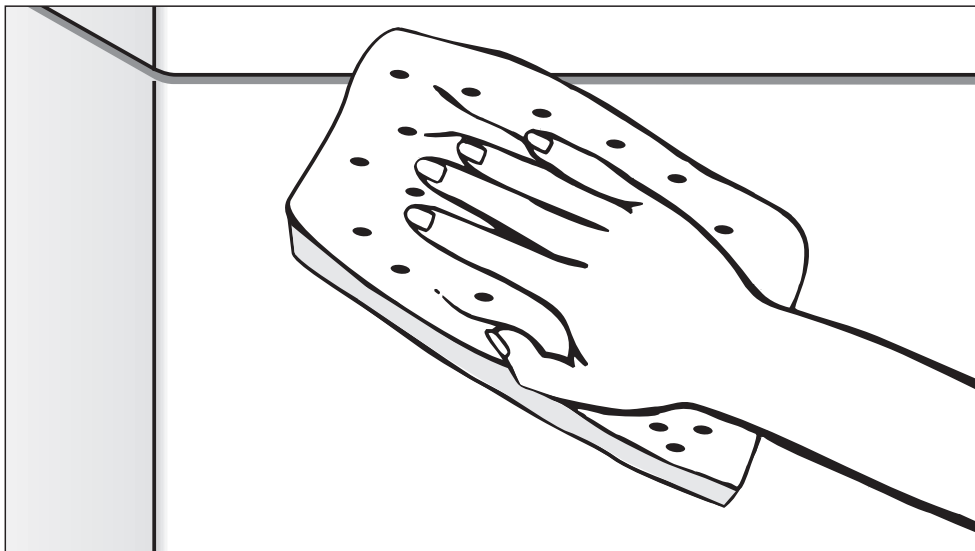

## User Maintenance Instructions

To prevent accidents  
and machine damage,  
read these instructions


**before**  
installation or use.

# Dryer Care


## Cleaning the lint filter

The lint is collected by the lint filter in the door opening. The lint filter must be cleaned after **every** program.


- Clean the lint filter whenever the "Check Filter/Vent" indicator comes on.

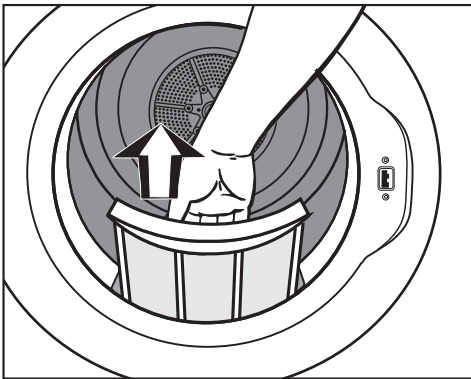


- Pull out the lint filter.

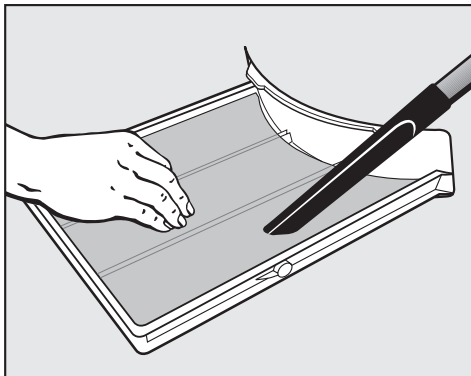

- Wipe the lint off the filter with your hand (do not use any sharp objects!) or use a vacuum cleaner with the nozzle attachment (supplied with the vacuum cleaner).

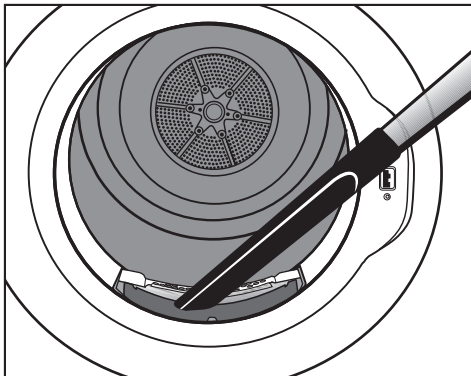

- Clean visible lint from the dryer interior.


 Take care when inserting the lint filter not to hurt your fingers.

- Insert the lint filter with the yellow handle edge facing the drum.

## Rinsing the lint filter

- The lint filter can be rinsed with hot water if necessary.
- The filter must be dried thoroughly before being returned to the dryer door.

## Cleaning the exterior and the control panel

 To reduce the risk of electric shock, disconnect the dryer from the power supply by shutting off the power main, tripping the circuit breaker or unplugging the power cord before performing maintenance.

Never use abrasive cleaners, scouring pads, steel wool or caustic (oven) cleaners on the dryer. They will damage the surface.

- The exterior, door, control panel and laundry basket can be cleaned with warm water and liquid dish soap applied with a soft sponge.
- Wipe dry using a soft cloth.
- The door gasket can be wiped with a damp cloth.


# Dryer Care

## Changing the light bulb

To reduce the risk of electric shock, disconnect the appliance from the power supply by unplugging or tripping the circuit breaker.

- Open the door.

The lighting is in the drum opening in the upper right-hand corner.

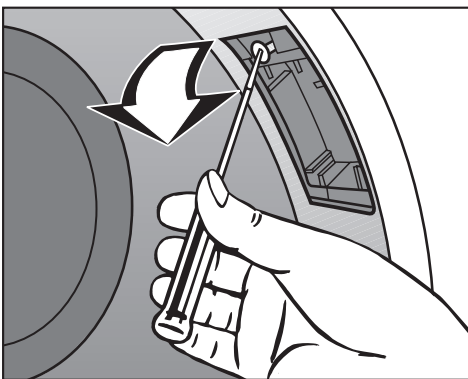

- Remove the screw.
- Flip the cover down.

- Replace the light bulb with a temperature proof bulb available from Miele.

The light bulb must not exceed the maximum wattage quoted on the data plate and the light cover.

- Flip the cover up.
- Tighten the screw.

⚠ Make sure the bulb cover is securely closed to prevent a short circuit or penetrating moisture. Penetrating moisture can cause a short circuit.



### **Disposal of the packing materials**

The packing materials protect the appliance during shipping. They have been designed to be biodegradable and recyclable.

To prevent suffocation, ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children.

### **Disposal of an appliance**

Old appliances may contain materials that can be recycled. Please contact your local recycling authority about the possibility of recycling these materials.

Ensure that a discarded dryer presents no danger to children. When being stored for disposal remove the door to the drying compartment.





**Please have the model and serial number  
of your appliance available before  
contacting Technical Service.**

---



## **U.S.A. Miele, Inc.**

### **National Headquarters**

9 Independence Way  
Princeton, NJ 08540  
Phone: 800-843-7231  
609-419-9898  
Fax: 609-419-4298  
[www.mieleusa.com](http://www.mieleusa.com)

### **Technical Service & Support Nationwide**

Phone: 800-999-1360  
Fax: 888-586-8056

[TechnicalService@mieleusa.com](mailto:TechnicalService@mieleusa.com)

## **Canada Miele Limited**

### **Headquarters and Showroom**

161 Four Valley Drive  
Vaughan, ON L4K 4V8  
Phone: 800-643-5381  
905-660-9936  
Fax: 905-532-2290  
[www.miele.ca](http://www.miele.ca)  
[professional@miele.ca](mailto:professional@miele.ca)  
(commercial enquiries)

### **MieleCare National Service**

Phone: 800-565-6435  
905-532-2272  
Fax: 905-532-2292  
[customercare@miele.ca](mailto:customercare@miele.ca)  
(general and technical enquiries)

## **Germany**

Miele & Cie. KG  
Carl-Miele-Straße 29  
33332 Gütersloh

---

Alteration rights reserved / 4310

M.-Nr. 07 759 020 / 02



INFORMATION IS SUBJECT TO CHANGE. PLEASE REFER TO OUR WEBSITE TO OBTAIN THE MOST CURRENT PRODUCT SPECIFICATIONS, TECHNICAL & WARRANTY INFORMATION.