




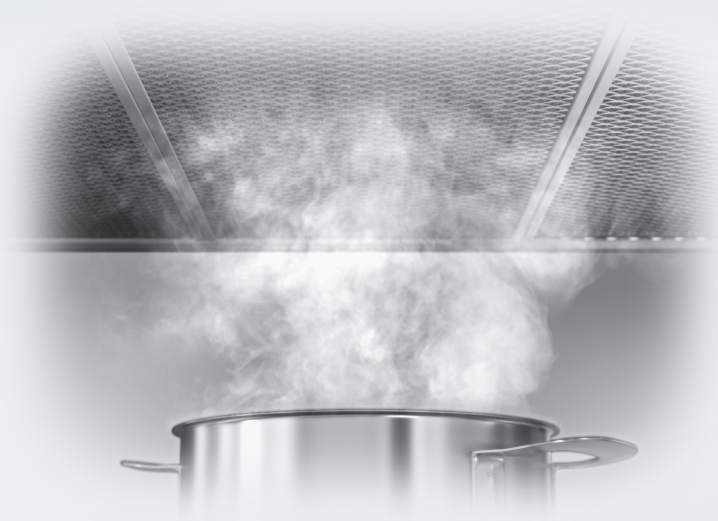

Operating and Installation Instructions Ventilation System



To prevent accidents and machine damage, read these instructions **before** installation or use.

IMPORTANT SAFETY INSTRUCTIONS	4
Guide to the ventilation system	8
Description of function	10
Operation	11
Turning the fan on ①	11
Selecting the fan power level	11
Delayed shut down "5  15"	12
Turning the fan off ①	12
Overhead lighting 	12
Operating hours timer  	13
Sensor button tone	15
Automatic safety shut-off	15
Cleaning and care	16
Grease filters	17
Resetting the grease filter timer	18
Installing and replacing the OdorFree charcoal filters	19
Resetting the charcoal filter timer	20
Changing the light bulbs	21
After Sales Service	22
Installation instructions	23
Caring for the environment	24
Appliance dimensions	25
Structural support	27
Installation	28
Installation accessories	28
Installation instructions	28
Electrical connection	29
Technical Data	30

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

Keep these instructions in a safe place and pass them on to any future user.

Read these instructions carefully before installing or using the Ventilation System.

- ▶ This appliance is intended for residential use only. Use the appliance only for its intended purpose.
- ▶ This appliance complies with current safety requirements. Improper use of the appliance can lead to personal injury and material damage.

⚠ CAUTION For General Ventilating Use Only. Do Not Use To Exhaust Hazardous Or Explosive Materials And Vapors.

- ▶ This appliance is designed to vent cooking smoke and odors only.
- ▶ This appliance is suitable for installation above gas or electric cooking surfaces.
- ▶ This appliance is not intended for outdoor use.
- ▶ This appliance must not be used in a non-stationary location (e.g. on a ship).

⚠ WARNING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- ▶ a) Use this appliance only in the manner intended by the manufacturer. If you have questions, contact Miele.
- ▶ b) Before servicing or cleaning the appliance, switch power off at the service panel and lock the service disconnecting means to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
- ▶ c) Be certain your appliance is properly installed and grounded by a qualified technician. To guarantee the electrical safety of this appliance, continuity must exist between the appliance and an effective grounding system. It is imperative that this basic safety requirement be met. If there is any doubt, have the electrical system of the house checked by a qualified electrician.

IMPORTANT SAFETY INSTRUCTIONS

▶ d) Before connecting the appliance to the power supply make sure that the voltage and frequency listed on the data plate correspond with the household electrical supply. This data must correspond to prevent appliance damage. If in doubt consult a qualified electrician.

▶ e) Installation work and repairs should only be performed by a qualified technician in accordance with all applicable codes and standards. Repairs and other work by unqualified persons could be dangerous.

▶ f) Only open the casing as described in the enclosed "Installation diagram" and in the "Cleaning and care" section of this manual. Under no circumstances should any other parts of the casing be opened. Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operation faults.

▶ g) Before discarding an old appliance, disconnect it from the power supply and remove the power cord to prevent hazards.

Use

WARNING **TO REDUCE THE RISK OF A COOKTOP GREASE FIRE:**

▶ a) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers may ignite. Heat oils slowly on low or medium settings.

▶ b) Always turn the hood on when cooking at a high heat.

▶ c) Clean the ventilation hood frequently. Grease should not be allowed to accumulate on the fan or filter.

▶ d) Use the proper pan size. Always use cookware appropriate for the size of the cooking area.

▶ e) Do not flambé or grill with an open flame beneath the hood. Flames could be drawn up into the hood by the suction and the grease filters may catch fire.

IMPORTANT SAFETY INSTRUCTIONS

WARNING **TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A COOKTOP GREASE FIRE, OBSERVE THE FOLLOWING*:**

▶ a) **SMOTHER FLAMES** with a close fitting lid, cookie sheet, or metal tray then turn off the burner.

BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately, **EVACUATE AND CALL THE FIRE DEPARTMENT.**

▶ b) **NEVER PICK UP A FLAMING PAN** - You may be burned.

▶ c) **DO NOT USE WATER**, including wet dishcloths or towels - a violent steam explosion will result.

▶ d) Use a fire extinguisher **ONLY** if:

- 1) You have a class ABC extinguisher, and you know how to operate it.
- 2) The fire is small and contained in the area where it started.
- 3) The fire department is being called.
- 4) You can fight the fire with your back to an exit.

* Based on "Kitchen Firesafety Tips" published by NAFTA

▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

▶ Children should be supervised to ensure that they do not play with the appliance.

CAUTION **Accessible parts may become hot when used with cooking appliances.**

▶ Always turn on the hood when using the cooktop to prevent damage from condensation.

▶ Never operate gas burners without cookware. Turn the burner off when not in use. Adjust the burner so that the flames do not extend beneath the cookware. Do not overheat the cookware, e.g. when using a wok. The hood can be damaged due to excessive heat from the burners and the cookware.

▶ Do not use the hood without the grease filters in place.

▶ Do not use a steam cleaner to clean the hood. Steam could penetrate electrical components and cause a short circuit.

IMPORTANT SAFETY INSTRUCTIONS

Installation

WARNING **TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:**

- ▶ a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- ▶ b) Sufficient air is needed for combustion and exhausting of gases through the flue (chimney of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA) and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- ▶ c) When cutting or drilling into the wall or ceiling, do not damage electrical wiring and other hidden utilities.
- ▶ d) Ducted hoods must always be vented to the outdoors.
- ▶ e) Do not use this hood with any solid-state speed control device.
- ▶ f) Do not use an extension cord to connect the appliance to electricity. Extension cords do not guarantee the required safety of the appliance, (e.g. danger of overheating).

▶ g) Do not install this hood over cooktops that burn solid fuel.

▶ h) Provided a larger distance is not given by the manufacturer of the cooktop, follow the minimum safety distances between a cooktop and the bottom of the hood given in the "Appliance dimensions" section of this manual.

If local building codes require a greater safety distance, follow their requirement.

If there is more than one appliance beneath the hood and they have different minimum safety distances always select the greater distance.




▶ i) Never connect an exhaust hood to an active chimney, dryer vent, vent flue, or room ventilating ductwork.

▶ j) Seek professional advice before connecting an exhaust hood vent to an existing, inactive chimney or vent flue.

▶ k) Any fittings, sealant, or materials used to install the ductwork must be made of approved non-flammable materials.

WARNING **TO REDUCE THE RISK OF FIRE USE ONLY METAL DUCTWORK.**

Guide to the ventilation system

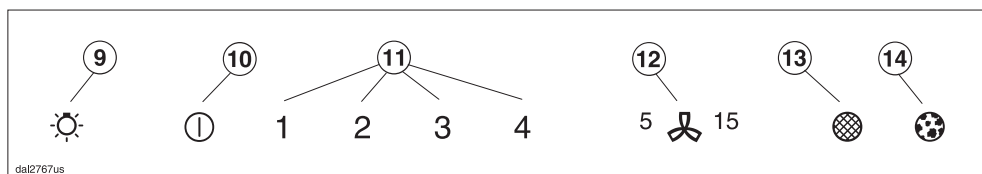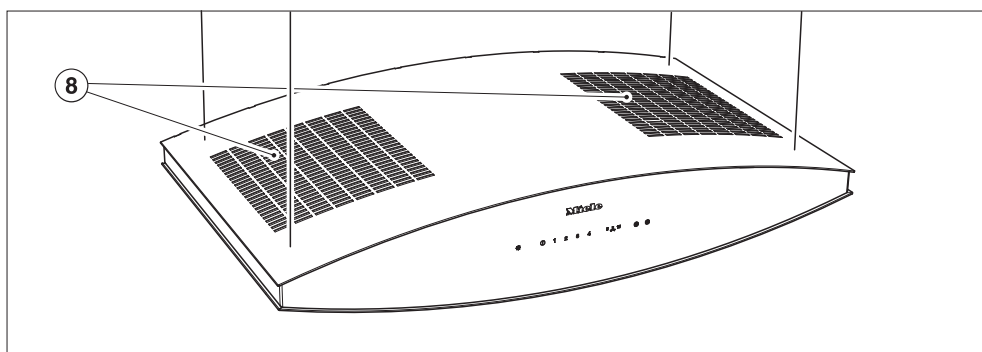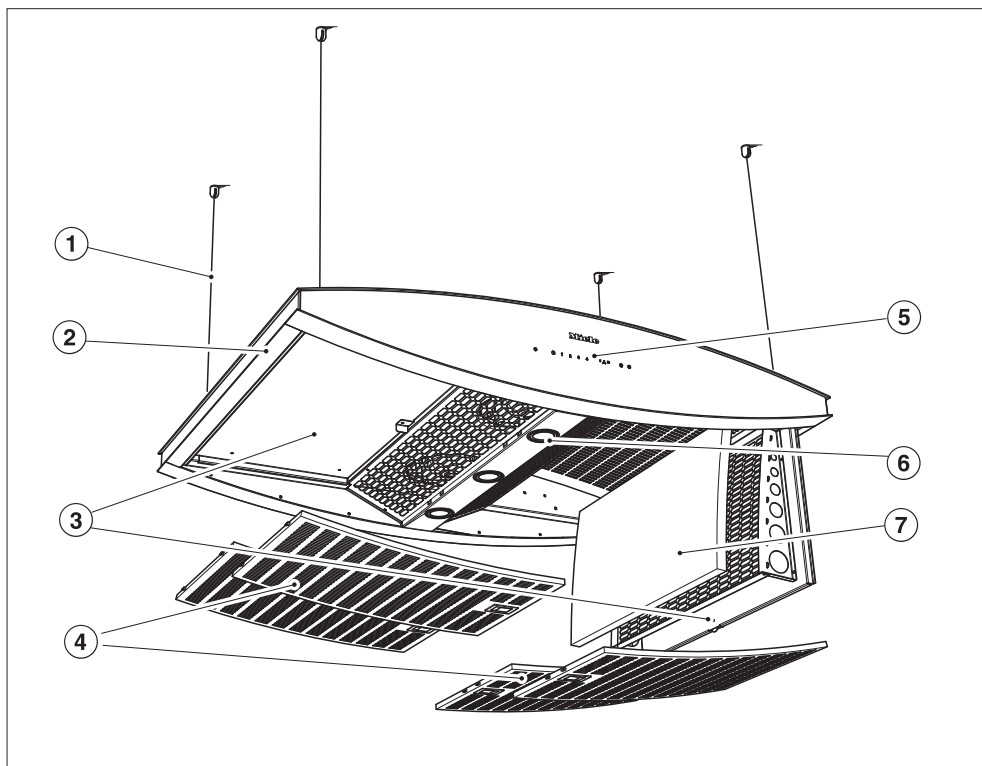

Guide to the ventilation system

① Suspension cables

② Canopy

③ OdorFree charcoal filter holders

④ Grease filters

⑤ Control panel

The symbols serve as sensor buttons. You select the functions by pressing these buttons.

You will hear a brief beep as confirmation.

⑥ Overhead lighting

⑦ OdorFree charcoal filters (2)

⑧ Recirculating vents (recirculation mode only)

Sensor buttons

⑨ Overhead lighting

Use this button to turn the lighting On/Off and also adjust the brightness.

⑩ Fan On/Off

⑪ Fan power selection

⑫ Delayed shut down

Use this button to activate the delayed shut down feature. When activated, the fan turns off automatically after either 5 or 15 minutes, as selected.

⑬ Grease filter

This button will light up when the grease filters need to be cleaned.

Press this button after cleaning the grease filters to reset the operating hours timer (see "Cleaning and care").

You can also check the operating hours and change the timer setting.

⑭ OdorFree charcoal filter button

The button lights up when the charcoal filters need to be changed. To do this, the operating hours timer needs to be activated after installation of the ventilation system.

Use this button to reset the operating hours timer after changing the charcoal filters (see "Cleaning and care").

You can also check the operating hours and change the timer setting.

Description of function

The ventilation system works with air recirculation:

The air drawn in is cleaned by the grease filters and then by 2 OdorFree charcoal filters. The cleaned air is then recirculated back into the kitchen through vents at the top of the hood.

Before using the ventilation system for the first time, make sure that the charcoal filters are in place; see "Cleaning and care".

Turning the fan on ①

- Press the On/Off sensor button ①.

The fan turns on at power level **2**.
The On/Off button ① and the **2** button light up.

Selecting the fan power level

Depending on the intensity of the cooking vapors, levels **1** through **3** are usually sufficient for normal cooking.




- Use the buttons **1**, **2** or **3** to select the desired power level.

Intensive setting


- To remove intensive vapors or odors, for example when frying or cooking for with a strong aroma, select intensive power level **4**.

Automatically switching back from the intensive setting

The intensive level can be programmed to automatically switch back to level **3** after 10 minutes.

- Turn the fan and the overhead lighting off.
- Press and hold the delayed shut down button  for approx. 10 seconds, the **1** sensor button lights up.
- Press the following buttons one after another:
 - the overhead lighting sensor button ;
 - the **1** sensor button, and
 - the overhead lighting sensor button  again.

If the sensor buttons **1** and **4** flash, automatic switch-back is not activated.

- Press the **4** button to activate automatic switch-back. The sensor buttons **1** and **4** will light continuously.
Press the **1** sensor button to deactivate.
- Confirm your selection by pressing the delayed shut down sensor .

If the setting is not saved within 4 minutes, the old setting is retained.






If the procedure is not confirmed within 4 minutes of programming the hood will automatically default to the previous setting.

Operation


Delayed shut down "5 15"

It is best to let the fan run for a few minutes after cooking is completed to neutralize any odors in the air.

The delayed shut down feature can be selected to turn the fan off automatically after 5 or 15 minutes.

- After cooking press the delayed shut down button  while the fan is still running:
 - Press once: the fan automatically switches off after 5 minutes (5  will light up).
 - Press twice: the fan automatically switches off after 15 minutes ( 15 will light up).
- If you press the delayed shut down button  again, the fan will not turn off automatically (5  15 goes out).


Turning the fan off

- Press the On/Off sensor button  to turn the fan off.

Overhead lighting

The overhead lighting and the fan can be turned on and off separately.



Turning the overhead lighting on


- Press the light sensor button  briefly.

The light comes on at maximum brightness.


Dimming the overhead lighting

The brightness of the lighting can be adjusted.

- When the light is on, press the light button . The light will dim until you release the button.
- If the  button is pressed and held down again, the light will brighten until the button is released.

If the  button is pressed continuously, the light cycles between light and dark.

Turning the overhead lighting off


- Briefly press the light sensor button  to turn the light off.

Operating hours timer

A timer records how many hours the hood has been in operation.

The timer signals when the grease filters or the charcoal filters need to be cleaned or replaced.

Grease filter timer

After 30 hours of operation or the preselected operating time, the grease filter sensor button  will light up.




This means it is time to clean the grease filters. After cleaning, the timer needs to be reset (see "Cleaning and care").


Reprogramming the grease filter timer

The grease filter timer is preset to 30 hours. This time can be lengthened or shortened to 20, 30, 40, or 50 hours depending on your cooking habits.

- A time of 20 hours should be programmed in kitchens with frequent frying.
- A time of 20 hours should also be programmed if the kitchen is only used occasionally. This will help to prevent grease which has accumulated over a long period of time from hardening on the filters making cleaning more difficult.
- If you typically use very little fat for cooking, an interval of 40 or 50 hours can be selected.

To change the operating time:

- Press the On/Off sensor button  to turn the fan off.
- Press the delayed shut down sensor button  and the grease filter sensor button  simultaneously.

The grease filter sensor  and one of the **1** to **4** sensors will flash.


The sensors **1** to **4** show the time set:

Sensor **1** = 20 hours

Sensor **2** = 30 hours

Sensor **3** = 40 hours

Sensor **4** = 50 hours.



- To select a shorter time, press sensor button **1**, to select a longer time, press sensor button **4**. Hold the button until the desired time is set.
- Confirm your selection by pressing the grease filter sensor button .

All the sensors go out.

If the procedure is not confirmed within 4 minutes of programming the hood will automatically default to the previous setting.

Checking the grease filter timer

To check the percentage of time already used:


- Press the On/Off sensor button  to turn the fan on.
- Press and hold the grease filter sensor button .

Operation

One or more of sensors **1** to **4** will flash.

The number of flashing sensors indicates the percentage of operating time that has already been used.

Sensor 1	=	25 %
Sensors 1 and 2	=	50 %
Sensors 1 to 3	=	75 %
Sensors 1 to 4	=	100 %


- When you release the grease filter sensor button , the current fan setting is displayed.

The number of operating hours remains stored when the ventilation system is turned off or if there is a power failure.

OdorFree charcoal filter timer

By **factory default**, the charcoal filter timer is **deactivated**.




Set the timer to suit your cooking habits.


The charcoal filter sensor button  will light up after the hood has operated for the number of hours set.

- The charcoal filters must be replaced with new filters.

After cleaning, the timer will need to be reset (see "Cleaning and care").

Setting the charcoal filter timer

- Press the On/Off sensor button  to turn the fan off.
- Press the delayed shut down sensor button  and the charcoal filter sensor button  simultaneously.

The charcoal filter sensor  and one of the power level sensors **1** to **4** flash.

The sensors **1** to **4** show the time set:


Sensor **1** = 120 hours

Sensor **2** = 180 hours

Sensor **3** = 240 hours

Sensor **4** = deactivated.

- To select a shorter time, press the **1** sensor button, to select a longer time, press the **4** sensor button, until the desired time has been set.



- Confirm the setting by pressing the charcoal filter sensor button .

All the sensors go out.

If the procedure is not confirmed within 4 minutes of programming the hood will automatically default to the previous setting.

Checking the charcoal filter timer

To check the percentage of time already used:

- Press the On/Off sensor button  to turn the fan on.
- Press and hold down the charcoal filter button .

One or more of the sensors **1** to **4** will flash.

The number of flashing sensors indicates the percentage of operating time already been used.



Sensor 1	=	25 %
Sensors 1 and 2	=	50 %
Sensors 1 to 3	=	75 %
Sensors 1 to 4	=	100 %

The number of operating hours used remains stored when the ventilation system is turned off or if there is a power failure.

Sensor button tone

Whenever you press a sensor button, you will hear a brief tone for confirmation.

You can deactivate this audible tone.


- Press the On/Off sensor button  to turn the fan off.
- Press the **4** sensor button and the grease filter sensor button  simultaneously for 5 seconds, until you hear a tone. The audible tone is now deactivated for all functions.
- To reactivate the tone, repeat the process.

If the ventilation system has been disconnected from the power supply or after a power failure, the audible tone is automatically reactivated, regardless of the previous setting.

Automatic safety shut-off

If the fan is left running and no button is pressed for 10 hours, the fan will turn off automatically.

The overhead lighting remains on.

- Press the On/Off sensor button  to turn the fan back on again.

Cleaning and care

⚠ WARNING
TO REDUCE THE RISK OF
FIRE, ELECTRIC SHOCK, OR
INJURY TO PERSONS,
OBSERVE THE FOLLOWING:

Before cleaning or servicing the hood, disconnect it from the power supply, see "Important Safety Instructions".

⚠ The halogen bulbs are very hot when in use. They stay hot for some time after turned off. Use caution, danger of burns.
Wet cleaning the hot bulbs will cause damage.
Wait a few minutes after turning them off before cleaning.

Cleaning the casing

Never use abrasive cleaners, scouring pads, steel wool or caustic (oven) cleaners on the hood. They **will** damage the surface.

- All external surfaces and controls can be cleaned with a mild solution of warm water and liquid dish soap applied with a soft sponge.
- Wipe dry using a soft cloth.

Do not use too much water when cleaning the controls. Water could penetrate the electronics and cause damage.

Avoid:

- cleaning agents containing soda, acids, bleach or chlorides,
- abrasive cleaning agents, e.g. powder or cream cleansers,
- abrasive sponges, i.e. pot scourers or sponges which have been previously used with abrasive cleaning agents.


These will damage the surface.


Glass surfaces


- Glass surfaces can be cleaned using a glass cleaner.

Grease filters

The grease filters should be cleaned every 3 - 4 weeks to avoid the accumulation grease.

Clean the grease filters at the latest when the grease filter sensor  lights up.

 A dirty filter is a fire hazard!

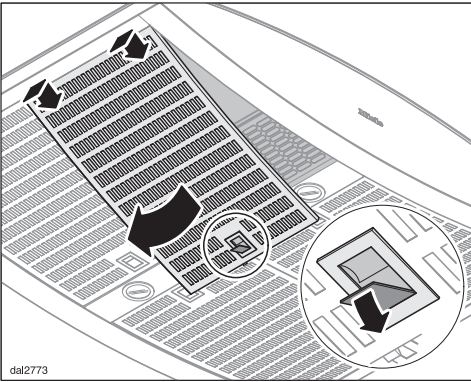

- To remove a grease filter, pull the locking clips forward, lower the filter down 45°, unhook it at the rear, and take it out.

Support the grease filter so that it is does not fall and damage the cooktop.

Cleaning the grease filters

- **By hand:** use a scrub brush with a solution of warm water and mild dish soap.
Do not use the pure detergent, aggressive all purpose cleaners, oven sprays, abrasive cleaning agents or limescale removers. They could destroy the filter.
- **In a dishwasher:** place the filter vertically in the lower basket, making sure that the spray arm is not blocked.
Use a wash program with a max. temperature of 150°F (65°C). In a Miele dishwasher use the "Normal" program.
Use the recommended amount of dishwasher detergent. Overuse could destroy the filter.

Depending on the detergent, cleaning the grease filters in a dishwasher may cause permanent discoloration of the filter surface. Performance of the filter is not affected by this discoloration.



- After cleaning, the filters can be placed on a towel to air dry.

Cleaning and care


- While the filters are removed, clean any dirt or grease from the filter casing. This reduces the risk of fire.
- Replace the grease filters.

Resetting the grease filter timer

After cleaning the grease filter timer needs to be reset.

- With the fan running, press the grease filter sensor button  for about 3 seconds, until only the **1** sensor flashes.
The grease filter button  goes out.

If you clean the grease filters **before** the operating time elapses:

- Press the grease filter sensor button  for about 6 seconds, until only the **1** sensor flashes.


Installing and replacing the OdorFree charcoal filters

Two charcoal filters are installed in addition to the grease filters. They are designed to absorb and neutralize cooking odors.


The charcoal filters are installed in the ventilation hood below the recirculating vents.

- To install or replace the charcoal filters, the grease filters must first be removed as described in the previous section of this manual.

The charcoal filter holders are in the left and right hand underside of the hood.

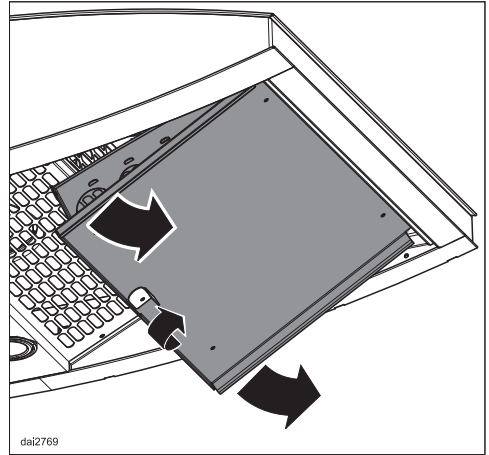

- Open the lock and flip the charcoal filter holder downwards.
- Take the filters out of their packaging.

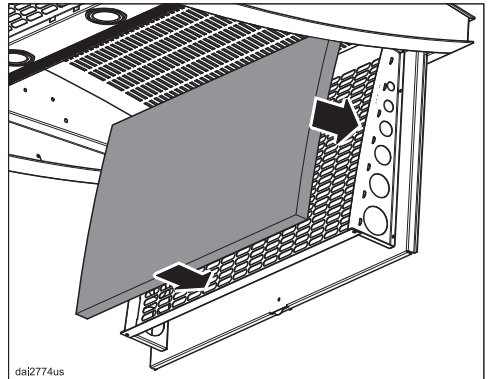


- Place the charcoal filter in the holder.
- Close the holder.

Before first use:

- Activate the operating hours timer (see "Operation").

Cleaning and care

Replace the charcoal filters when



- the charcoal filter sensor  lights up
- or
- when the filter no longer absorbs odors efficiently.

However, they should be changed at least every 2 years.


Dispose of the charcoal filter with the household waste.

Resetting the charcoal filter timer

After replacing the filters, reset the charcoal filter operating hours timer.

- With the fan running, press the charcoal filter sensor button  for about 3 seconds, until only the **1** sensor flashes.
The charcoal filter sensor  goes out.

If you change the charcoal filters **before** the operating time elapses:

- Press the charcoal filter sensor button  for about 6 seconds, until only the **1** sensor flashes.



Changing the light bulbs

⚠ WARNING
TO REDUCE THE RISK OF
FIRE, ELECTRIC SHOCK, OR
INJURY TO PERSONS,
OBSERVE THE FOLLOWING:

Disconnect the exhaust hood from the power supply by either removing the fuse, unplugging it, or manually "tripping" the circuit breaker.

When in use halogen bulbs become extremely hot, and can burn your hands. Do not attempt to change the bulbs until they have had sufficient time to cool.

Do not press the bulb surface. Fingerprints or body oils deposited on the bulb will decrease its life. Follow the bulb manufacturer's instructions.

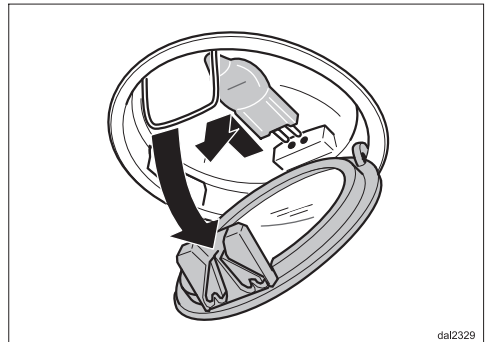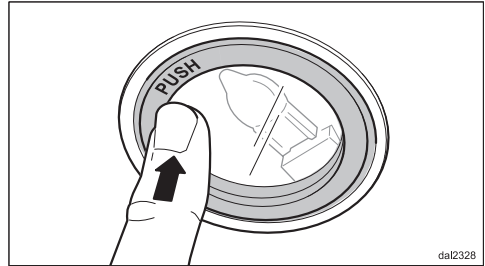

- To change the halogen bulb, first gently press the light cover. The cover will open and can now be flipped down.
- Pull the halogen bulb from its socket.
- Using a cloth or glove, insert the new halogen bulb (type 12 V, 20 W, G4).

Please follow the manufacturer's instructions.

- Flip the light cover back up, making sure it clicks into place.

After Sales Service

Repairs

In the event of a fault which you cannot easily fix yourself, please contact the Miele Technical Service Department.

- When contacting the Technical Service Department, please quote the model and serial number of your appliance.

These are shown on the data plate.

MieleCare

(USA only)


MieleCare, our Extended Service Contract program, gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership.

MieleCare is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability, and longevity of your Miele appliance.

Please note that unless expressly approved in writing by Miele's Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home.

To learn more about **MieleCare** Extended Service Contracts, please contact your appliance dealer or visit us online at:

<http://mieleusa.com/mielecare>

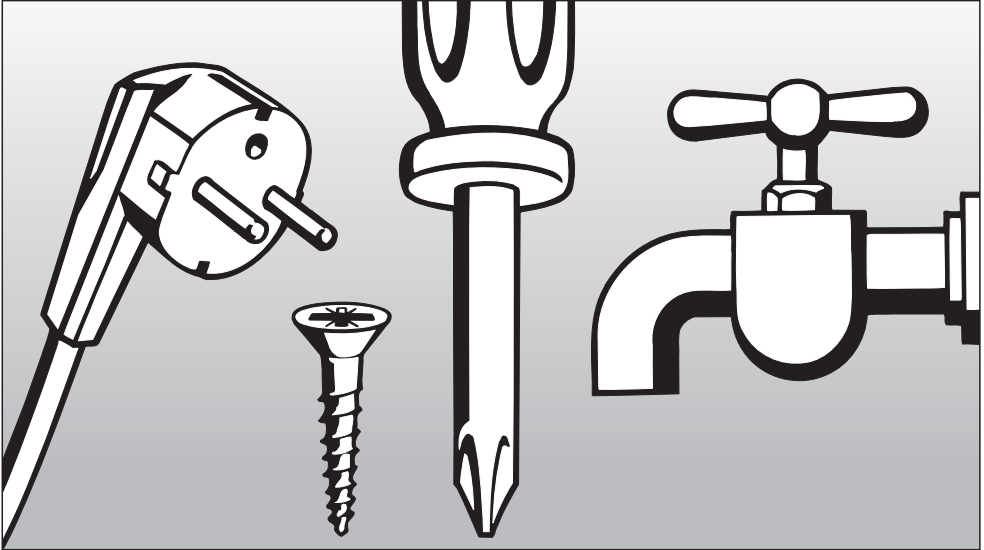

Installation Instructions

Read these instructions and the "Important Safety Instructions" before installing this ventilation system.

The installation steps are described in the enclosed "Installation Diagram".

Leave these instructions with the appliance for the consumer/user.

Information is subject to change. Please refer to our website to obtain the most current product specification, technical & warranty information.

Caring for the environment

Disposal of packing material

The cardboard box and packing materials protect the appliance during shipping. They have been designed to be biodegradable and recyclable. Please recycle.



DANGER


Ensure that any plastic wrappings, bags, etc., are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation!

Disposal of an old appliance

Old appliances may contain materials that can be recycled. Please contact your local recycling center about the possibility of recycling these materials.

Before discarding an old appliance, disconnect it from the electrical supply and cut off the power cord to prevent it from becoming a hazard.

Appliance dimensions

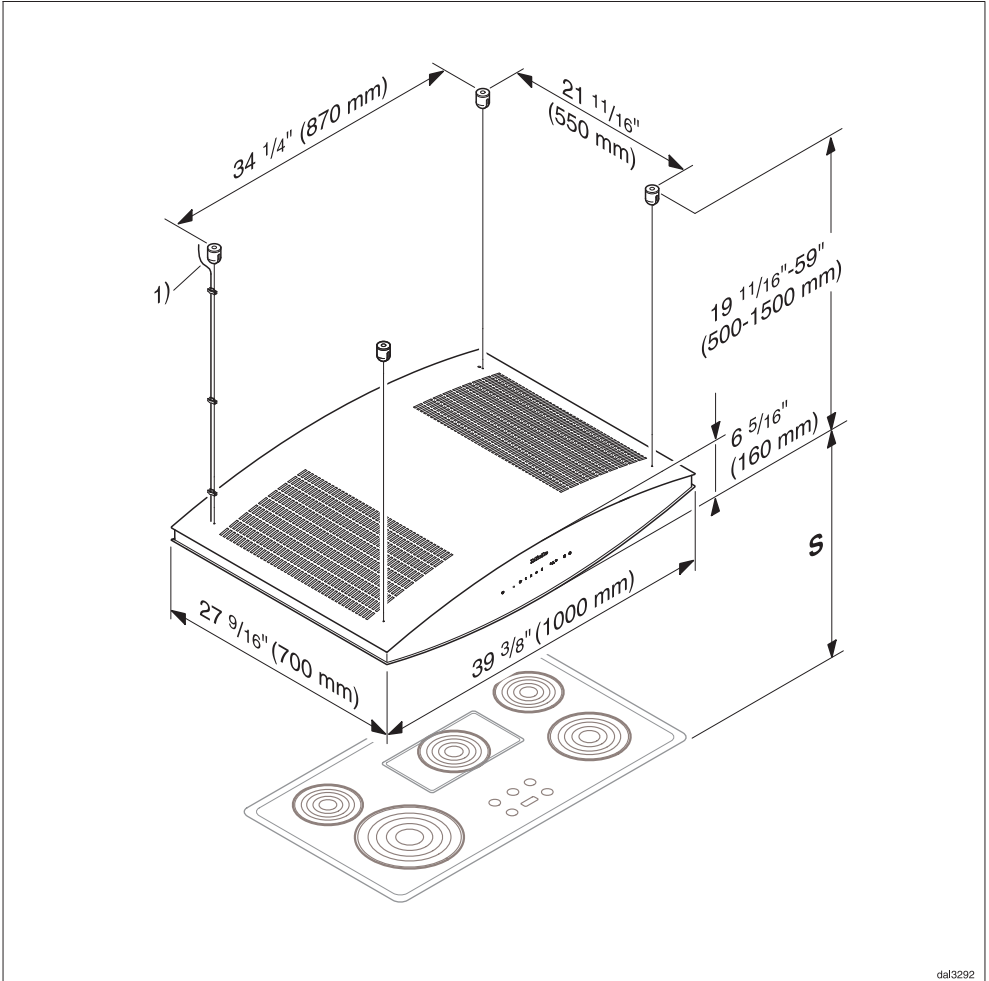

dal3292

1) Power cord, 5.9 ft. (1.8 m) long

Keep the recirculating vents in mind during installation. If it is positioned too high the extraction will be inefficient. There should be a sufficient gap from the hood to the ceiling to allow air to flow freely from the vents. The distance should be at least 1 ft. (300 mm).

Appliance dimensions

Distance between cooktop and hood (S)

Do not install this exhaust hood over cooktops that burn solid fuel.

Provided a greater clearance is not specified by the manufacturer of the cooktop, observe the following minimum safety clearances between a cooktop and the bottom of the hood:

	Miele Cooktops	Non-Miele Cooktops
Electric cooktops	24" (610 mm)	
Electric barbecues and fryers	26" (660 mm)	
Multiburner gas cooktops ≤ 43,000 BTU (12.6 KW) and no burner > 15,000 BTU (4.5 KW)	26" (660 mm)	30" (760 mm)
Single burner (Wok) ≤ 20,500 BTU (6 KW)	26" (660 mm)	30" (760 mm)
All other gas cooktops	30" (760 mm)	

- If several gas surfaces are installed under the hood, the total output must be taken into account when determining the minimum safety clearance.
- Be sure to follow the the gas cooktop manufacturer's minimum safety clearances from easily flammable materials e.g. upper cabinets.
- If local building codes require a greater safety clearance, follow their specifications.
- If there is more than one appliance beneath the hood and they have different minimum safety clearances, always select the greater clearance.


See "Important Safety Instructions" for further information.

Structural support


The mounting cables will support the weight of the hood. The mounting cables must be attached to rigid structural framing that is supported in its entirety by the ceiling joists, or to the ceiling joists directly. Do not attach the cables directly to the ceiling with anchors, toggle bolts, etc.

CAUTION

When cutting or drilling into the wall or ceiling, do not damage electrical wiring or other hidden utilities.

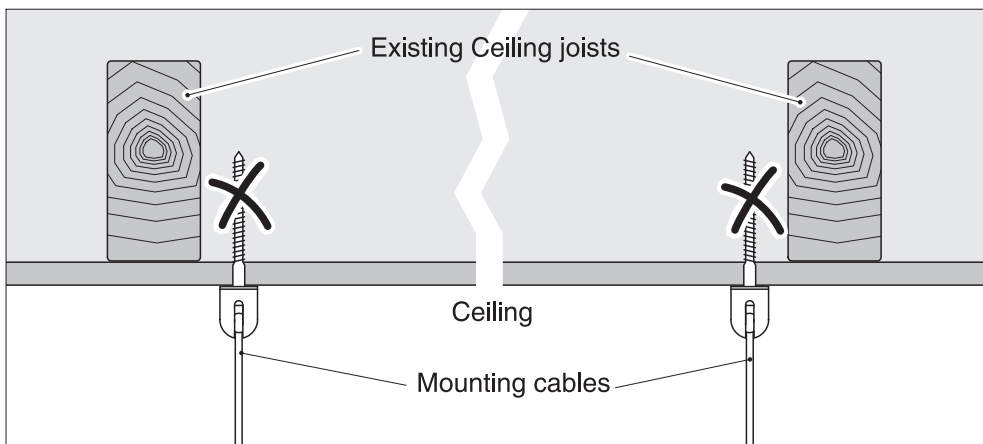


dai3470

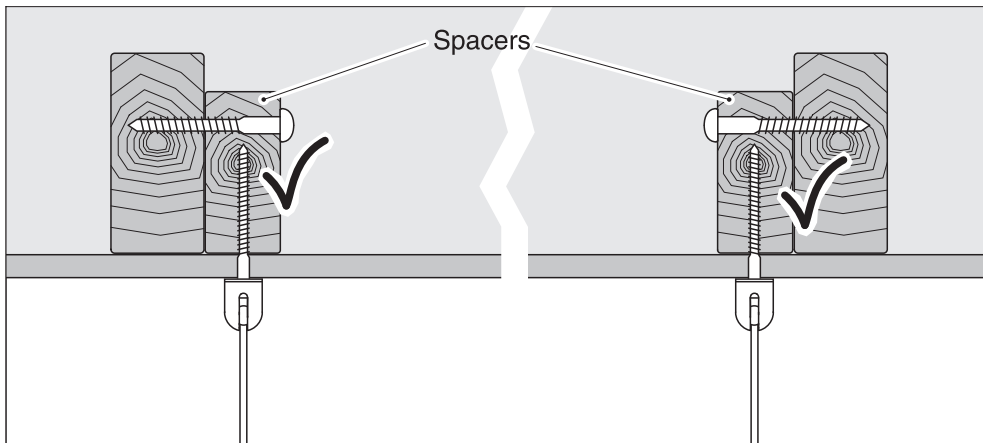

Installation

 
Installation accessories



5461008850

4 screws 5 x 60 mm and 4 anchors 8 x 50

for securing the ventilation hood to the ceiling.


 The screws and anchors are suitable for mounting on concrete ceilings. For other types of ceiling materials, use appropriate materials. Ensure that the ceiling can support the load.



da12791

1 strain relief


for affixing the power cable to a ceiling fastener.

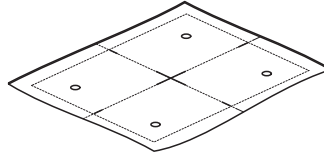

da12796

Drill template


A cardboard insert serves as a drill template.

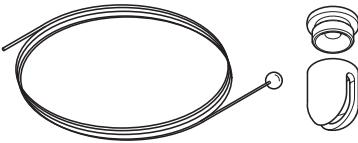

da12775

4 mounting sets

for hanging the ventilation hood on the ceiling, consisting of 4 cables, 4 ceiling fasteners und 4 caps.

 The suspension must not be used for additional components (e.g. a shelf).



08277310

3 cord fasteners

for fastening the power cable to a suspension cord.

Installation instructions

The individual installation steps are described on the installation sheet provided.

Before installation, read the information on the following pages as well as "Appliance dimensions" and "Important safety instructions".

CAUTION

To avoid risk of hand or other injury, avoid contact with sharp edges during the assembly and installation process.

CAUTION

When cutting or drilling into the wall or ceiling, do not damage electrical wiring and other hidden utilities.

⚠ WARNING
TO REDUCE THE RISK OF
FIRE, ELECTRIC SHOCK, OR
INJURY TO PERSONS,
OBSERVE THE FOLLOWING:

All electrical work should be performed by a qualified electrician in strict accordance with national regulations (for USA: ANSI-NFPA 70) and local safety regulations. Installation, repairs and other work by unqualified persons could be dangerous. Ensure that power to the appliance is OFF while installation or repair work is performed.

- Verify that the voltage, load and circuit rating information found on the data plate (located behind the grease filter), match the household electrical supply before installing the hood.
- Use only with ventilation hood cord-connection kits that have been investigated and found acceptable for use with this model hood.

If there is any question concerning the electrical connection of this appliance to your power supply, please consult a licensed electrician or contact Miele's Technical Service Department. See back cover for contact information.

⚠ WARNING:
THIS APPLIANCE MUST BE
GROUNDED

Grounding Instructions

This appliance must be grounded in the event of an electrical short circuit grounding reduces the risk of electric shock by providing a path of least resistance.

WARNING - Improper grounding can result in a risk of electric shock.

If there is any doubt, have the electrical system of the house checked by a qualified electrician.

Do not use an extension cord. If the power cord is too short, have a qualified electrician, install an outlet near the appliance.

Important

The hood comes equipped with a 5.9 ft (1.8 m) power cord.

The hood must be hard wired accordingly:

Black/Red wire: connect to L1 (live)
White wire: connect to N (neutral)
Green wire: connect to GND (ground)

Technical Data

Total connected load.	160 W
– Fan motor	100 W
– Overhead lighting	3 x 20 W
Voltage	120 V AC
Frequency	60 Hz
Fuse rating	10 A
Power cord length	5.9 ft. (1.8 m)
Weight	70.5 lbs (32 kg)

Optional accessory:

Miele OdorFree charcoal filter set:
DKF 26-1
The set has two charcoal filters.

**Please have the model and serial number
of your appliance available before
contacting Technical Service.**



**U.S.A.
Miele, Inc.**

National Headquarters

9 Independence Way
Princeton, NJ 08540
Phone: 800-843-7231
609-419-9898
Fax: 609-419-4298
www.mieleusa.com

**Technical Service & Support
Nationwide**

Phone: 800-999-1360
Fax: 888-586-8056

TechnicalService@mieleusa.com

**Canada
Miele Limited**

Headquarters and Showroom

161 Four Valley Drive
Vaughan, ON L4K 4V8
Phone: 800-643-5381
905-660-9936
Fax: 905-532-2290
www.miele.ca
professional@miele.ca
(commercial enquiries)

MieleCare National Service

Phone: 800-565-6435
905-532-2272
Fax: 905-532-2292
customercare@miele.ca
(general and technical enquiries)

Germany

Miele & Cie. KG
Carl-Miele-Straße 29
33332 Gütersloh

INFORMATION IS SUBJECT TO CHANGE. PLEASE REFER TO OUR WEBSITE
TO OBTAIN THE MOST CURRENT PRODUCT SPECIFICATIONS, TECHNICAL
& WARRANTY INFORMATION.

DA 7000 D