


Operating Instructions 30" Electric Range

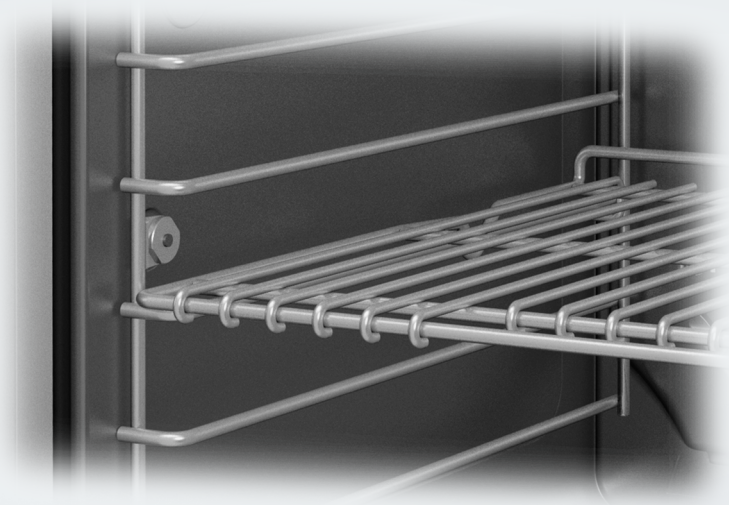

To prevent accidents and damage to the range, you **must** read all instructions supplied before installing or using the appliance.



IMPORTANT SAFETY INSTRUCTIONS

WARNING


Children and adults can tip over the range if has not been secured. This may lead to fatal injuries.

- ▶ This range must be secured and connected using the anti-tip device according to the installation instructions.
- ▶ If you have moved the range, slide the locking latch onto the anti-tip device until you feel it lock into place.
- ▶ Do not use the range if the anti-tip device has not been properly installed and engaged.
- ▶ Failure to observe the information contained in the installation instructions can lead to serious or fatal injuries for children and adults.

	 WARNING
	<p>All ranges can tip</p> <p>Injury to persons could result</p> <p>Install anti-tip devices packed with range</p> <p>See installation instructions</p>

IMPORTANT SAFETY INSTRUCTIONS	2
IMPORTANT SAFETY INSTRUCTIONS	6
Guide to the range	20
Cooktop	20
Oven	21
Control panel	22
Burner control knobs	22
Temperature selector	23
Operating mode selector	23
Clock / Timer	24
Display	24
Symbols in the display	24
Sensor buttons	24
Temperature indicator 	24
Features	25
Model numbers	25
Data plate	25
Items included	25
Standard and optional accessories	25
Shelf runners	26
Universal tray and Wire oven rack	26
FlexiClips with wire rack HFCBBR 30-2	27
Cooktop safety features	31
Overheat protection	31
Oven safety features	31
System lock  for the oven	31
Cooling fan	31
Vented oven door	31
Safety Door Lock for Self Clean	31
PerfectClean treated surfaces	32
Self Clean ready accessories	32
Before using for the first time	33
Before using for the first time	33
Setting the time of day for the first time	33
Turning on the cooktop for the first time	33
Heating the oven	33
Operating the cooktop	35
How the burners work	35

Contents

Energy saving tips	37
Burner data.....	38
Setting range	39
Turning on.....	40
Turning on the second heating zone	40
Turning off.....	40
Residual heat display	40
Operating the oven	41
Energy saving tips	41
Using the oven	41
Cooling fan	41
Preheating the oven	42
Guide to the modes	43
Clock / Timer	44
Turning a cooking program On / Off automatically	44
Setting the cooking time	44
Setting a cooking time and finish time	45
At the end of the cooking time	46
Changing the cooking time	46
Deleting a cooking time.....	47
Deleting a finish time	47
Changing the time of day	48
Changing factory default settings	49
System lock 	52
Timer	54
Setting the timer	54
Bake	56
Roast	58
Slow Roasting	59
Broil	61
Defrost	63
Canning	64
Dehydrate	65
Frozen food	66

Cleaning and care	67
Cooktop: Unsuitable cleaning agents	67
Ceramic surface	68
Oven: Unsuitable cleaning agents.....	69
Normal soiling.....	70
Stubborn soiling	70
Self Cleaning the oven interior	72
Preparing for the Self Clean program.....	72
Starting the Self Clean program	73
At the end of the Self Clean program.....	74
The Self Clean program is canceled	75
Door removal.....	76
Reinstalling the door	77
Removing the shelf runners.....	77
Frequently Asked Questions	79
Technical Service	83
Contact in case of fault	83
Warranty	83

IMPORTANT SAFETY INSTRUCTIONS

When using the appliance, follow basic safety precautions, including the following:

Read all instructions before installation and use of the range to prevent accidents and machine damage.

This range complies with current safety requirements. However, improper use of the appliance can result in personal injury or damage to property.

Please read the installation instructions carefully before installing and connecting the appliance.

Read the operating instructions before using the range for the first time. To prevent accidents and damage to the appliance, always observe both the installation instructions and operating instructions. Both documents contain important information about installation, safety, use and maintenance.

Miele cannot be held liable for damage occurring as a result of non-compliance with the instructions.

Keep these installation instructions and operating instructions in a safe place and pass them on to any future owner.

IMPORTANT SAFETY INSTRUCTIONS

Appropriate use

- ▶ This range is intended for domestic use and use in other similar environments.
- ▶ This appliance is not intended for outdoor use.
- ▶ Use the range exclusively under normal domestic conditions:
 - Use the oven for baking, roasting, broiling, defrosting, canning and drying food.
 - Use the stovetop to prepare food and keep it warm.

Any other use is not permitted.

- ▶ Risk of Fire! Do not use this oven to store or dry combustible materials.
- ▶ Persons who lack physical, sensory or mental abilities, or experience with the appliance should not use it without supervision or instruction by a responsible person.

IMPORTANT SAFETY INSTRUCTIONS

Safety with children

- ▶ As with any appliance, close supervision is necessary when the oven is used by children.
- ▶ Do not leave children unattended: Children should not be alone or unsupervised in the area where the appliance is installed. Do not allow them to sit or stand on the appliance.
- ▶ Children must be kept away from the range unless constantly supervised.
- ▶ Children ages eight and up may only use the range without supervision if they have been shown how to use it in a safe manner, and if they are able to recognize and understand the potential risks of improper use.
- ▶ Children must not be allowed to clean or maintain the range without supervision.
- ▶ Please supervise any children in the vicinity of the range and do not let them play with the appliance.
- ▶ Risk of burns! The skin of children is more sensitive to high temperatures than that of adults.
 - External parts of the oven such as the door glass, vent and control panel become hot. Do not allow children to touch the oven when it is in operation.
 - The burners of the cooktop will become hot during use. Turn pot and pan handles inward, so children cannot pull them down and be burned. Risk of burns!
- ▶ Danger of burns.

Children's skin is more sensitive to high temperatures than that of adults. The oven becomes hotter during self-cleaning than it does in normal use. Do not let children touch the oven while the Self Clean program is running.

IMPORTANT SAFETY INSTRUCTIONS

▶ Burn hazard from improper use! Do not allow children to operate the oven.

▶ Danger of suffocation! Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children.

▶ Burn hazard!

Keep the spaces above and behind the range clear of any items that could draw the attention of children. Otherwise, they can be tempted into climbing onto the appliance.

▶ Danger of injury. Never allow children to hang or lean on any part of the appliance.

IMPORTANT SAFETY INSTRUCTIONS

Technical safety


- ▶ Unauthorized installation, maintenance, and repairs can cause considerable danger for the user. Installation, maintenance, and repairs must only be carried out by a Miele authorized technician.
- ▶ Do not carry or lift the range by the oven door handle or the control panel!
- ▶ Maintenance by the user: Never repair or replace any part of the appliance unless the instructions specifically recommend doing so. Service work should only be performed by a qualified technician.
- ▶ A damaged range can be dangerous. Always check for visible signs of damage. Never use a damaged appliance.
- ▶ Reliable and safe operation of the range can only be guaranteed if it is connected to the public power supply.
- ▶ The electrical safety of the range can only be guaranteed when it is properly grounded. Compliance with this essential safety requirement is absolutely mandatory. If in any doubt, please have the building's wiring system inspected by a qualified electrician.
- ▶ Proper installation: Make sure that your appliance has been installed correctly and that it has been grounded by a qualified technician.
- ▶ To avoid damaging the range, make sure that the connection data (voltage and frequency) on the data plate correspond to the building's power supply before connecting the appliance. When in doubt, consult a qualified electrician.
- ▶ During installation, maintenance and repair work, e.g. if the oven lighting is broken (see “Frequently asked questions”), the range must be completely disconnected from the household electricity supply. It is only completely isolated from the electricity supply when:
 - The main circuit breaker has been tripped, or
 - The plug fuses have been fully unscrewed (where applicable), or

IMPORTANT SAFETY INSTRUCTIONS

- The power cable has been unplugged from the wall outlet. Unplug the cable by pulling on the plug, not on the cord.
- ▶ Do not use a power strip or extension cord to connect the range to electricity. These are a fire hazard and do not guarantee the required level of appliance safety.
- ▶ Any contact with live connections or tampering with the electrical or mechanical components of the range will endanger your safety and may lead to appliance malfunctions.
Do not open the appliance housing under any circumstances.
- ▶ This appliance must not be installed and operated in mobile installations (e.g. on a ship).
- ▶ Any repairs not performed by a Miele authorized service technician will void the warranty.
- ▶ Defective components should be replaced by Miele original parts only. Only with these parts can safety of the appliance be assured as intended by the manufacturer.
- ▶ Risk of electric shock! If the ceramic surface of the stovetop is defective or chipped, cracked or broken in any way, immediately switch the stovetop off and do not continue to use it. Disconnect the range from the power supply and contact Miele Technical Service.
- ▶ If the range is installed behind a cabinet door, do not close the door while the appliance is in operation. Heat and moisture can build up behind the closed door and cause damage to the range and to the surrounding cabinets and flooring. Do not close the door until the appliance has completely cooled down.
- ▶ Reaching over a hot cooktop to access the cabinets can result in burns. You can reduce the risk of burns by installing a range hood that extends at least 4 3/4" (12 cm) past the bottom of the cabinets.

IMPORTANT SAFETY INSTRUCTIONS

Correct use

 The oven becomes very hot while in use. Use caution to ensure that you are not burned on the heating elements or interior surfaces of the oven. Use pot holders when placing food in the oven, adjusting the racks, etc. in a hot oven.

- ▶ Caution: Heating elements may be hot even though they are not glowing. Interior surfaces of an oven become hot enough to cause burns. External parts of the oven such as the door glass, vents, and the control panel can become hot. During and after use, do not touch, or let clothing or other flammable materials come into contact with heating elements or interior surfaces of the oven until they have had sufficient time to cool.
- ▶ Do not let food sit in the oven for an extended period of time before or after cooking. Doing so can result in food poisoning or sickness.
- ▶ Use only dry, heat-resistant potholders. Moist or damp potholders used on hot surfaces may result in steam burns. Do not let potholders come in contact with oil or grease. Do not substitute dish towels or other bulky items for potholders. Do not let potholders touch hot heating elements.
- ▶ Loose fitting or hanging garments present a fire hazard. Wear proper apparel while operating the appliance.
- ▶ Do not heat up food in closed containers, as pressure will build up in the container, causing them to explode. Do not use the range to boil or heat up cans.
- ▶ Never pour cold water onto hot surfaces in a hot oven. The steam created could cause serious burns or scalding and the sudden change in temperature can damage the enamel in the oven.
- ▶ To prevent burns, always place oven racks at their desired height while the oven is cool. If the rack must be moved while the oven is hot, do not let pot holders touch hot heating elements.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ Open the door carefully to allow hot air or steam to escape before placing or removing food.
 - ▶ To prevent burns, allow the heating elements to cool before cleaning by hand.
 - ▶ Do not leave the oven door open unnecessarily as someone may trip over it or be injured by it.
 - ▶ Never leave the appliance unattended when cooking with oil or fat. They can ignite if overheated. Do not use water on grease fires. Turn off the oven immediately and suffocate the flames by keeping the oven door closed.
 - ▶ Do not use water on cooktop grease fires. Turn the cooktop off. Smother or use a dry chemical or foam-type extinguisher on any fire or flame.
 - ▶ Smother the fire or flames, or use a dry chemical extinguishing agent or foam fire extinguisher.
 - ▶ Never store flammable liquids and materials in, above or under an oven, or near cooking surfaces.
 - ▶ The high temperatures radiated could cause objects near the oven to catch fire.
- Do not use the oven to heat the room.



WARNING

NEVER use this appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating of the oven.



WARNING

NEVER use this appliance as storage space. Doing so may result in carbon monoxide poisoning and overheating of the oven.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

NEVER cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks air flow through the oven and may cause carbon monoxide poisoning. Aluminum foil linings may also trap heat, causing a fire hazard.

- ▶ Broiling food for an excessively long time can cause it to dry out and may result in the food catching fire.
Do not exceed recommended broiling times.
- ▶ Some foods dry out very quickly and can be ignited by high broiling temperatures.
Do not use broiling functions for crisping rolls or bread or to dry flowers or herbs. Instead use the Conv Bake (Convection Bake) or Surround functions.
- ▶ Use caution when using alcohol in your recipes. Alcohol evaporates at high temperatures but may, in rare circumstances, combust on the hot heating elements.
- ▶ Plastic or aluminum foil cookware melts at high temperatures and can damage the range or start to burn. Do not use any plastic or aluminum foil cookware.
Exception: You can use oven-safe plastic cookware in the oven. Heed the cookware manufacturer's instructions.
- ▶ When residual heat is used to keep food warm, the high level of humidity and condensation can cause damage in the oven. The control panel, countertop or cabinetry may also be damaged.
Do not switch the oven off completely while food is inside it, but select the lowest possible temperature for the oven mode you are using. This will ensure the fan will automatically continue to run.
- ▶ It is recommended to cover all cooked food that is left in the oven to be kept warm. This will prevent moisture from condensing on the interior of the oven.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ To avoid damage, do not place aluminum foil, pots, pans or baking sheets directly on the oven floor. This can cause a build up of heat that will damage the oven floor.
- ▶ Do not slide pots or pans on the oven floor. This could scratch and damage the surface.
- ▶ The door can support a maximum weight of 33 lbs (15 kg). Do not sit on or lean against an open door, and do not place heavy objects on it. Also make sure that nothing can get trapped between the door and the oven cavity. The oven could get damaged.
- ▶ This oven must only be used for cooking food. Fumes, vapors or heat given off by glues, plastics or flammable liquids and materials could be hazardous. Do not use it as a dryer, kiln, dehumidifier, etc.
- ▶ Do not obstruct the flow of combustion and ventilation air.
- ▶ Do not let metal objects (aluminum foil, pans) come in contact with the heating element.
- ▶ Make certain that the power cords of small appliances do not come in contact with or get caught in the oven door.
- ▶ When baking frozen pizzas or pies, place them on the wire rack lined with parchment paper. Do not use the baking tray or the roasting pan for frozen foods with a large surface area. The tray or pan could become warped and difficult to remove from the oven when hot. Frozen foods like french fries, chicken nuggets, etc. can be baked on the baking tray.
- ▶ The flames could set the grease filters of a ventilation hood on fire. Do not flambé under a ventilation hood.
- ▶ Never heat empty cookware.
- ▶ If the cooktop is covered, there is a risk that the material of the cover will ignite, explode or melt if the cooktop is still hot or if turned on inadvertently. Never cover the cooktop with a board, cloth or protective sheet.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ When using an electrical appliance, e.g. a hand mixer, near the cooktop, make sure that the power cable does not come into contact with the hot cooktop. The cable's insulation could become damaged.
- ▶ The cooktop gets hot when in use and remains hot for a while after being turned off. There is a potential hazard until the residual heat indicator goes out.
- ▶ If the cooktop is turned on or accidentally turned on or if it is still hot, metal objects on the cooktop can heat up. Other items may melt or catch fire. Damp lids can become attached to the cooktop by suction. Do not store items on the cooktop! Always turn the burners off after use!
- ▶ Do not allow solid or liquid sugar, or pieces of plastic or aluminum foil to get onto the cooktop when it is hot, as they can damage the ceramic surface when it cools down. If this should occur, turn off the appliance immediately and scrape off all the sugar, plastic or aluminum residues while still hot, using a shielded scraper blade. Use pot holders. Allow the ceramic surface to cool down before cleaning with a suitable ceramic cleaning agent.
- ▶ Pans that boil dry can cause damage to the ceramic glass. Do not leave the appliance unattended while it is being used.
- ▶ Pots and pans with bases with pronounced edges or ridges can scratch the ceramic burner. Only use pots and pans with smooth bases.
- ▶ Lift pans into position on the cooktop. Sliding them into place can cause scuffs and scratches.
- ▶ Grains of salt, sugar and sand (e.g. from cleaning vegetables) can cause scratches if they get under pan bases. Make sure that the ceramic surface is clean before placing pans on it.
- ▶ Even a light object can cause damage to the ceramic cooktop in certain circumstances. Do not drop anything on the ceramic surface.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ Hot pans on the display can cause damage to the electronics underneath. Do not place hot pans on the area around the display.
- ▶ The cooktop frames or surrounding (in the case of beveled cooktops) may become hot due to the following factors: operating time, high output settings, large cookware, and number of burners in operation.
- ▶ Cookware made from aluminum or with an aluminum base can cause shiny metallic spots. These spots can be removed with ceramic glass or stainless steel cleaner (see “Cleaning and Care”, “Cleaning the ceramic surface”).
- ▶ If residue remains on the cooktop for any length of time, it can cook into the cooktop and sometimes it is then not possible to remove it. Remove spills and splatters promptly. Also make sure that the bottom of any cookware is clean, dry, and free of grease before placing it on the cooktop.
- ▶ The cooktop has burners of different sizes. Use cookware with a level base that is large enough for the burner. Cookware that is too small leaves part of the hot burner uncovered, which may cause burns due to touching or ignite clothing. The use of cookware of the right size also makes for better use of the heated areas.
- ▶ Not any cookware of glass, glass ceramic, ceramic, clay or other glass cookware is suitable for use on a burner. It can be damaged due to sudden temperature change.
- ▶ Wet sponges or clothes can cause burns due to hot steam if they are used to wipe spilled food off a hot burner. Some cleansers can emit hazardous vapors if they are applied to a hot surface. Be careful when cleaning the cooktop.
- ▶ Spilled food can cause odors and the spraying of grease, which can ignite on the cooktop. Never leave the cooktop unsupervised at high power.

IMPORTANT SAFETY INSTRUCTIONS

- ▶ If the handles of a pot or pan extend across an adjacent burner, this can cause burns, the ignition of flammable materials and the spilling of food due to inadvertent contact with the cookware. Turn the pot or pan so that the handles point toward the inside and do not extend across an adjacent burner.
- ▶ If the burner is damaged, cleansers or spilled food can penetrate the glass surface and cause a short-circuit. Never cook on a damaged burner. Contact an electrician immediately.

Cleaning and maintenance

- ▶ The steam from a steam cleaning appliance could reach live electrical components and cause a short circuit. Do not use a steam cleaner to clean the range.
- ▶ Only clean parts listed in these Operating and Installation Instructions.
- ▶ Scratches on the door glass can cause the glass to break. Do not use abrasive cleaners, hard sponges, brushes or sharp metal tools to clean the door glass.
- ▶ The shelf runners can be removed for cleaning purposes (see “Cleaning and care”). Ensure they are correctly fitted after cleaning and never operate the oven without the shelf runners inserted.
- ▶ There is a seal around the oven interior which seals the inside of the door. Take care not to rub, damage or move the gasket. Do not clean the door gasket - the door gasket is essential for a good seal.
- ▶ Do not use a protective coating to line the oven and do not use commercial oven cleaner unless certified for use in a self-cleaning oven.
- ▶ Debris should be removed before running the Self Clean program. If not removed this debris can smoke causing the self-cleaning program to turn itself off.

IMPORTANT SAFETY INSTRUCTIONS


Accessories

- ▶ Use only genuine original Miele parts. If parts or accessories from other manufacturers are used, the warranty will become void.
- ▶ The high temperatures used during self-cleaning will damage accessories that are not designed for cleaning in the Self Clean program. Please remove these accessories from the oven before starting the Self Clean program. This also applies to accessories purchased separately (see “Cleaning and care”).

SAVE THESE INSTRUCTIONS AND REVIEW THEM PERIODICALLY


Guide to the range

Cooktop

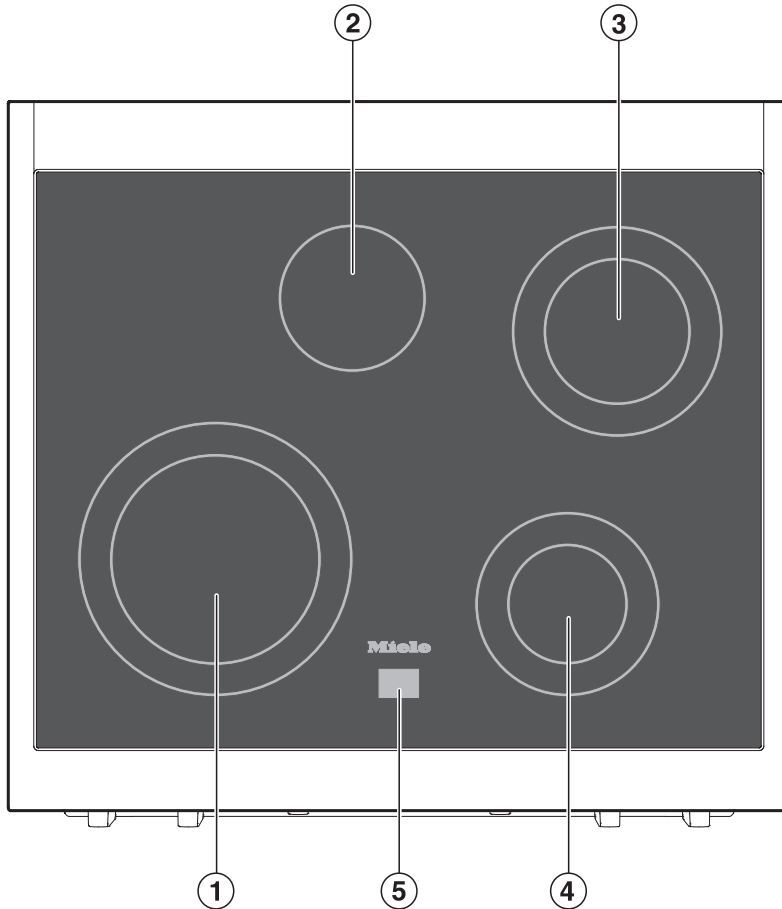

- ① Variable burner
Ø 8 1/4" - 10 5/8" (21 cm - 27 cm)
- ② Standard burner
Ø 5 11/16" (14.5 cm)
- ③ Variable burner
Ø 5 11/16" - 8 1/4" (14.5 cm - 21 cm)
- ④ Variable burner
Ø 4 3/4" - 7" (12 cm - 18 cm)
- ⑤ Residual heat indicator


Oven

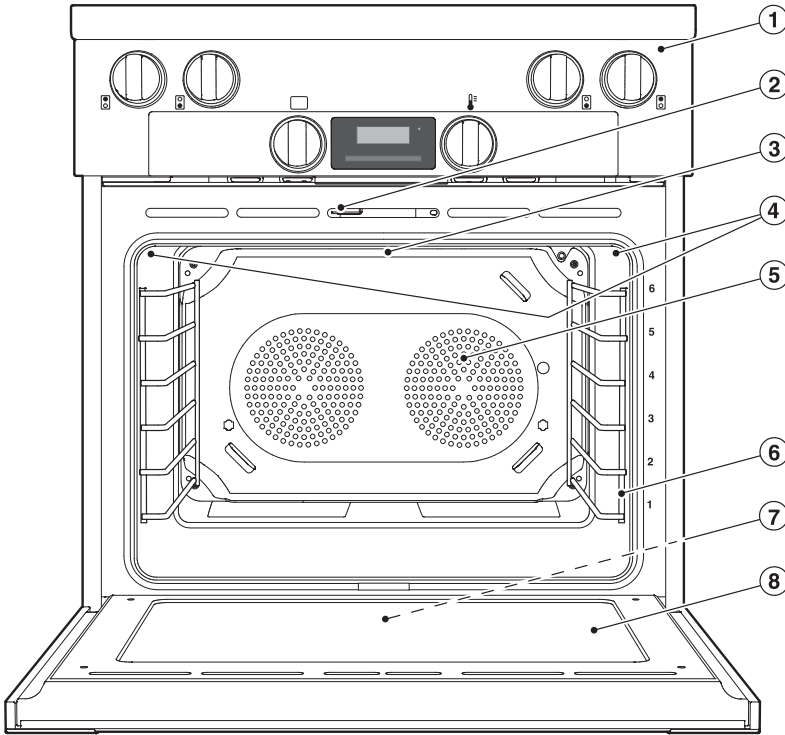

- ① Oven and cooktop controls
- ② Door lock with contact switch for Self Clean *
- ③ Browning/Broiling element
- ④ Oven interior lighting
- ⑤ TwinPower convection fan with heating element
- ⑥ Side runners with 6 shelf levels
- ⑦ Data plate
The data plate is located behind the toe kick cover.
- ⑧ Door

* This switch ensures that the heating elements and the convection fans turn off when the door is opened during use.

Control panel

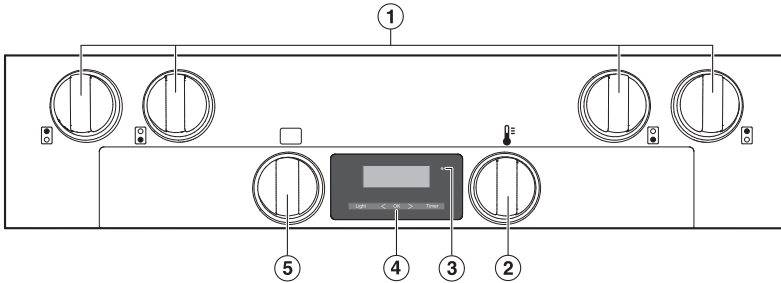

- ① Burner knobs
- ② Temperature selector
- ③ Optical interface
(for Service technicians only)
- ④ Timer with display and sensor buttons for light, <, OK, >, and the time.
- ⑤ Operating mode selector

Burner control knobs

The range is equipped with various cooking zone functions:

Symbol	Description
0	Burner off
1-12	Power levels
☉	Turning on a variable burner

Temperature selector

The temperature selector is used to select the temperature for a cooking mode.

It can be turned clockwise until a resistance is felt and then turned back again.

The temperature settings are marked on the temperature selector.

Operating mode selector

To select an operating mode.

It can be turned clockwise or counter-clockwise.

The operating modes are printed on the mode selector.

Operating modes


- Rapid (Rapid PreHeat)
- Bake
- Broil
- Surround
- Clean (Self Clean)
- Conv Broil (Convection Broil)
- Conv Bake (Convection Bake)

Control panel

Clock / Timer

The clock/timer is operated via the Display with the sensor buttons.

Display

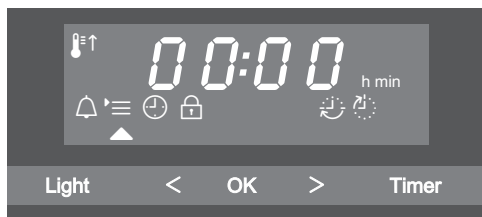

The display shows the time of day or your settings.

See “Clock / Timer” for more information.

Symbols in the display

Depending on the position of the mode selector \bigcirc and/or which button is pressed, the following symbols will appear:

Symbol / Mode	\bigcirc
Timer	Any
Temperature indicator	Operating mode
Cooking time	
Finish time	
Settings <i>P</i>	Off
Time of day	
System lock	

A mode can only be set or changed if the mode selector is in the correct position.

Sensor buttons

The range has sensor buttons for light, <, OK, >, and timer, which react to the touch of a finger. Each touch is confirmed with an audible tone.

The tone can be turned on or off by selecting the status *P* 4 in the settings 5 / (see “Settings”).

Temperature indicator

The temperature indicator light lights up when the oven is heating.

When the set temperature is reached,

- the oven heating turns off,
- and the temperature indicator light goes out.

The temperature regulator ensures that the oven heating and temperature indicator light turn back on again when the oven temperature falls below the level set.

Model numbers

A list of the ovens described in these operating instructions can be found on the back page.

Data plate

The data plate is behind the toe-kick. The toe-kick cover is attached to the base of the range by magnets so it can be removed and put back again easily.

There you can find the model number, the serial number and the connection data (voltage/frequency/maximum rated load) for your range.

Have this information available when contacting Miele Technical Service.

Items included

The range is supplied with:

- installation instructions,
- operating instructions,
- an anti-tip device including screws for fastening the range,
- various accessories.

Standard and optional accessories

Accessories vary depending on model.

All ovens are supplied with shelf runners, a universal tray and a wire rack.

Depending on the model, your range may also be supplied with other accessories listed here.

All accessories and cleaning and care products listed in these instructions are designed to be used with the Miele range.

These can be ordered via the Miele website, from Miele (see end of this booklet for contact details) or from your Miele dealer.

When ordering, please have ready the model number of your range and of the desired accessories.

Features

Shelf runners

The shelf runners are located on the right and left-hand sides of the oven with the levels for inserting accessories.

 
The shelf level numbers are indicated on the front of the oven frame.

Each level consists of a strut on which you can place the wire oven rack, for example.


The runners can be removed. See “Cleaning and Care”.

Universal tray and Wire oven rack


Universal tray HUBB 30-1




Wire oven rack HBBR 30-2

 

Non-tip safety notches are located on the shorter sides of these accessories. These prevent the trays being pulled completely out of the side runners when you only wish to pull them out partially.

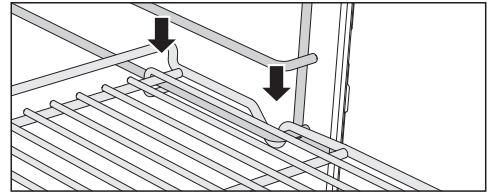


 Always place the wire oven rack on the runner with the notch facing down.



When using the universal tray, place it directly on the wire oven rack.

FlexiClips with wire rack HFCBBR 30-2

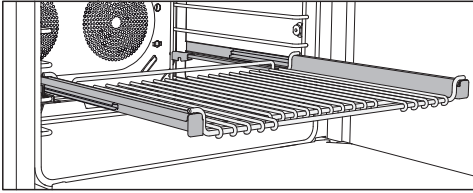


The FlexiClips with wire rack can be mounted on any shelf level and pulled completely out of the oven. This allows you to see the food easily.

The FlexiClips with wire rack is pushed in and then locked onto a level.


The rack can hold a maximum of 33 lbs (15 kg).

Installing and removing the FlexiClips with wire rack

 **Danger of burns!** Make sure the heating elements are turned off and that the oven cavity is cool.

Do not pull the FlexiClips apart during installation or removal.

- Hold the FlexiClips with wire rack with both hands and position it in front of the desired level.

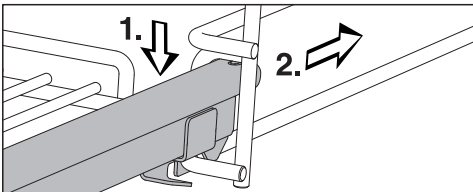


- Insert the FlexiClips with wire rack onto the level (1.) and slide it along the struts of the level (2.) until it clicks into place.

If the FlexiClips with wire rack jams when sliding it onto the level, pull it out using some force and reinsert.

To removing the FlexiClips with wire rack:

- Push the FlexiClips with wire rack in all the way.

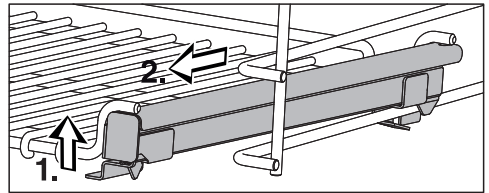

- Using both hands lift the front of the FlexiClips with wire rack on both sides (1.) and pull it out of the level (2.).

Using the universal tray


- When using the universal tray, place it directly on the FlexiClips with wire rack.

Features

Temperature selector with °C scale


The range is delivered with a temperature selector with °F scale. You can get the temperature selector with °C scale as an accessory. Specify the model of your range when purchasing.

Replacing the temperature selector

 Do not operate the range without an installed temperature selector.

- Turn the temperature selector to • (Off).
- Pull the temperature selector off the range horizontally.
- Install the new temperature sensor in the same position and push it onto the range.

Perforated Gourmet baking tray HBBL 71

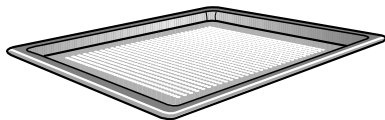


The perforated Gourmet baking tray has been specially developed for the preparation of baked goods made from fresh yeast and quark doughs. The tiny perforations assist in browning the underside of baked goods. The tray can also be used for dehydrating or drying food.

The enameled surface has been treated with PerfectClean.

The **round perforated baking tray HBFP 27-1** can be used for the same things.

The perforated baking tray can be placed on the rack.

 Grilling and Roasting insert HGBB 30-1



The grilling and roasting insert is placed in the universal tray.

The drippings from the meat or poultry are collected under the insert reducing spattering in the oven. The drippings can then be used for gravy and sauces.

The surface has been treated with PerfectClean enamel for easy cleaning.

 
Round baking form HBF 27-1



This circular form is suitable for cooking fresh or frozen pizzas, flat cakes, tarts and baked goods.

The surface has been treated with PerfectClean enamel.

Gourmet Baking Stone HBS 60



The baking stone is ideal for baking dishes with a crisp bottom such as pizza and bread.

The baking stone is made from a heat retaining stone and is glazed. Place the stone directly on the wire rack.

A wooden peel is supplied with it for placing food on and off the stone.

HUB Gourmet casserole dishes HBD casserole dish lids


Miele Gourmet casserole dishes can be placed directly on the wire oven rack. The surface of the casserole dishes has a non-stick coating.

Gourmet casserole dishes are available in different depths. The width and the height are the same.


Suitable lids are available separately. Please quote the model number when ordering.

Depth:
8 1/2" (22 cm)

 HUB 62-22 *




HBD 60-22

 


Depth:
13 3/4" (35 cm)

 HUB 62-35 *




HBD 60-35

 

* Suitable for use on induction cooktops

 Opener



The opener allows you to open the cover of the oven light.

Miele Oven Cleaner

Miele oven cleaner is suitable for removing stubborn soiling. It is not necessary to preheat the oven before use.

Features

Ceramic and stainless steel cleaner 250 mL

Removes heavy soiling, lime scale, and aluminum residue.

Cooktop safety features

Overheat protection

Each burner has overheat protection (inner temperature limiter). It turns the heating of the cooking off automatically before it overheats. As soon as the burner has cooled off, the heating turns on again.


Overheating can be caused by:

- turning a burner on without putting a pan on it,
- heating empty cookware,
- a pan with an uneven bottom not sitting evenly on the burner,
- the pan not conducting heat properly.

You will recognize activation of the overheat protection if the heat keeps turning on and off at the highest power setting.

Oven safety features

System lock for the oven

The system lock prevents the oven from being used unintentionally (see “System lock 

The system lock will remain activated even after a power failure.

Cooling fan

The cooling fan comes on automatically when a cooking program is started. The cooling fan mixes hot air from the oven cavity with cool room air before venting it out into the kitchen through vents located between the appliance door and the control panel.

The cooling fan will continue to run for a while after a program is complete to prevent moisture from building up in the oven, on the control panel or surrounding cabinetry.

When the temperature in the oven has fallen sufficiently, the cooling fan will turn off automatically.

Vented oven door

The oven door is made of glass panes that have a heat-reflective coating on part of their surface.

During operation, air is also circulated through the door to keep the outer panel cool.

The door can be removed and disassembled for cleaning purposes (see “Cleaning and care”).

Safety Door Lock for Self Clean

For safety reasons, the door is locked as soon as the Self Clean program is started. After the self-cleaning program has finished, the door will remain locked until the temperature in the oven has fallen below 535°F (280°C).

Features

PerfectClean treated surfaces

The revolutionary PerfectClean enamel is a smooth, non-stick surface that cleans easily with a sponge.

Food and soiling from baking and roasting can be easily removed from these surfaces.

Do not use ceramic knives as these will scratch the PerfectClean surface.

Follow the instructions in the “Cleaning and Care” section of this manual so the anti-stick and easy cleaning properties are retained.

The following have all been treated with PerfectClean:

- Universal tray
- Grilling and Roasting insert
- Perforated baking tray
- Round baking form

Self Clean ready accessories


The following accessories can be left in the oven during the Self Clean program.

- Shelf runners,
- FlexiClips with wire rack
- Wire oven rack

See “Cleaning and care” for more information.

Before using for the first time

Before using for the first time



 The range may only be operated after it has been installed properly. Read the operating and installation instructions carefully before installing the range..
Read the operating instructions carefully before starting up the range.

The time of day can only be changed when the mode selector is set to Off.

- Set the time of day.

Setting the time of day for the first time

The time of day is shown in 12 hour clock format.

After connection the oven to the electrical supply *12:00* will appear in the display and a  will flash under .



- Use < or > to set the time of day.
- Confirm with OK.

The time of day is now saved.

Change the time of day to a 12-hour format by setting *12h* in the settings menu *P 4* (see “Settings”).

During a power failure, the time of day will be saved for approx. 200 hours. If the power returns within this period of time the current time of day is displayed again. If the power is out for an extended period of time the time of day will need to be reset.

The time is day is turned off by default (see “Settings - *P 1*”).

The display will appear dark when the oven is turned off. The time of day continues to run unseen in the background.

Turning on the cooktop for the first time

- Remove any protective foil and stickers.
- Before first use, wipe down the appliance with a damp cloth and dry it.

Metal components are protected by a conditioning agent. Smells and vapor may occur when the appliance is used for the first time.

The smell and any vapors do not indicate a faulty connection or a defective appliance and are not harmful to your health.

Heating the oven

New ovens may have a slight odor during their first use. Heating up the oven for at least an hour with nothing in it will eliminate the odor.

Before using for the first time

Ensure that the kitchen is well ventilated while the appliance is being heated up for the first time. Close doors to other rooms to prevent the smell spreading throughout the house.

- Dry all surfaces with a soft cloth.
- Turn the oven lighting off.


Leave the oven door open until the oven interior is completely dry.

- Remove any protective wrapping and sticky labels from the oven.
- Take all accessories out of the oven and clean them (see “Cleaning and care”).
- Before heating the oven up, wipe the interior with a damp cloth to remove any dust or bits of packaging that may have accumulated in the oven cavity during storage and unpacking.
- Select the operating mode Conv Bake (Convection Bake)

The oven heating, lighting and cooling fan will turn on.

- Select the maximum temperature 475°F (250°C).
- Heat up the oven for at least one hour.
- Once the heating up process is complete, turn the mode selector to **Off** and the temperature selector to • (Off).

After heating up for the first time

 Danger of burns! Allow the oven to cool before cleaning.

- Select “Light” to turn on the oven light.
- Clean the oven interior with warm water and liquid dish soap, applied with a soft sponge or cloth.

 
How the burners work

Each burner has overheat protection, which prevents the overheating of the ceramic top (see “Overheat protection”).

Standard burners have one heating band, variable burners have two heating bands.

If a power level is set, the heating turns on and the heating band is visible through the ceramic top. The heat output of the burners depends on the power level set and is controlled electronically. This causes the “cycling” of a burner: the heating is turned on and off.

The most suitable cookware is metal pots and pans with thick bottoms that, when cold, bulge inwards slightly. On warming, the bottom extends and sits level on the cooking zone; this conducts the heat optimally.



Cold

Hot

Glass, ceramic or stoneware is **less suitable**. These materials do not conduct the heat well.

Pots and pans made of synthetic material or aluminum **are not suitable**. These melt at high temperatures,

Cookware of aluminum or with an aluminum base can cause shiny metallic spots. These spots can be removed with ceramic glass or stainless steel cleaner (see “Cleaning and Care”).

The composition of the pan bottom can affect the evenness of the cooking results (e.g., when making pancakes).

- To make optimum use of the cooking zones, choose pans with a suitable base diameter (see chapter “Cooking zone data”).
- Use only pots and pans with smooth bases. Rough bases can scratch the ceramic glass.
- Always lift the pans to move them. This will help prevent scratching.

Operating the cooktop

- Please note that the maximum diameter quoted by manufacturers often refers to the diameter of the top rim of the pot or pan. The diameter of the base (generally smaller) is more important.

Energy saving tips

- Ensure that the bottoms of pots or pans match the size of the burner or are somewhat larger. This ensures that heat is not lost unnecessarily.
- Use a lid whenever possible to minimize heat loss.
- For small quantities, select a small pan. A small pan on a small burner uses less energy than a large, only partially filled pan on a large burner.
- Cook with as little water as possible.
- Once food has come to the boil or the pan is hot for frying, reduce the heat to a lower power setting.
- When cooking for a long time, turn the burner off at least 5 or 10 minutes before the end of the cooking time. This makes use of the residual heat.

Operating the cooktop

Burner data


Burner	∅	Output in Watts at 208 V and 60 Hz	Output in Watts at 240 V and 60 Hz
left front (variable burner)	8 1/4" / 10 5/8" (21 cm / 27 cm)	2000 / 2800	2300 / 3100
left rear (standard burner)	5 11/16" (14.5 cm)	1200	1200
right rear (variable burner)	5 11/16" / 8 1/4" (14.5 cm / 21 cm)	700 / 1800	700 / 1800
right front (variable burner)	4 3/4" / 7" (12 cm / 18 cm)	1100 / 2400	1100 / 2400
		Total: 8200	Total: 8500


Setting range


	Setting range
Melting butter, chocolate, etc. Dissolving gelatin	1-2
Thickening sauces containing only egg yolk and butter Warming small quantities of liquid Keeping food warm that sticks easily Cooking rice	1-3
Warming liquid and semi-solid foods Thickening creams and sauces. Preparing omelets, lightly fried eggs Steaming fruit	3-5
Thawing frozen foods Steaming vegetables, fish Cooking pasta, legumes Swelling grains	4-6
Bringing to a boil and continued cooking of large quantities of food	7
Gentle braising (without overheating the fat) of fish, cutlets, sausages, fried eggs, etc.	8-9
Frying pancakes, etc.	9-11
Boiling large quantities of water Bringing to a boil	11-12

These settings, which refer to approx. 4 servings, should only be taken as a guide. With deep pans, larger quantities or when cooking without a lid, a higher setting is required. For smaller quantities, select a lower setting.

Operating the cooktop

 Never heat an empty pot! This can damage the glass ceramic surface.
Never leave the cooktop unattended during use!

 Hot pans on the display can cause damage to the electronics underneath.
NEVER place hot pots or pans near the display.


The burner control knobs have a stop.
Never turn the knob to the right to **0**, past the  symbol or the last number.


Turning on

- Press the burner knob and turn it to the right to the desired setting.

Turning on the second heating zone

Variable burners have a second heating zone that you can turn on.

You have to overcome slight resistance in order to turn the knob from 12 to .

- Press the burner knob in and turn it clockwise past “12” to the stop, to .

The second heating zone turns on.

- Then turn the knob to the left to the desired setting.


Turning off

- Turn the burner knob to the left to 0.

Residual heat display

When after turning on one burner, for example the left front, a specified temperature is reached, the associated residual heat indicator lights up:

A little while after turning off the burner, the residual heat indicator goes out.

 Risk of burning or scalding due to hot burners.

The burners will be hot after use.
Do not touch the burners while the residual heat indicators are on.

Energy saving tips

- Remove any accessories from the oven that you do not require for cooking.
- Only preheat the oven if the recipe or cooking chart advises.
- Try not to open the door when cooking.
- If a temperature range is given, it is best to select the lower temperature and check the food after the shortest cooking time given.
- Use the operating mode Conv Bake (Convection Bake). You can use cooking temperatures 10-30° lower than when using other modes.
- Conv Broil (Convection Broil) can be used for a wide variety of foods. Lower temperatures can be used than with other broil modes that use the maximum temperature setting.

Using residual heat

Tip: When cooking using temperatures above 285°F (140°C) and cooking durations longer than 30 minutes, you can turn the temperature selector to the • (Off) position about 5 minutes before the end of cooking. The heating elements will turn off and the residual heat in the oven will be sufficient to finish cooking the food.

Using the oven

- Place the food in the oven.
- Using the mode selector, select the required oven mode.

The oven lighting and the TwinPower fans will turn on.

- Select the temperature using the temperature selector.

The oven heating will turn on.

After the cooking process:

- Turn the mode selector to **Off** and the temperature selector to • (Off).
- Take the food out of the oven.

Cooling fan

After the cooking process the cooling fan will continue to run for a while after a program is complete to prevent moisture from building up in the oven, on the control panel or surrounding cabinetry.

When the temperature in the oven has fallen sufficiently the cooling fan will turn off automatically.

Operating the oven

Preheating the oven

The appliance only needs to be preheated in a few cases.

Most dishes can be placed in a cold oven. They will then use the heat produced during the heating phase.

The oven should be preheated in the following instances:

Conv Bake (Convection Bake)

- dark bread doughs,
- beef sirloins and tenderloins.


Surround

- cakes and pastries with a short baking time (up to 30 minutes),
- delicate mixtures,
- dark bread doughs,
- beef sirloins and tenderloins.

Rapid PreHeat

With Rapid (Rapid PreHeat) the preheating phase can be shortened.

Do not use Rapid (Rapid PreHeat) when baking pizzas or delicate mixtures (e.g. small cakes, pastries). The tops of these items will brown too quickly.

- Select Rapid (Rapid PreHeat).
- Select a temperature.
- Set the desired oven function when the temperature indicator light  goes out for the first time.
- Place the food in the oven.

The oven has a range of modes for preparing a variety of foods.

Rapid (Rapid PreHeat)

(Browning / Broiling element + Convection fan with heating element)

This function allows the oven to be heated to the desired temperature quickly. Once the desired temperature has been reached the oven function must be selected.

Bake

(Baking element)

This mode uses traditional baking techniques to perfect pies and biscuits.

Broil

(Browning / Broiling element)

Use this function for broiling or searing small quantities. Ideal for chops, ribs, browning baked dishes and toasting bread.

Surround

(Browning / Broiling element + Baking element)

This premium baking mode uses heat from the upper and lower elements to create perfect results on all baking recipes.

If using an older recipe or cookbook, set the oven temperature 10 ° lower than that recommended. This won't change cooking times.

Conv Broil (Convection Broil)

(Browning / Broiling element + Convection fans)

This allows for a lower temperature to be used then when using broil. Ideal for broiling thicker cuts of meat (e.g. roulades, chicken). This function distributes hot air from the browning / broiling element over the food using the fan.

Conv Bake (Convection Bake)

(Convection fans with heating element)

Use this mode for baking and roasting on several levels at the same time. You can cook at lower temperatures than with the Surround function because the fans distribute the heat evenly throughout the cavity for a consistent baking temperature.

Clock / Timer

Turning a cooking program On / Off automatically

You can set a cooking program to turn on or off automatically. First the mode and cooking temperature must be selected.

The maximum duration that can be set for a cooking program is 12 hours.

It is recommended to use the automatic On/Off feature when roasting. Do not delay the start of the program for too long when baking. Cake mixtures and doughs will dry out, and the leavening agents will lose their effectiveness.

Setting the cooking time

Example: Baking a cake for 1 hour 5 minutes.

- Place the food in the oven.
- Select the required oven mode and temperature.

The oven heating, lighting and cooling fan will turn on.

- Select OK.
- If necessary, move the symbol ▲ with < or > until it appears under ⌚.
- Confirm with OK.

00:00h will appear in the display along with a ▲ flashing under ⌚.



- Use < or > to set the cooking time (01:05).

- Confirm with OK.

The cooking time is saved and then counts down in minutes, with the last minute counting down in seconds.

The ⌚ symbol indicates that a cooking time has been set.

 
Setting a cooking time and finish time


Example: The time is now 11:15 AM; you want a dish with a cooking time of 90 minutes to be ready by 1:30 PM.

- Place the food in the oven.
- Select the required oven mode and temperature.


The oven heating, lighting and cooling fan will turn on.

Set the cooking time:

 - Select OK.
- If necessary, move the symbol ▲ with < or > until it appears under .
- Confirm with OK.

00:00h will appear in the display along with a ▲ flashing under .

- Use < or > to set the cooking time (01:30).
- Confirm with OK.

The cooking time  is saved and then counts down in minutes:



Set the finish time:

- Move the symbol ▲ with < or > until it appears under .

--:-- appears:




- Confirm with OK.

12:45 will appear in the display (current time of day + cooking time = 11:15 + 1:30):



- Use < or > to set the end of the cooking time (13:30).
- Confirm with OK.

The finish time  is now saved:




The oven heating, lighting and cooling fan will turn off.

As soon as the start time (13:30 - 1:30 = 12:00) has been reached, the oven heating, lighting and cooling fan will turn on.


Clock / Timer

At the end of the cooking time

- 0:00 appears in the display,
 -  flashes,
 - the oven heating and lighting will turn off,
 - the cooling fan will continue to run, and
 - a signal will sound if turned on (see “Settings - P 2”).
- Turn the mode selector to Off.
 - Take the food out of the oven.

If the dish is not cooked to your liking, you can extend the cooking time by entering a new time.

Changing the cooking time


- Select OK.
- If necessary, move the symbol ▲ with < or > until it appears under .

The cooking time remaining appears in the display.

- Confirm with OK.
- Change the cooking time with < or >.
- Confirm with OK.

The changed cooking time is now saved.

Deleting a cooking time

- Select OK.
- If necessary, move the symbol ▲ with < or > until it appears under .
- Confirm with OK.

The ▲ symbol will flash under .

- Use < to set the cooking time to *00:00*.
- Confirm with OK.

The cooking time and finish time are deleted.

- Select OK.

 
The current temperature will appear.
The oven heating remains turned on.

If you would like to complete the cooking program:

- Turn the mode selector to Off.
- Take the food out of the oven.
- Turn the oven off.

If you turn the mode selector to 0, the settings for the cooking time and the finish time will be deleted.

Deleting a finish time

- Select OK.
- If necessary, move the symbol ▲ with < or > until it appears under .
- Confirm with OK.

The ▲ symbol will flash under .

- Use < or > to set the end of the cooking time to - :- -.
- Confirm with OK.

The finish time is now deleted.

Clock / Timer

Changing the time of day

The time of day can only be changed when the mode selector is set to Off.

- Turn the mode selector to Off.
- Select OK.
- Move the symbol ▲ with < or > until it appears under ⊕.
- Confirm with OK.

The ▲ symbol will flash under ⊕.

- Use < or > to set the time of day.
- Confirm with OK.

The time of day is now saved.

During a power failure, the time of day will be saved for approx. 200 hours. When the power returns within this period of time the current time is displayed again.

After an extended power failure, the time of day will need to be reset.

Changing factory default settings

The appliance is supplied with a number of default settings (see the “Settings overview” chart).

A setting can be changed by altering its status.

The settings can only be changed when the mode selector is on Off.

- Select OK.
- If necessary, move the symbol ▲ with < or > until it appears under '≡.



- Confirm with OK.

P I appears:



- If you want to change another setting, select the appropriate number with < or >.
- Confirm with OK.



The setting is selected and the current status appears, e.g. 5 0.

To change the status:

- Set the desired status using < or >.
- Confirm with OK.

The status is saved and the setting appears again.

- If you would like to change additional settings, repeat the process.
- If you have completed changing settings, select '≡.

The settings will remain in memory even in the event of a power failure.

Clock / Timer

Settings overview

Setting	Status
<i>P 1</i> Time of day display	<i>S 0*</i> The time of day display is turned off . The display is dark when the oven is turned off. The time of day continues to run unseen in the background. If you have selected status <i>S 0</i> , the oven must be turned on before it can be used. This also applies for the Timer and Light. The oven also switches off automatically if no settings are selected within a certain period of time (approx. 30 minutes). <i>S 1</i> The time of day display is turned on and is visible in the display.
<i>P 2</i> Buzzer volume	<i>S 0</i> The buzzer is Off . <i>S 1</i> to <i>S 21*</i> The buzzer is On . The volume can be changed. The corresponding buzzer will be heard when a status is selected.
<i>P 3</i> Keypad tone	<i>S 0</i> The keypad tone is turned off . <i>S 1*</i> The keypad tone is turned on .
<i>P 4</i> Clock format	<i>24h</i> The time of day is shown in a 24-hour format . <i>12h*</i> The time of day is shown in the 12-hour format . If you change the clock after 1 pm (13:00) from a 12-hour clock to a 24-hour clock, you will need to update the hours for the time of day accordingly.

Setting	Status
<i>P 5</i> Display brightness	<i>5 1</i> to <i>5 7</i> , <i>5 4*</i> <i>5 1</i> : Minimum brightness <i>5 7</i> : Maximum brightness
<i>P 6</i> Lighting	<i>5 0*</i> The oven interior lighting is on for 15 seconds and then turns off automatically. <i>5 1</i> The oven interior lighting is permanently turned on .
<i>P 7</i> Temperature regulation	<i>0</i> <i>-3</i> to <i>3</i> The temperature can be modified so that it is slightly higher or lower than shown. The higher the level, the higher the cooking temperature.
<i>P 8</i> Demo Mode	<i>5 0*</i> Select <i>5 0</i> and press OK for approx. 4 seconds. When - - - appears in the display the demo mode is deactivated . <i>5 1</i> Select <i>5 1</i> and press OK for approx. 4 seconds. When <i>DES_</i> appears in the display the demo mode is active . The oven can be operated, but the oven heating does not work. For personal use you do not need this setting.

* Factory default

Clock / Timer

System lock

The system lock  prevents the oven from being used unintentionally.


The system lock is set off by default. This can be changed by setting the status 5:

- 5 0 = Off
- 5 1 = On



The status of the system lock can only be changed when the mode selector is in the Off position.


To activate the system lock

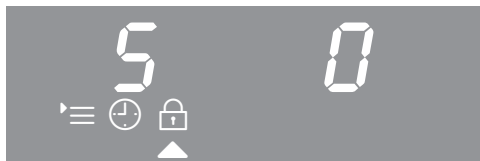- Select OK.
- Move the symbol  with < or > until it appears under .




- Confirm with OK.

The currently set status 5 0 appears and the  symbol flashes under .

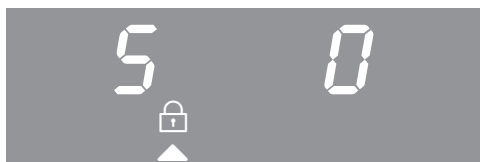


- Use < or > to set the status 5 1.

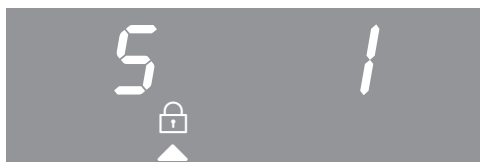

- Confirm with OK.



The system lock is turned on.

When the appliance is turned on again, the  symbol will appear in the display to remind you that the system lock has been activated.

The system lock will remain activated even after a power failure.

Deactivating the system lock for a cooking process

- Select an operating mode.




The  and  symbols will appear along with the current time of day:





- Press and hold OK until  goes out.

The oven can now be used.

Deactivating the system lock

- Turn the mode selector to Off.
- Press and hold OK until  goes out.
- Select OK.
- Move the symbol  with < or > until it appears under .
- Confirm with OK.

The currently set status *S 1* appears and the  symbol flashes under .

- Use < or > to select the status *S 0*.
- Confirm with OK.

The system lock is Off.

The  symbol disappears.

Clock / Timer

Timer

The timer can be used to time any activity in the kitchen, e.g. boiling eggs.

The timer can also be used at the same time as a cooking program if a start and finish time have been set, e.g. a reminder to stir the dish or add seasoning.


A maximum time of 99 minutes and 55 seconds can be set for the timer.

Setting the timer

Example: Boiling eggs and setting the timer for 6 minutes and 20 seconds.

- Select Timer.

00:00 will appear in the display with ▲ flashing under △:

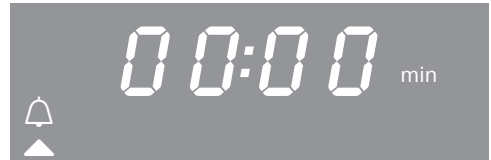

- Use < or > to set the timer as desired.



- Confirm with OK.

The timer settings are saved and will count down in seconds:



The △ symbol indicates that the timer has been set.

At the end of the timer

- 🔔 flashes,
 - the time starts counting upwards,
 - a signal will sound if turned on (see “Settings - P 2”).
- Select Timer.

The signal will turn off and the symbols in the display will go out.

Resetting the timer

- Select Timer.

The current timer appears.

- Change the time set with < or >.
- Confirm with OK.

The changed time is saved and will count down in seconds.

Canceling the timer

- Select Timer.
- Use < to reduce the timer to *00:00*.
- Confirm with OK.

The timer has been canceled.

Bake

Eating food which has been cooked correctly is important for good health.

Only bake cakes, pizza, french fries, etc. until they are golden brown. Do not overcook them.

Operating modes

Depending on how you would like the food prepared, you can use Conv Bake (Convection Bake) or Surround.

Bakeware

The bakeware used depends on the oven mode chosen and how the food is prepared.

- Conv Bake (Convection Bake):
Baking tray, Universal tray, any heat-resistant baking dishes
- Surround:
Dark metal, enamel or aluminum baking tins with a matte finish, as well as heat-resistant glass, ceramic and coated dishes can be used.
Avoid bright, shiny metal tins as they result in uneven or poor browning, and in some cases cakes might not cook properly.

- Always place baking pans on the wire rack.

Position rectangular pans with the longer side across the width of the rack. This will allow for optimum heat distribution and even baking results.

- When baking cakes with fruit toppings or deep cakes, place the pan in the universal tray to catch any spillages.

Parchment paper / Greasing the pan

All Miele accessories (baking tray, universal tray and round baking form) are treated with PerfectClean enamel.

Surfaces treated with PerfectClean enamel generally **do not need** to be greased or covered with parchment paper.

Parchment paper is only needed with:

- anything with a high salt content (e.g. pretzels, bread sticks), because sodium can damage the PerfectClean surface;
- meringues or dishes with a high egg-white content, because they are more likely to stick,
- frozen food cooked on the wire rack.

Temperature

As a general rule, select the lower temperature given in the chart.

Choosing a baking temperature higher than those recommended may reduce the cooking time, but will lead to uneven browning, and unsatisfactory cooking results.

Baking duration

Check if the food is cooked at the end of the shortest duration quoted. To check if a cake is ready insert a wooden skewer or toothpick into the center, it should come out clean.

Shelf levels

The shelf level that you place the food on for baking depends on the oven mode and the number of trays being used.

– Conv Bake (Convection Bake)

1 Tray: level 3

2 Trays: levels 1+3/2+4

3 Trays: levels 1+3+5

– Surround

1 Tray: Level 3

Bake moist cakes and muffins on a maximum of two levels at the same time.

Roast

Always follow USDA guidelines on food safety.

Operating modes

Depending on how you would like the food prepared, you can use Conv Bake (Convection Bake) or Surround.

Cookware

Any heat-resistant cookware can be used:

Roasting pans, heat-resistant glass/earthen/cast iron cookware, roasting bags, wire rack and the splash insert (if available) on top of the roasting pan.

We recommend roasting in a covered oven dish, this will ensure that enough stock will be prepared to make gravy. The oven will also stay cleaner than when roasting on the rack.

Temperature

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

When cooking with Conv Bake (Convection Bake), select a temperature 25°F (20°C) lower than when using Surround.

Select a temperature of approx. 25°F (10°C) lower than quoted in the roasting chart for meat weighing more than 6.5 lbs (3 kg). The roasting process will take longer, but the meat will cook evenly through and the skin or crackling will not be too thick.

When roasting on the rack, set a temperature approx. 10° lower than if using an oven dish.

Shelf levels

In most cases level 3 should be used. With large items, such as a turkey, use level 1 or 2.

Tips

- Browning: Browning only occurs towards the end of the roasting time. Remove the lid about halfway through the roasting time if a more intensive browning result is desired.
- Resting time: At the end of the program, take the roast out of the oven, cover with aluminum foil and let stand for about 10 minutes. This helps retain the juices when the meat is sliced.
- Roast Chicken: For a crisp skin, baste the poultry 10 minutes before the end of the cooking time with lightly salted water.

This cooking method is ideal for cooking beef, pork, veal or lamb when a tender result is desired.

First, using a cooktop sear the meat on all sides to seal in the juices.

Then place the meat in a preheated oven. It will be cooked at a low temperature for an extended time allowing the meat to become very tender.

The meat will rest and the juices start to circulate evenly throughout. This gives the meat a very tender and juicy result.

Tips

- Use fresh, lean meat that has been trimmed. Remove the bones before cooking.
- When searing, use a suitable cooking oil or fat that can withstand high temperatures (e.g. clarified butter, vegetable oil).
- Do not cover the meat during cooking.

Cooking will take approx. 2-4 hours, depending on the size and weight of the meat, as well as the desired degree of doneness and browning.

Operation

Use the universal tray with the grilling and roasting insert.

- Place the rack with the universal tray on shelf level 3.
- Select Surround and a temperature of 265°F (130°C).

- Preheat the oven along with the universal tray and wire rack for approx. 15 minutes.
- While the oven is preheating, sear the meat on all sides on the cooktop.

Danger of burns!

When the oven is hot use pot holders to insert, remove or turn the food, or when adjusting the oven shelves, etc.

- Place the seared meat on the universal tray.
- Reduce the temperature to 210°F (100°C).
- Continue cooking until the end of the cooking time.

On ovens with a clock/timer, you can set the cooking process to finish automatically (see “Clock/Timer - Setting the cooking duration”).

After the cooking program

- Meat can be carved straight from the oven. It does not need to rest.
- The meat can be left in the oven after the program is complete. This will not affect results in any way.
- The meat is at an ideal temperature to eat straight away. Serve on pre-warmed plates with a hot sauce or gravy to keep warm.

Cooking time / Core temperatures

Always follow USDA guidelines on food safety.

Slow Roasting

Meat	Time [min]	Core Temp. [°F / °C] **
Fillet of beef	80–100	138 / 59
Roast beef		
– rare	50–70	118 / 48
– medium	100–130	135 / 57
– well done	160–190	156 / 69
Pork tenderloin	80–100	145 / 63
Smoked pork chop *	140–170	154 / 68
Veal fillet	80–100	140 / 60
Veal loin *	100–130	145 / 63
Saddle of lamb *	50–80	140 / 60

* boneless

** If desired, use a roast probe to monitor the core temperature.



Danger of burns!

Broil with the oven door closed. If you broil with the door open the hot air will escape from the oven before it has been cooled by the cooling fan.

The controls will get hot.

Oven modes

Broil

For broiling thin cuts of meat and browning.


The entire Browning / Broiling element will get hot and glow red.

Conv Broil (Convection Broil)

For broiling thicker items, e.g. roulades, poultry pieces.

The Browning / Broiling element and the fan turn on alternately.

Cooking accessories

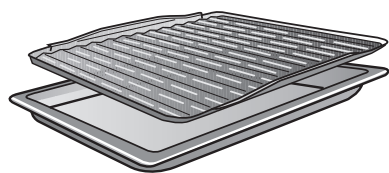

Use the universal tray with a grilling and roasting insert (if available) on top. The insert protects the oven from splatter and collects the juices underneath. The juices can then be used for gravy and sauces.

Temperature

As a general rule, select the lower temperature given in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

Preheating

Always preheat the oven for about 5 minutes with the door closed before Broiling.

Shelf levels

Select the shelf level according to the thickness of the food.

- Thin cuts: Shelf level 4 or 5
- Thick cuts: Shelf level 2 or 3

Broiling duration

- Thinner cuts of meat/slices of fish require approx. 6–8 minutes per side. Thicker pieces require more time per side. It is best to broil food of a similar thickness at the same time so that the broiling time does not vary too much.
- Turn the food halfway through broiling.

Testing doneness

Always follow USDA guidelines for safe food temperatures.

Tip: If the surface of a thicker cut of meat is browned but the center is still raw, move the food to a lower level or reduce the temperature and continue cooking. This will stop the surface from becoming too dark.

Broil


Preparing food for broiling

Rinse the meat under cold water and pat dry. Do not season the meat with salt before broiling, this will draw out the juices.

Brush the meat with oil, if necessary. Do not use other types of fat as they can easily burn and cause smoke.

Clean fish as usual. To enhance the flavor, salt or lemon can be added.

Broil

- Place the grilling and roasting insert (if available) in the universal tray.
- Place the food on top.
- Select the Broil operating mode.
- Turn the temperature selector to Broil (.
- Preheat the Browning/Broiling element for approx. 5 minutes with the door closed.




Danger of burns!

When the oven is hot use pot holders to insert, remove or turn the food, or when adjusting the oven shelves, etc.

- Place the food on the appropriate shelf level (see the “Broiling chart”).
- Close the door.
- Turn the food halfway through cooking.

Use Conv Bake (Convection Bake) without setting the temperature to gently defrost food.

The fan will turn on and circulate air at room temperature around the oven cavity.



 **Danger of salmonella poisoning.** It is particularly important to observe food hygiene rules when defrosting poultry. Always observe USDA food safety guidelines. Do not use the liquid produced during defrosting.

Tips

- Remove the packaging and place the frozen food on the universal tray or in a suitable bowl or dish.
- Use the universal tray with the rack placed on top of it for defrosting poultry. This way the food will not be lying in the defrosted liquid.
- Fish does not need to be fully defrosted before cooking. Defrost until the food has started to thaw. The surface will then be sufficiently thawed to take herbs and seasoning.

Defrosting durations

The duration needed for defrosting depends on the type and weight of the frozen food:


Frozen food	 [oz/g]	 [min]
Chicken	28/800	90–120
Meat	17.5/500	60–90
	35/1,000	90–120
Sausage	17.5/500	30–50
Fish	35/1,000	60–90
Strawberries	10.5/300	30–40
Butter cake	17.5/500	20–30
Bread	17.5/500	30–50

 Weight /  Defrosting duration

Canning

Always follow the USDA canning guidelines.

Canning containers

 **Danger of injury!**
Do not use the appliance to heat up or can food in sealed jars or containers. Pressure will build up inside them and they can explode causing damage to the appliance, as well as the risk of injury and scalding.

Only use jars designed for canning:

- Canning jars
- Jars with twist-off lids

Canning fruit and vegetables

The Conv Bake (Convection Bake) mode is recommended.

The instructions are for 6, 32 oz (1 liter) glass jars.

- Slide the universal tray onto shelf level 3. Place the jars on the tray.
- Select Conv Bake (Convection Bake) and a temperature of 300-340°F (150-170°C).
- Wait until bubbles rise evenly in the jars.

Then reduce the temperature to avoid a boil-over.

Fruit / Cucumbers

- As soon as bubbles begin to rise evenly in the jars, reduce the temperature to the lowest setting. Then, leave the jars in the warm oven for an additional 25-30 minutes.


Vegetables

- Reduce the temperature to 210°F (100°C) as soon as bubbles are visible in the jars.

	Canning time [min]
Asparagus	80-100
Carrots	50-70
Peas, Beans	80-100

- After the canning time has finished, reduce the temperature to the lowest setting and leave the jars in the oven for an additional 25-30 minutes.

After canning

 **Danger of burns!**
Use pot holders when removing the jars from the oven.

- Take the jars out of the oven.
- Cover the jars with a towel and leave to set for approx. 24 hours.
- Make sure all jars are closed properly when storing them.

Dehydrate

Dehydrating is a traditional method of preserving fruit, certain vegetables and herbs.


It is important that fruit and vegetables are ripe and not bruised before they are dehydrated.

- Prepare the food for dehydrating.
 - Peel and core apples, and cut into slices 1/4" (.5 cm) thick.
 - Core plums if necessary.
 - Peel, core and cut pears into wedges.
 - Peel and slice bananas.
 - Clean mushrooms, then either halve or slice them.
 - Remove parsley and dill from the stem.
- Distribute the food evenly over the roasting pan.
- Select Conv Bake (Convection Bake) or Surround.
- Select a temperature of 175-210°F (80-100°C).
- Place the universal tray on shelf level 3.

When using Conv Bake (Convection Bake) you can dehydrate on levels 1+3 at the same time.

Food	Dehydrating time
Fruit	2-8 hours
Vegetables	3-8 hours
Herbs*	50-60 minutes

- * Use Surround when dehydrating herbs.
- Reduce the temperature if condensation begins to form in the oven.

 **Danger of burns!**
Use pot holders when removing the dehydrated food from the oven.

- Allow the fruit or vegetables to cool down after dehydrating.

Dried fruit must be completely dry, but also soft and elastic. Juice should not escape when cut.

- Store in sealed glass jars or tins.

Frozen food

Tips

Cakes, pizza, baguettes

- Bake on parchment paper placed on the wire oven rack.
Do not use the baking tray or the universal tray for frozen foods with a large surface area. The tray could become warped and difficult to remove from the oven when hot. Additional use will make the distortion worse.
- Use the lowest temperature recommended by the manufacturer.

French fries, croquettes and similar items

- These items can be cooked on the baking tray or universal tray.
Place baking parchment on the tray so that they cook gently.
- Use the lowest temperature recommended by the manufacturer.
- Turn several times during cooking.

Preparation

Eating food which has been cooked correctly is important for good health.

- Select the oven mode and temperatures recommended by the manufacturer.
- Preheat the oven.
- Place the food in the preheated oven on the recommended shelf level.
- Check the food at the end of the shortest time recommended on the packaging.



Danger of burns!

Make sure the burners are turned off and allowed to cool completely.

Make sure the heating elements are turned off and allowed to cool completely.



Danger of injury!

The steam from a steam cleaner could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean the range.

All surfaces can discolor or be damaged if unsuitable cleaning agents are used. The front of the oven, in particular, will be damaged by oven cleaners and descalers.

All surfaces are susceptible to scratches. Scratches on glass surfaces could cause a breakage.

Remove any cleaning agent residues immediately.

Cooktop: Unsuitable cleaning agents

To avoid damaging the surfaces of your appliance, do not use:

- Liquid dish soap
- Cleaning agents containing soda, ammonia, acids, or chlorides
- Cleaning agents containing descaling agents
- Stain or rust removers
- Abrasive cleaning agents (e.g., powder cleaners and cream cleaners)
- Solvent-based cleaning agents
- Dishwasher cleaners
- Grill and oven sprays
- Glass cleaners
- Hard, abrasive brushes or sponges (e.g., pot scourers, brushes, or sponges which have been previously used with abrasive cleaning agents)
- Eraser sponges
- Sharp objects (so that the seal between the ceramic glass and the frame, or between the frame and the countertop, does not get damaged)

Dry the cooktop thoroughly after every cleaning to avoid limescale residue.

Cleaning and care

Ceramic surface

When cleaning with liquid dish soap, not all contaminants and residues are removed.

An invisible film forms, which causes discoloration of the ceramic. This discoloration cannot be removed.

Clean the cooktop on a regular basis with a special ceramic cleaner.

First wipe down the surface with a damp cloth to loosen soiling, then remove stubborn crusting with a glass scraper.

Clean the cooktop with the Miele ceramic and stainless steel cleaner (see “Optional accessories”) or a commercial ceramic cleaner and paper towel or a clean cloth. Do not put the cleaner on a hot cooktop since this may cause spotting. Please follow the manufacturer's instructions.

Then clean the cooktop with a damp cloth and dry it off. Cleaner residues will burn into the cooktop during subsequent uses, damaging the glass ceramic. Make sure you remove all residues.

Spots from lime deposits, water, and aluminum deposits (metallic spots) can be removed with a glass ceramic and stainless steel cleaner.



Danger of burns!

Risk of burns! Wear oven mitts and use a glass scraper to remove sugar, plastic or aluminum residues from the hot cooktop.

Should any **sugar, plastic or aluminum foil** spill or fall onto a hot burner while it is in use, first turn off the appliance. Then carefully scrape off these residues from the cooktop **immediately** while they are still hot, using a shielded scraper blade. Allow the appliance to cool down, and then clean the cooktop when it has cooled down as described above.

Oven: Unsuitable cleaning agents

To avoid damaging the surfaces of your appliance, do not use:

- Cleaning agents containing soda, ammonia, acids, or chlorides
- Cleaning agents containing descaling agents on the oven front
- Abrasive cleaning agents (e.g., powder cleaners and cream cleaners)
- Solvent-based cleaning agents
- Stainless-steel cleaning agents
- Dishwasher cleaners
- Glass cleaners
- Cleaning agents for ceramic cooktops
- Hard, abrasive brushes or sponges (e.g., pot scourers, brushes, or sponges which have been previously used with abrasive cleaning agents)
- Eraser sponges
- Sharp metal scrapers
- Steel wool
- Spot cleaning with mechanical cleaning agents
- Oven cleaners*
- Stainless steel scouring pads*

* Can be used to remove very heavy soiling from PerfectClean surfaces

If soiling is allowed to sit for any length of time, it may become impossible to remove. If items are used frequently without being cleaned, it may become very difficult to clean them.

Soiling is, therefore, best removed after each use.

The accessories are not dishwasher-safe.

- Soiling caused by spilled fruit juices and cake mixtures is best removed while the oven is still warm. Use caution and make sure the oven is not too hot.
- To make cleaning easier, you can dismantle the oven door and remove the side runners.

Cleaning and care

Normal soiling

There is a seal around the oven interior which seals the inside of the door.

Take care not to rub, damage or move the gasket.



Do not clean the door gasket - the door gasket is essential for a good seal.

- Remove normal soiling immediately using a clean sponge with warm water and liquid dish soap applied with a clean, damp microfiber cloth.
- After cleaning, ensure that any detergent residue is removed with clean water. This is particularly important when cleaning surfaces treated with PerfectClean enamel as detergent residue can impair the non-stick properties.
- After cleaning, dry the surfaces with a soft cloth.

Stubborn soiling


Do not use a protective coating (i.e. tin foil) to line the oven and do not use commercial oven cleaner unless certified for use in a self-cleaning oven.

Remove coarse soiling from the oven and scrape any burnt-on residues off enameled surfaces with a glass scraper.

Use the Self Clean  program. See “Cleaning the oven interior with Self Clean ” for more information.

Spilled fruit and roasting juices may cause lasting discoloration or matte patches on enameled surfaces. This does not affect the functional characteristics of the finish. Do not attempt to remove these marks. Clean them following the instructions given here.

- Baked on deposits can be removed with a glass scraper or with a non-abrasive steel wool pad, warm water and liquid dish soap.

The cavity does not need to be treated with oven cleaner as it is equipped with a Self Clean  program.

- If necessary, the scouring pad on the back of a non-scratching washing-up sponge can be used to remove the soiling after the holding time.
- After cleaning, remove all oven cleaning agent residues thoroughly with clean water, and then dry the surfaces.

Cleaning and care

Self Cleaning the oven interior

Instead of cleaning the oven by hand you can use the Self Clean program .

During self cleaning the oven interior is heated up to over 750°F (400°C). Any residual soiling is broken down and reduced to ash by the high temperatures.

This oven has three levels for self cleaning, each with a different duration:

- Level 1 for light soiling,
- Level 2 for heavier soiling,
- Level 3 for very heavy soiling.

Once the Self Clean program has been started, the door will automatically locked. The door cannot be opened again until the program has ended.

If desired, the timer can be used to delay the start of the Self Clean program.

At the end of the program any residues, such as ash from the cleaning process, can be easily wiped away.

Preparing for the Self Clean program

Non-pyrolytic accessories will be damaged by Self Clean. Remove all non-pyrolytic accessories from the oven before starting a Self Clean program. This also applies for optional accessories that are not suitable for the Self clean program.

The following accessories are suitable for cleaning with Self Clean and can remain in the oven during the program:

- Shelf runners

- Wire oven rack HBBR 30-2
- FlexiClips with wire rack HFCBBR 30-2
- Remove all accessories that are not suitable for the Self Clean program from the oven.
- Slide the wire oven rack into the top shelf level.

Heavy soiling in the oven can cause thick smoke to develop and can result in the Self Clean program being switched off. Burnt-on residues can cause lasting discoloration or dull spots on enameled surfaces.

- Before starting the Self Clean program, remove coarse soiling from the oven and scrape any burnt-on residues off enameled surfaces with a glass scraper.

Starting the Self Clean program



Risk of burns!

When self cleaning the front of the oven becomes hotter than with normal oven use.

Prevent children from touching the oven during the Self Clean program.

- Select Clean (Self Clean).



PY 1

PY 1 appears in the display. The number flashes.

Use < or > to select between PY 1, PY 2 or PY 3.


- Select the Self Clean level desired.
- Confirm with OK.

The Self Clean program will now start.

 will appear in the display.





PY 1


 will flash until the door is locked.


The oven heating and the cooling fan will then turn on automatically.

The oven light will not turn on during the Self Clean program.

To see how the Self Clean program is progressing, highlight  in the display.

- Select OK.
- If necessary, move the symbol  with < or > until it appears under .

 
The time remaining for the Self Clean program will appear in the display. The duration cannot be altered.

If you have set a timer you will hear a signal,  will flash and the time will count down. Once you press OK, the audible and visual signals will turn off. PY and the number of the Self Clean level chosen will reappear.

Cleaning and care

Delaying the start of the Self Clean program

Start the program as described and then set the desired finish time within the first five minutes of starting the program.

- Select OK.
- Move the symbol ▲ with < or > until it appears under .
- appears.

- Confirm with OK.

The display will then show the finish time calculated from the current time of day plus the duration of the selected Self Clean program.

- Set the desired finish time using < or >.
- Confirm with OK.

The finish time is now set and has been saved.

The oven heating will turn off.



The finish time can be changed at any time up until the start time for the program.

As soon as the start time is reached, the oven heating and the cooling fan will turn on. The duration will appear in the display.


 
At the end of the Self Clean program



0:00,  and  will appear in the display.

The door is locked as long as the  symbol is lit up. The  symbol will start flashing as soon as the door lock has been deactivated.

When the door lock has been deactivated:

-  goes out,
-  flashes,
- short signals will sound if the signal tone is activated (see “Settings – P 2”).

- Turn the mode selector to Off.

Acoustic and visual signals are turned off.

Danger of burns!

Danger of burns! Wait until the oven has cooled down before removing any residual soiling left in the oven compartment from the Self Clean program.

- Wipe any residues (e.g.ash) left behind after the Self Clean program out of the oven compartment and off of any accessories. The amount of ash will vary depending on how dirty the oven was.



Most soiling can be easily removed using a clean, soft sponge and a mild solution of warm water and liquid dish soap.

Depending on the degree of soiling before cleaning, there may be a visible layer of soiling across the inner glass pane on the door. This should be removed using the scouring side of a dish sponge or with a stainless steel spiral sponge and liquid dish soap.

Please note:


- There is a fiberglass seal around the oven interior which seals the inside of the door. Take care not to rub, damage or move the gasket. Do not clean the door gasket - the door gasket is essential for a good seal.
- Spilt fruit juices may cause lasting discoloration to enameled surfaces. This discoloration is permanent but will not affect the efficiency of the enamel. Do not attempt to remove these marks.

The Self Clean program is canceled

If the Self Clean program is cancelled, the oven door will remain locked until the temperature inside the oven drops to below 535°F (280°C). The  symbol will light up until the temperature has dropped below this level. The door can be opened as soon as the  symbol starts flashing.


The following will cause the Self Clean program to cancel:

- Turning the mode selector to Off.

Once the door has been unlocked,  will go out and the time of day will reappear in the display. If necessary, start the Self Clean program again.


- Turning the mode selector to a different function.


Py and  appear in the display.

Once the door has been unlocked,  will go out and *Py* will flash.

- A power failure.

Py and  appear in the display.


Once the door has been unlocked,  will go out and *Py* will flash.

When power is restored *Py* will light up until the temperature in the oven has dropped below 535°F (280°C).  will then appear in the display. The door lock releases and the time of day reappears.

Cleaning and care


Door removal

The door weighs approx. 18 kg).

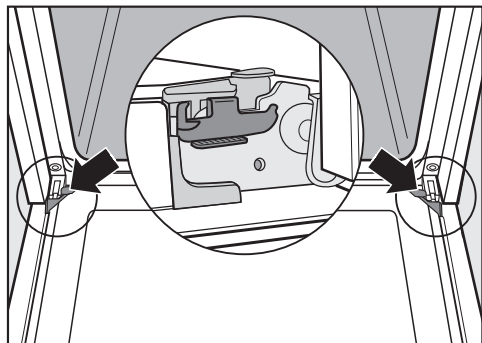

The oven door is connected to the hinges by retainers. Before removing the door from the retainers, the locking clamps on both hinges have to be released.

- Open the door fully.

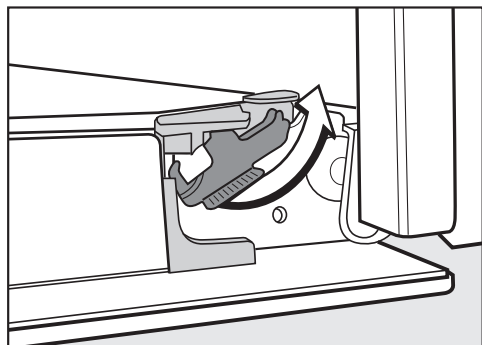


- Release the locking clamps by turning them as far as they will go.

Do not pull the door horizontally off its retainers, as they will spring back against the oven.


Do not pull the door off the retainers by the handle, as the handle could break off.

- Raise the door up till it rests partially open.

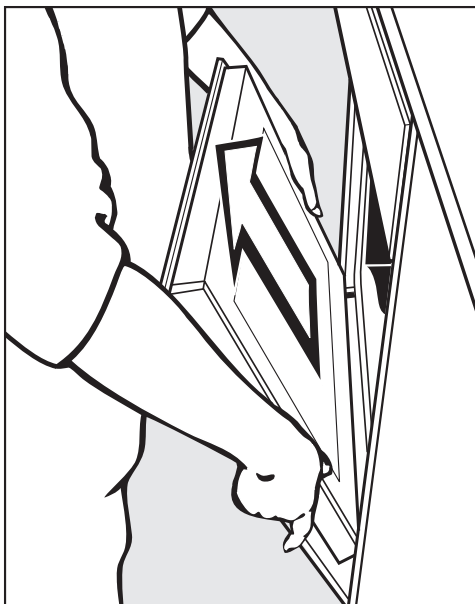

- Hold the door on either side and pull it diagonally upwards from the hinge guides. Make sure that you lift the door off straight.

Reinstalling the door

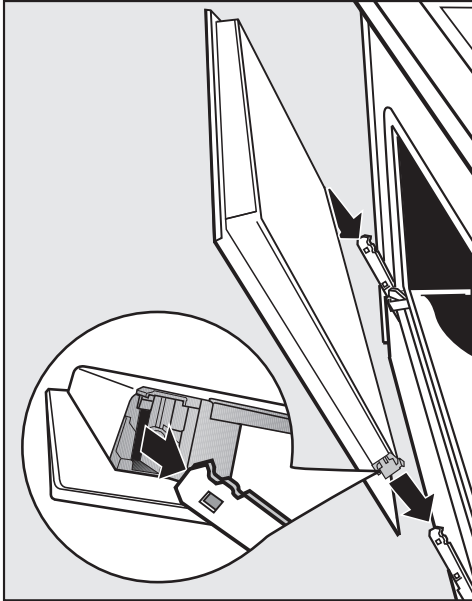


- Hold both sides of the door securely and carefully fit it onto the brackets of the hinges. Make sure that the door goes on straight.

- Open the door fully.


If the locking clamps are not locked, the door can easily become detached from the brackets and be damaged.


You must make sure that the locking clamps are locked again.

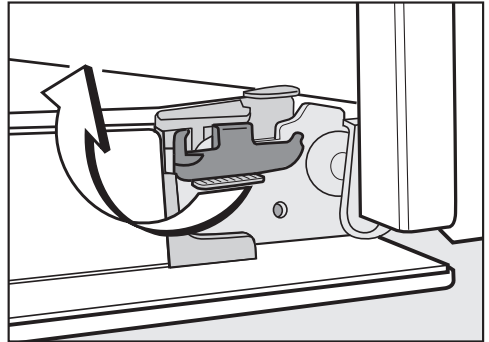


- To relock the locking clamps, turn them back up to the horizontal position as far as they will go.

Removing the shelf runners

 **Danger of injury!**
Do not use the oven without the shelf runners correctly inserted.

 **Danger of burns!** Make sure the heating elements are turned off and that the oven cavity is cool.

Cleaning and care

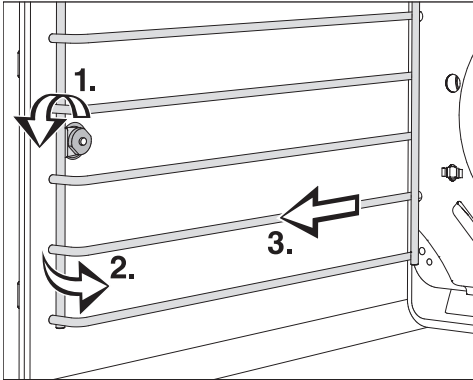

- Loosen the screw (1.).
- Pull the runners out of the holder (2.) at the front of the oven, and then pull them out of the oven (3.).

The runners can be **reinstalled** in the reverse order.

- Be sure that all parts are installed correctly.




Frequently Asked Questions

With the help of the following guide minor faults in the performance of the machine, some of which may result from incorrect operation, can be remedied without contacting the Service Department.

This guide may help you to find the reason for the fault, and how to correct it.

Problem	Possible cause and solution
<p>Cooktop or burners cannot be turned on.</p>	<p>There is no power to the appliance.</p> <ul style="list-style-type: none"> ■ Check if the breaker has tripped. Contact a qualified electrician or Miele Technical Service (for the minimum fuse rating, see the data plate). <p>There may be a technical fault.</p> <ul style="list-style-type: none"> ■ Disconnect the appliance from the power supply for approx. 1 minute: <ul style="list-style-type: none"> – Turn off the relevant fuse. – Remove the screw-in fuse completely. – Turn off the ground fault circuit interrupter (GFCI). ■ If, after resetting/replacing the fuse or the GFCI, the appliance still will not turn on, contact a qualified electrician or Miele Technical Service.
<p>There is a strange smell or vapors when the appliance is being used for the first time.</p>	<p>Metal components are protected by a conditioning agent. Smells and vapor may occur when the appliance is used for the first time. The smell and any vapors do not indicate a faulty connection or a defective appliance and are not harmful to your health.</p>


Frequently Asked Questions

Problem	Possible cause and solution
<p>The heating for one of the burners turns on and off.</p>	<p>The “cycling” of the heating is normal. It is caused by the electronic temperature control (see “How the burners work”).</p> <p>If the heating cycles at the highest power level, the overheat protection has been triggered (see “Overheat protection”).</p>
<p>This display is dark.</p>	<p>There is no power to the appliance.</p> <ul style="list-style-type: none"> ■ Check if the circuit breaker has tripped.
<p>The oven does not heat up.</p>	<p>Only an oven mode or a temperature has been selected.</p> <ul style="list-style-type: none"> ■ Select a mode and a temperature.
	<p>The system lock  is On.</p> <ul style="list-style-type: none"> ■ Turn off the system lock (see “System lock ”).
	<p>There is no power to the appliance.</p> <ul style="list-style-type: none"> ■ Check if the circuit breaker has tripped. If it has, contact a qualified electrician or Miele.
	<p>Demo mode has been activated. <i>DE5_</i> appears in the display.</p> <p>The oven can be operated but does not heat up.</p> <ul style="list-style-type: none"> ■ Deactivate Demo mode (see “Settings – <i>P 8</i>”).
<p>12:00 flashes in the display.</p>	<p>There has been a power failure.</p> <ul style="list-style-type: none"> ■ Reset the time of day (see “Using for the first time”). <p>Cooking times will also need to be reset.</p>
<p>0:00 appears unexpectedly in this display and the  symbol flashes at the same time. The signal may also be sounding.</p>	<p>The oven has been operating for an unusually long period of time, this has activated the “Safety switch-off feature”.</p> <ul style="list-style-type: none"> ■ Turn the mode selector to OFF. The oven is now ready to use.
<p><i>F 32</i> appears in the display.</p>	<p>The Self Clean program door lock is not locking.</p> <ul style="list-style-type: none"> ■ Turn the mode selector to the Self Clean program again. <p>If the problem persists, contact Miele Technical Service.</p>

Frequently Asked Questions

Problem	Possible cause and solution
F 33 appears in the display.	<p>The door lock for the Self Clean program will not deactivate.</p> <ul style="list-style-type: none"> ■ Turn the mode selector to the Off position and turn the oven off. <p>If the problem persists, contact Miele Technical Service.</p>
F XX appears in the display.	<p>A fault has occurred that you cannot resolve.</p> <ul style="list-style-type: none"> ■ Contact Miele Technical Service.
A noise is heard after the cooking process is complete.	<p>After the cooking process the cooling fan will continue to run for a while after a program is complete to prevent moisture from building up in the oven, on the control panel or surrounding cabinetry. The cooling fan will turn off automatically.</p>
The oven has turned itself off.	<p>The oven turns off automatically if a button is not pressed after a certain amount of time or after a cooking program has ended to save power.</p> <ul style="list-style-type: none"> ■ Turn the oven back on.
The oven lighting turns off after a short time.	<p>The oven is factory set to turn off automatically after 15 seconds. This setting can be changed (see “Settings overview – P 5”).</p>
Baked goods are not cooked properly after following the times given in the chart.	<p>A different temperature than that given in the recipe was used.</p> <ul style="list-style-type: none"> ■ Select the temperature required for the recipe.
	<p>The ingredient quantities are different from those given in the recipe.</p> <ul style="list-style-type: none"> ■ Double check the recipe. The addition of more liquid or more eggs will make a wetter mixture which will take longer to cook.
The browning is uneven.	<p>The wrong temperature or shelf level was selected.</p> <ul style="list-style-type: none"> ■ There will always be a slight unevenness. If the unevenness is great, check whether the correct temperature and shelf level were selected.
	<p>That material or color of the bakeware is not suitable for the oven mode selected.</p> <ul style="list-style-type: none"> ■ When using Surround, use matte, dark colored pans. Light colored, shiny pans will not produce as desirable results.

Frequently Asked Questions

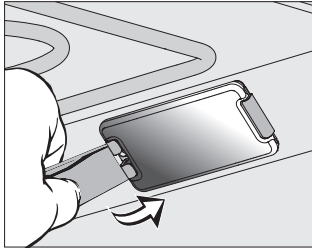Problem	Possible cause and solution
<p data-bbox="73 201 365 256">The oven lighting does not turn on.</p> 	<p data-bbox="398 201 874 229">The halogen bulb needs to be replaced.</p> <div data-bbox="404 236 1043 363" style="border: 1px solid gray; padding: 5px;"> <p data-bbox="415 244 667 280">⚠ Danger of burns! Make sure the heating elements are turned off and allowed to cool completely.</p> </div> <div data-bbox="404 379 1043 529" style="border: 1px solid gray; padding: 5px;"> <p data-bbox="415 387 925 416">The lamp cover may be damaged if it falls. When removing the cover hold it firmly so that it does not fall. Place a towel on the oven floor and open door to avoid damage.</p> </div> <ul data-bbox="398 552 1037 879" style="list-style-type: none"> ■ Disconnect the appliance from the power supply. ■ Loosen the bulb cover with the tool supplied at the back of the frame. ■ Do not touch the halogen bulb with bare fingers. Observe the manufacturer's instructions. Remove the halogen bulb. ■ Replace it with a new halogen bulb (Sylvania 66740, 120 V, 40 W, G9, FS1). ■ Press the bulb cover back into place. ■ Reconnect the oven to the electrical supply.
<p data-bbox="73 895 385 986">There is soiling in the over after the Self Clean program.</p>	<p data-bbox="398 895 1020 954">The Self Clean program burns off soiling in the oven and leaves it as ash.</p> <ul data-bbox="398 962 1009 1086" style="list-style-type: none"> ■ Using a soft sponge, warm water and liquid dish soap remove the ashes. If coarse soiling remains, start the Self Clean program again with a longer duration.
<p data-bbox="73 1102 348 1254">The rack and other accessories make a noise when being pushed into or pulled out of the oven.</p>	<p data-bbox="398 1102 1043 1190">The heat resistant surface of the shelf runners creates friction when accessories are taken in and out of the oven.</p> <ul data-bbox="398 1198 1025 1321" style="list-style-type: none"> ■ To reduce the friction, lubricate the runners with a few drops of cooking oil applied with a paper towel. Repeat this process after each Self Clean program.

Contact in case of fault

In the event of a fault which you cannot remedy yourself, please contact your Miele dealer or Miele Technical Service.

Contact information for Miele Technical Service can be found at the end of this document.

Please quote the model and serial number of your appliance when contacting Miele. Both pieces of information can be found on the data plate.

You will find this information on the data plate, which is behind the toe-kick cover.

Warranty

For further information, please refer to your warranty booklet.

**Please have the model and serial number
of your appliance available when
contacting Technical Service.**

The Miele logo consists of the word "Miele" in a bold, white, serif font, set against a solid black rectangular background.

U.S.A.

Miele, Inc.

National Headquarters

9 Independence Way
Princeton, NJ 08540
Phone: 800-843-7231
Fax: 609-419-4298
www.mieleusa.com

Technical Service & Support

Phone: 800-999-1360
Fax: 888-586-8056
TechnicalService@mieleusa.com

International Headquarters

Miele & Cie. KG
Carl-Miele-Straße 29
33332 Gütersloh
Germany

Canada

**Importer
Miele Limited**

Headquarters and Miele Centre

161 Four Valley Drive
Vaughan, ON L4K 4V8
www.miele.ca

Customer Care Centre

Phone: 800-565-6435
905-532-2272
customercare@miele.ca

HR1421

en-US, CA

M.-Nr. 09 897 981 / 04