

Operating Instructions 48" Dual Fuel Range (Convection Oven)



To prevent accidents and damage to the range, you **must** read all instructions supplied before installing or using the appliance.

Children and adults can tip over the range if has not been secured. This may lead to fatal injuries.

- This range must be secured and connected using the anti-tip device according to the installation instructions.
- If you have moved the range, slide the locking latch onto the antitip device until you feel it lock into place.
- Do not use the range if the anti-tip device has not been properly installed and engaged.
- Failure to observe the information contained in the installation instructions can lead to serious or fatal injuries for children and adults.



IMPORTANT SAFETY INSTRUCTIONS	2
IMPORTANT SAFETY INSTRUCTIONS	8
Guide to the range	20
HR 1954	20
HR 1955, HR 1956	20
Control panel	22
HR 1954	22
HR 1955, HR 1956	22
Sensor buttons	23
M Touch display	24
Symbols	25
Basic operation	26
Features	28
Model numbers	
Data plate	
Items included with this range	
Standard and optional accessories	
Shelf runners	
Universal tray and wire oven rack with safety notches	
FlexiClip telescopic runners HFC92	
Rotisserie HDGR30+	
Oven controls	34
Oven safety features	34
System lock ⊕ for the oven	
Safety shut-off	
Cooling fan	
Vented oven door	
Safety Door Lock for Self Clean	34
PerfectClean surfaces	35
Self Clean ready accessories	
Before using for the first time	36
Before using for the first time	
Heating up the oven for the first time and rinsing the steam injection syst	
Operating the oven	20
Energy saving tips	
Quick Guide	
Cooling fan	
0001111g 1ail	

Settings	
Accessing the "Settings" menu	41
Changing and saving settings	41
Settings overview	42
Language -	44
Time of day	. 44
Display	44
Clock Type	44
Clock Format	. 44
Set	44
Date	45
Lighting	45
Start screen	45
Brightness	45
Volume	46
Buzzer tones	46
Keypad tone	
Welcome melody	46
Units of measurement	46
Weight	
Temperature	46
Cooling fan	
Default temperatures	47
Self Clean	48
Safety	48
System lock ⊕	48
Sensor lock	49
Catalyzer	49
Voltage	. 50
Sensor group	. 50
Calibrate temperature	. 50
Showroom Program	
Demo Mode	. 51
Factory default	. 51
Lift panel	. 51
MyMiele	52
To add an entry	. 52
Editing MyMiele	53
Deleting entries	. 53
Sorting entries	53

Alarm + Timer	
Using the Alarm 🛱	
Setting the alarm	
Changing an alarm	
Deleting an alarm	
Using the Timer 🗘	
Setting the timer	
Resetting the timer	
Canceling the timer	56
Guide to the modes	57
Additional functions	60
Changing the temperature	60
Rapid PreHeat	61
Rapid PreHeat	
Using the Crisp function (Moisture Reduction)	
Changing the oven mode	
Setting additional durations	
Turning off automatically	
Turning on and off automatically	
Sequence of a cooking program that turns on and off automatically	
Changing the set time	
Canceling cooking	65
Moisture Plus 🏻 💮	66
Cooking with the Moisture Plus function	
Setting the temperature	
Setting the number of steam bursts	67
Timing the bursts of steam	67
Changing the type of heating	68
Injecting bursts of steam	
Automatic burst of steam	
1, 2 or 3 Bursts of steam	
Evaporating residual moisture	
Starting residual water evaporation immediately	
Skipping residual moisture evaporation	71
Gourmet Center	72
List of food types	72
MasterChef Plus	
Using MasterChef and MasterChef Plus programs	73
Notes on using these programs	
Search	74

MasterChef Plus Recipes	71
Baguette	
Banana Bread	
Brioche	
Ciabatta	
Cinnamon Raisin Bread	
French Bread	
Italian Bread	
Jalapeño Cheese Bread	
Multigrain Bread	
Rolls	
Rye Bread	
San Francisco Sourdough	86
Walnut Bread	87
White Bread	88
Whole Grain Bread	89
Favorites	
Creating a Favorite	
Starting a Favorite	91
Changing Favorites	92
Changing cooking stages	92
Changing the name	
Deleting a Favorite	
Bake	94
Roast	
Wireless roast probe	
How it works	
When to use the wireless roast probe	
Important notes on using the wireless roast probe	
Using the wireless roast probe	
Time left display	101
Using residual heat	102
Slow Roasting	
Using the Slow Roasting function	
Adjusting the Slow Roasting temperature	105
D - 1	400
Broil	106
Special Modes	110
•	
Defrost	-111

Dehydrate	112
Reheat	113
Warm-up Cookware	113
Proof	114
Pizza	114
Sabbath Program	
Gentle Bake	116
Canning	
Frozen food	
Cleaning and care	119
Unsuitable cleaning agents	
Tips	
Normal soiling	
Wireless Roast Probe	120
Stubborn soiling	121
Cleaning the oven interior with Self Clean	
Preparing for the Self Clean program	
Starting the Self Clean program	
Starting the Self Clean program	
Delaying the start of the Self Clean program	
At the end of the Self Clean program	
The Self Clean program is canceled	
Removing the door	
Reinstalling the door	127
Removing the shelf runners	
Frequently asked questions	129
Technical Service	134
Conveight and licenses	135

When using the appliance, follow basic safety precautions, including the following:

Read all instructions before installation and use of the range to prevent accidents and machine damage.

This appliance complies with current safety requirements. Improper use of the appliance can lead to personal injury and material damage.

Read all instructions before installing or using the oven for the first time. Only use the appliance for its intended purpose.

Keep these operating instructions in a safe place and pass them on to any future user.

Use

- This appliance is intended for residential use only. Use only as described in these operating instructions.
- This appliance is not intended for outdoor use.
- Only use this oven for residential cooking, and the purposes described in this manual.

Other uses are not permitted and can be dangerous.

- ▶ Risk of Fire! Do not use this oven to store or dry flammable materials.
- Persons who lack physical, sensory or mental abilities, or experience with the appliance should not use it without supervision or instruction by a responsible person.

Children

- As with any appliance, close supervision is necessary when used by children.
- Do not leave children unattended: Children should not be alone or unsupervised in the area where the oven is installed. Do not allow them to sit or stand on the appliance.
- As with any appliance, close supervision is necessary when used by children.
- Children 8 years and older may only use the oven unsupervised if they have been shown how to use it safely and recognize and understand the consequences of incorrect operation.
- Children must not be allowed to clean or maintain the appliance unsupervised.
- ► Children should not be left alone or unattended in an area where an oven is in use. Never allow children to operate, sit or stand on any part of the oven. **Caution:** Do not store items of interest to children in cabinets above an oven. Children climbing on the oven to reach these items could be injured.
- ▶ Danger of burns. The oven gets hot at the oven door glass, the vapor vent, the handle and the operating controls. Do not allow children to touch or play in, on or near the oven.
- Danger of burns.
- Children's skin is more sensitive to high temperatures than that of adults. The oven becomes hotter during self-cleaning than it does in normal use. Do not let children touch the oven while the Self Clean program is running.
- ▶ Burn Hazard Do not allow children to use the oven. Failure to do so can result in severe burns or serious injury.
- ▶ Danger of suffocation! Ensure that any plastic wrappings, bags, etc. are disposed of safely and kept out of the reach of children.

▶ Burn hazard!

Keep the spaces above and behind the range clear of any items that could draw the attention of children. Otherwise, they can be tempted into climbing onto the appliance.

▶ Danger of injury. Never allow children to hang or lean on any part of the appliance.

Technical safety

- ▶ Installation, repair and maintenance work should be performed by a Miele authorized service technician in accordance with national and local safety regulations and the provided installation instructions. Contact Miele's Technical Service Department for examination, repair or adjustment. Repairs and other work by unauthorized persons could be dangerous and may void the warranty.
- Do not carry or lift the range by the oven door handle or the control panel!
- Maintenance by the user: Never repair or replace any part of the appliance unless the instructions specifically recommend doing so. Service work may only be performed by a qualified technician.
- Changes or modifications not expressly approved by Miele may void the user's authority to operate the oven.
- A damaged range can be dangerous. Always check for visible signs of damage. Never use a damaged appliance.
- ► Reliable and safe operation of the range can only be guaranteed if it is connected to the public power supply.
- The electrical safety of the range can only be guaranteed when it is properly grounded. Compliance with this essential safety requirement is absolutely mandatory. If in any doubt, please have the building's wiring system inspected by a qualified electrician.
- Proper installation: Make sure that your appliance has been installed correctly and that it has been grounded by a qualified technician.
- The oven is not to be operated until it has been properly installed within cabinetry.

- To avoid damaging the range, make sure that the connection data (voltage and frequency) on the data plate correspond to the building's power supply before connecting the appliance.

 When in doubt, consult a qualified electrician.
- Do not use a power strip or extension cord to connect the range to electricity. These are a fire hazard and do not guarantee the required level of appliance safety.
- This appliance must not be installed and operated in mobile installations (e.g. on a ship).
- ▶ Danger of electric shock! Under no circumstances open the outer casing of the appliance.
- ▶ Do not repair or replace any part of the appliance unless specifically recommended in the operating instructions. All other servicing should be referred to a qualified technician.
- ▶ Defective components should be replaced by Miele original parts only. Only with these parts can the manufacturer guarantee the safety of the appliance.
- During installation, maintenance and repair work, e.g. if the oven lighting is broken (see "Frequently asked questions"), the range must be completely disconnected from the household electricity supply. The gas supply must be shut off. Ensure that this is the case by:
- removing the fuse,
- "tripping" the circuit breaker, or
- unplugging the unit. Pull the plug not the cord.
- Shut off the gas supply and, if necessary, disconnect the range from the gas line. Installation and maintenance of the gas connection must be performed by qualified installers, service agencies or gas providers.

- ▶ If the range is installed behind a cabinet door, do not close the door while the appliance is in operation. Heat and moisture can build up behind the closed door and cause damage to the range and to the surrounding cabinets and flooring. Do not close the door until the appliance has completely cooled down.
- ▶ Do not install kitchen cabinets above the range, since reaching over a hot stovetop to access the cabinets can result in burns. If it is necessary to install cabinets, you can reduce the risk of burns by installing a range hood that extends at least 4 3/4" (12 cm) past the bottom of the cabinets.
- The water shutoff valve must be accessible after the range has been installed.
- The protective sleeve of the water intake hose must not be damaged or become kinked. This will cause it to leak.
- ► The integrated Waterproof System offers protection against water damage if the following conditions are met:
- The range is properly installed (connected to electric and water supply).
- The range is repaired immediately whenever damage is detected.
- The water supply is shut off during extended periods of non-use (e.g. vacation).
- ► Hard water, water containing minerals and water from reverse osmosis filtering systems can damage the range. Only use filtered, softened and demineralized water from the building's plumbing to supply the range.

Proper use

The oven becomes very hot while in use. Use caution to ensure that you are not burned on the heating elements or interior surfaces of the oven. Use pot holders when placing food in the oven, adjusting the racks, etc. in a hot oven.

- Caution: Heating elements may be hot even though they are not glowing. Interior surfaces of an oven become hot enough to cause burns. External parts of the oven such as the door glass, vents, and the control panel can become hot. During and after use, do not touch, or let clothing or other flammable materials come into contact with heating elements or interior surfaces of the oven until they have had sufficient time to cool.
- ▶ Do not let food sit in the oven for more than one hour before or after cooking. Doing so can result in food poisoning or sickness.
- ▶ Use only dry, heat-resistant potholders. Moist or damp potholders used on hot surfaces may result in steam burns. Do not let potholders come in contact with oil or grease. Do not substitute dish towels or other bulky items for potholders. Do not let potholders touch hot heating elements.
- Loose fitting or hanging garments present a fire hazard. Wear proper apparel while operating the appliance.
- ▶ Do not heat unopened containers of food in the oven, pressure may cause the containers to burst and result in injury.
- Never pour cold water onto hot surfaces in a hot oven. The steam created could cause serious burns or scalding and the sudden change in temperature can damage the enamel in the oven.
- To prevent burns, always place oven racks at their desired height while the oven is cool. If the rack must be moved while the oven is hot, do not let pot holders touch hot heating elements.

- Open the door carefully to allow hot air or steam to escape before placing or removing food.
- To prevent burns, allow the heating elements to cool before cleaning by hand.
- ▶ Do not leave the oven door open unnecessarily as someone may trip over it or be injured by it.
- Never leave the appliance unattended when cooking with oil or fat. They can ignite if overheated. Do not use water on grease fires. Turn off the oven immediately and suffocate the flames by keeping the oven door closed.
- Smother the fire or flames, or use a dry chemical extinguishing agent or foam fire extinguisher.
- Never store flammable liquids and materials in, above or under an oven, or near cooking surfaces.
- Do not use the oven to heat the room. The high temperatures radiated could cause objects near the oven to catch fire.

⚠ WARNING

NEVER use this appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating of the oven.

NEVER use this appliance as storage space. Doing so may result in carbon monoxide poisoning and overheating of the oven.

∴ WARNING

NEVER cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks air flow through the oven and may cause carbon monoxide poisoning. Aluminum foil linings may also trap heat, causing a fire hazard.

- Broiling food for an excessively long time can cause it to dry out and may result in the food catching fire.
 Do not exceed recommended broiling times.
- Some foods dry out very quickly and can be ignited by high broiling temperatures. Do not use broiling modes for crisping rolls or bread, or to dry flowers or herbs. Instead use the Convection Bake a or Surround modes.
- ► Use caution when using alcohol in your recipes. Alcohol evaporates at high temperatures but may, in rare circumstances, combust on the hot heating elements.
- Plastic containers, which are not heat-resistant, melt and may ignite at high temperatures and can damage the oven. Use only plastic containers that are indicated by the manufacturer as being suitable for use in ovens.
- When residual heat is used to keep food warm, the high level of humidity and condensation can cause damage in the oven. The control panel, countertop or cabinetry may also be damaged. Do not switch the oven off completely while food is inside it, but select the lowest possible temperature for the oven mode you are using. This will ensure the fan will automatically continue to run.
- ▶ It is recommended to cover all cooked food that is left in the oven to be kept warm. This will prevent moisture from condensing on the interior of the oven.

- To avoid damage, do not place aluminum foil, pots, pans or baking sheets directly on the oven floor. This can cause a build up of heat that will damage the oven floor.
- ▶ Do not slide pots or pans on the oven floor. This could scratch and damage the surface.
- ▶ The door can support a maximum weight of 33 lbs (15 kg). Do not sit on or lean against an open door, and do not place heavy objects on it. Also make sure that nothing can get trapped between the door and the oven cavity. The oven could get damaged.
- This oven must only be used for cooking food. Fumes, vapors or heat given off by glues, plastics or flammable liquids and materials could be hazardous. Do not use it as a dryer, kiln, dehumidifier, etc.
- Do not obstruct the flow of combustion and ventilation air.
- ▶ Do not let metal objects (aluminum foil, pans) come in contact with the heating element.
- ► Make certain that the power cords of small appliances do not come in contact with or get caught in the oven door.
- When baking frozen pizzas or pies, place them on the wire rack lined with parchment paper. Do not use the baking tray or the roasting pan for frozen foods with a large surface area. The tray or pan could become warped and difficult to remove from the oven when hot. Frozen foods like french fries, chicken nuggets, etc. can be baked on the baking tray.

Cleaning and care

- ▶ Do not use a steam cleaner to clean this oven. Steam could penetrate electrical components and cause a short circuit.
- Only clean parts listed in these Operating and Installation Instructions.
- Scratches on the door glass can cause the glass to break. Do not use abrasive cleaners, hard sponges, brushes or sharp metal tools to clean the door glass.
- The shelf runners can be removed for cleaning purposes (see "Cleaning and care"). Ensure they are correctly fitted after cleaning and never operate the oven without the shelf runners inserted.
- There is a seal around the oven interior which seals the inside of the door. Take care not to rub, damage or move the gasket.
- Do not use oven cleaners. Commercial oven cleaners or oven liners of any kind should not be used in or around any part of the oven.
- Debris should be removed before running the Self Clean program. If not removed this debris can smoke causing the self-cleaning program to turn itself off.

Accessories

- Use only genuine original Miele parts. If parts or accessories from other manufacturers are used, the warranty will become void.
- ▶ Only use the Miele roast probe supplied with this oven. If it is faulty, it must only be replaced with a Miele genuine roast probe.
- ➤ Very high temperatures can damage the wireless roast probe and cause the silicon to melt. Do not keep the roast probe in the oven. Do not use the roast probe in Broil modes (except for Convection Broil).
- This oven complies with Industry Canada licence-exempt RSS standard(s) and part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- ➤ The high temperatures used during self-cleaning will damage accessories that are not designed for cleaning in the Self Clean program. Please remove these accessories from the oven before starting the Self Clean program. This also applies to accessories purchased separately (see "Cleaning and care").


Preparing your appliance for an extended vacation

▶ If you elect to turn off the water to your home for an extended period of time, please note that this may not be enough to reduce the risk of a leak. To be completely safe, you must turn off the water supply to each individual appliance.


SAVE THESE INSTRUCTIONS AND REVIEW THEM PERIODICALLY

Guide to the range

HR 1954

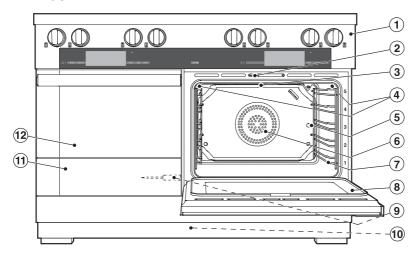

HR 1955, HR 1956

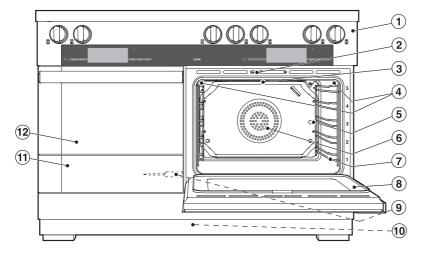


Guide to the range


- 1 Controls for Speed Oven, oven and cooktop
- ② Door lock with contact switch for Self Clean This switch ensures that the heating elements and convection fans turn off when the door is opened during use.
- 3 Browning/Broiling element
- 4 Oven interior lighting
- ⑤ Rotisserie motor
- 6 TwinPower convection fan with heating element
- Shelf runners with 5 levels
- (8) Door
- Storage for wireless roast probe
 The wireless roast probe for the oven is located on the right side of the warming drawer.
- ① Data plate The data plate is located behind the toe kick.
- 11 Warming Drawer
- 12 Speed Oven

Control panel

HR 1954

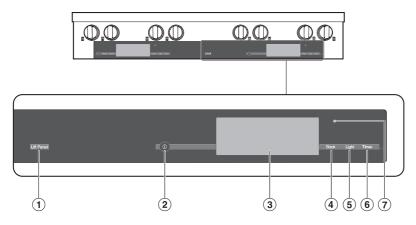

HR 1955, HR 1956

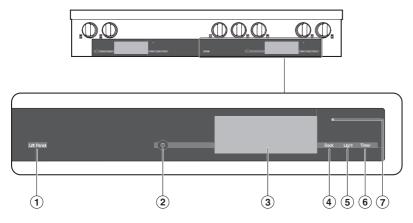

- ① Sensor button for lift panel To lift up the control panel
- ② On / Off ① button in the cut-out To turn the appliance on and off
- ③ Display To display time of day and information for operation
- 4 "Back" sensor button
 To go back one step at a time

- S "Light" sensor button To turn the oven cavity lighting on and off
- 6 "Timer" sensor button To set the timer
- Optical interface (for service technician use only)

Sensor buttons

The sensors react to touch. Each touch is confirmed with an audible tone. This tone can be turned off (see "Settings – Volume - Keypad tone").

Sensor button	Function	Notes
Lift For raising and panel lowering the control panel for	You can lift up and put down the control panel for the oven automatically or manually (see "Settings – Lift panel").	
	the oven	As soon as you start the self-cleaning cycle, the lift panel goes down automatically.
Back	To go back a step	
Light	For turning the oven interior lighting on and off	If a menu appears in the display or if a cooking process is running, touching "Light" will turn the interior light on or off.
		If the time of day display is turned off, the "Light" sensor will not react until the oven is turned on.
		The oven interior lighting turns off after 15 seconds during a cooking process or remains constantly turned on, depending on the setting selected.
Timer	For activating and deactivating timer / alarm	If a list of options is shown in the display, or if a cooking process is running, you can enter a timer duration (e.g. when boiling eggs on the cooktop) or an alarm time, i.e. a specific time, at any point (see "Alarm + Timer").
		If the time of day display is turned off, the "Timer" sensor will not react until the oven is turned on.

Control panel

M Touch display

The touch screen can be scratched by hard objects, e.g. pens and pencils. Only touch the display with your fingers.

Touching the display with your finger emits a small electrical charge, which in turn triggers an electrical pulse that is detected by the surface of the touch display.

The display is divided into three sections:



The top line shows what menu level you are currently in. Options within a menu are separated by a vertical line. If there is not enough space to show the whole path, additional options are indicated by ... I. The Time of Day, Alarm $\overset{\sim}{\bigcirc}$ and Timer $\overset{\sim}{\triangle}$ are shown in the top right-hand corner of the display.

The middle row shows the current menu and options. You can scroll to the right or left by swiping your finger across the display.

The < and > arrows at the bottom of the screen are used for scrolling to the left or right. The number of small squares between the arrows indicates the number of pages available and your position within the current menu.

Symbols

The following symbols may appear in the display:

Symbol	Description
	Some settings, e.g. display brightness and buzzer volume, are selected using a bar chart.
i	This symbol indicates that there is additional information and advice about using the oven. Select OK to access the information.
Ð	The system lock or sensor lock is active (see "Settings - System Lock ⊕"). The oven cannot be operated.
3	Alarm
\triangle	Timer
/ \(\)	Core temperature when using the wireless roast probe

Control panel

Basic operation

Each time you touch a possible option, the corresponding field will light up amber.

Selecting or opening a menu

■ Touch the desired field to select it.

Scrolling

You can scroll left or right.

- Swipe the screen, i.e., place your finger on the touch display and move it in the desired direction.
- Or: Using your finger you can tap the < and > arrows to scroll left or right.

Exiting a menu

■ Touch "Back", tap an option in the menu path at the top of the screen, or tap ... I.

Depending on the current menu, this will take you back one level or return you to the Main Menu.

Entering numbers

You can enter numbers by scrolling through the roller and touching the desired value, or by using the numerical keypad.

To enter numbers using the roller:

■ Swipe the roller up or down to select the desired number.

To enter numbers using the numerical keypad:



■ Touch in the bottom right of the input field.

The numerical keypad appears.

■ Touch the required numbers.

Once you have entered a valid value, the OK sensor will light up green. The last figure entered can be deleted using the arrow.

■ Touch "OK".

Entering letters

Enter a name using a keyboard. Try to use short, concise names.

- Select the required letters or characters.
- Touch Save.

Features

Model numbers

A list of the ovens described in these operating instructions can be found on the back page.

Data plate

The data plate is behind the toe-kick. The toe-kick cover is attached to the base of the range by magnets so it can be removed and put back again easily.

There you can find the model number, the serial number and the connection data (voltage/frequency/maximum rated load) for your range.

Have this information available when contacting Miele Technical Service.

Items included with this range

The following items are included with this appliance:

- Installation instructions for the range
- The operating instructions for the range:
 - Gas Top Part
 - Convection Oven
 - Speed Oven
 - Warming Drawer
- An anti-tip device, including screws for fastening the range
- Various accessories

Standard and optional accessories

Accessories vary depending on model. All ovens are supplied with shelf runners, a universal tray and a wire oven rack. Depending on the model, your oven may also come with the additional accessories listed.

All accessories and cleaning and care products in these instructions are designed to be used with Miele ovens.

They can be ordered from the Mieleusa.com website or Miele.

When ordering, please have ready the model number of your oven and of the desired accessories.

Shelf runners

The shelf runners are located on the right and left sides of the oven interior and provide the levels $\ ^5_1$ for inserting accessories.

The shelf level numbers are indicated on the front of the oven frame.

 
Each shelf level has two rails, one above the other:

- Slide the accessories (e.g. wire oven rack) into the oven between the rails.
- Attach the telescopic runners and wire oven rack (if available) to the bottom rail.


The shelf runners can be removed for cleaning purposes. (See "Cleaning and care".)

Universal tray and wire oven rack with safety notches

Universal tray HUBB30-1:




Wire oven rack HBBR48-2:

 

These accessories are inserted into the oven between the two rails of a side runner.


Safety notches are located on the shorter sides of the wire oven rack. These catches prevent the rack from being fully pulled out of the side runners when you only wish to pull it out partway.

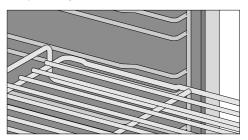

Always slide the wire oven rack into the rails on the shelf runner with the catches facing down.


Features

 
FlexiClip telescopic runners HFC92



The FlexiClip telescopic runners can be attached to any shelf level.

  Push the FlexiClip telescopic runners all the way into the oven before placing accessories on them. The accessories will then automatically sit securely in between the stoppers at either end of each runner and be prevented from sliding off.





The FlexiClip runners can support a maximum load of 33 lbs (15 kg).


Installing and removing the FlexiClip telescopic runners

Danger of burns! Make sure the heating elements are turned off and that the oven cavity is cool.


The FlexiClip telescopic runners are inserted in between the two rails that make up a shelf level.

The telescopic runner with the Miele logo must be inserted on the right.

When inserting or removing the telescopic runners, do **not** extend them.

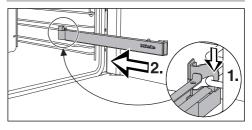

Hook the FlexiClip runner onto the front of the lower rail of a side runner (1.) and then push it along the rail into the oven compartment (2.).

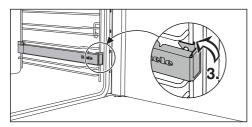


■ Then secure the FlexiClip runner to the bottom of the two rails as illustrated (3).

If the telescopic runners are difficult to pull out after inserting, you may need to pull firmly to release them.

To remove a FlexiClip telescopic runner:

Push the FlexiClip runner in all the way.

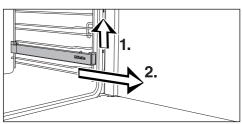

Remove the FlexiClip telescopic runner by raising it at the front (1) then pulling it forwards along the rail and out (2).

Perforated baking tray HBBL71



The perforated baking tray has been specially developed for the preparation of baked goods.

The tiny perforations assist in browning the underside of baked goods.
The tray can also be used for

dehydrating or drying food.

The surface has been treated with PerfectClean enamel for easy cleaning.

The perforated baking tray can be placed on the rack.

Grilling and Roasting insert HGBB30-1



The grilling and roasting insert is placed in the universal tray.

The drippings from the meat or poultry are collected under the insert reducing spattering in the oven. The drippings can then be used for gravy and sauces.

The surface has been treated with PerfectClean enamel for easy cleaning.

Features

Round baking form HBF27-1



This circular form is suitable for cooking fresh or frozen pizzas, flat cakes, tarts and baked goods.

The surface has been treated with PerfectClean enamel.

Gourmet Baking Stone HBS60



The baking stone is ideal for baking dishes with a crisp bottom such as pizza and bread.

The baking stone is made from a heat retaining stone and is glazed. Place the stone directly on the wire rack.


A wooden peel is supplied with it for placing food on and off the stone.

Gourmet Casserole Dishes HUB and Lids HBD


Miele Gourmet Casserole Dishes can be placed directly on the wire oven rack. They have an anti-stick coating.

The oven dishes have depths of 8 1/2" (22 cm) or 13 3/4" (35 cm). They have the same width and height.

Matching lids are also available separately.

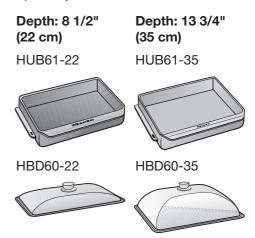


Wireless Roast Probe

 

The wireless roast probe allows you to accurately monitor the food's internal temperature during the cooking process (see "Roast - Wireless roast probe").

It is located in the storage sleeve on the front right of the Cup & Plate Warming Drawer.

Rotisserie HDGR30+

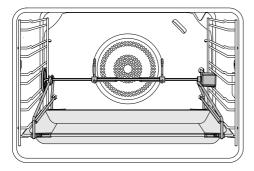

The rotisserie is ideal for broiled foods such as rolled roasts or poultry. The food browns evenly on all sides as it rotates (see "Broiling - Using the rotisserie to broil").

The rotisserie is placed on the universal tray and connected to the motors in the back wall of the oven.

The rotisserie can support a maximum weight of 11 lbs (5 kg).

Use of kebab device as well as meat clamps possible.

Opener



The opener allows you to open the cover of the over light.

Miele Oven Cleaner

Miele oven cleaner is suitable for removing stubborn soiling. It is not necessary to preheat the oven before use.

Features

Oven controls

The oven controls allow you to use the various cooking modes to bake, roast and broil.

It also allows you to access:

- the time of day display,
- a timer.
- a timer to automatically turn cooking programs on and off,
- Moisture Plus cooking,
- the MasterChef programs,
- the MasterChef Plus programs,
- the creating of a Favorite program,
- settings that can be customized.

Oven safety features

System lock ⊕ for the oven

The system lock prevents the oven from being used unintentionally (see "System lock 1").

The system lock will remain activated even after a power failure.

Safety shut-off

The oven automatically turns itself off if it is used for an exceedingly long period. The length of time depends on the oven mode being used.

Cooling fan

The cooling fan comes on automatically when a cooking program is started. The cooling fan mixes hot air from the oven cavity with cool room air before venting it out into the kitchen through vents located between the appliance door and the control panel.

The cooling fan will continue to run for a while after a program is complete to prevent moisture from building up in the oven, on the control panel or surrounding cabinetry.

When the temperature in the oven has fallen sufficiently, the cooling fan will turn off automatically.

Vented oven door

The oven door is made of glass panes that have a heat-reflective coating on part of their surface.

During operation, air is also circulated through the door to keep the outer panel cool.

The door can be removed and disassembled for cleaning purposes (see "Cleaning and care").

Safety Door Lock for Self Clean

For safety reasons, the door is locked as soon as the Self Clean program is started. After the self-cleaning program has finished, the door will remain locked until the temperature in the oven has fallen below 535°F (280°C).

PerfectClean surfaces

The revolutionary PerfectClean finish is a smooth, non-stick surface that is exceptionally easy to clean.

Food and grime from baking or roasting are easily removed.

Do not use ceramic knives, as these will scratch the PerfectClean surface.

Follow the instructions in the "Cleaning and Care" section of this manual so the anti-stick and easy cleaning properties are retained.

The following have all been treated with PerfectClean:

- Universal tray
- Grilling and Roasting insert
- Perforated baking tray
- Round baking form

Self Clean ready accessories

The following accessories can be left in the oven during the Self Clean program.

- Shelf runners
- FlexiClip telescopic runners
- Wire oven rack

See "Cleaning and care" for more information.

Before using for the first time

Before using for the first time

The range may only be operated after it has been installed properly. Read the Installation Instructions carefully before installing the range. Read the Operating Instructions carefully before using the range.

The range will turn on automatically when it is connected to the power supply.

Welcome screen

A welcome greeting is displayed. You will then be asked to select some basic settings which are needed before the appliance can be used.

■ Follow the instructions on the display.

Setting the language

- Select the desired language.
- Confirm with OK.

Setting the country

- Select the desired country.
- Confirm with OK.

Setting the voltage (electrical version)

The voltage set must match that of the house as to not damage the oven.

Confirm the voltage before setting. If in doubt contact a qualified technician.

- Select the voltage.
- Confirm with OK.

Setting the date

You can enter numbers by scrolling through and touching the roller, or by using the numerical keypad.

- Set the day, month and year.
- Confirm with OK.

Before using for the first time

Set the time of day

You can enter numbers by scrolling through and touching the roller, or by using the numerical keypad.

- Set the time of day in hours and minutes.
- Confirm with OK.

The time of day can be displayed in a 12 hour or 24 hour format (see "Settings - Time of day - Clock format").

Time of day display

You will then be asked when you want the time of day to show in the display when the oven is turned off (see "Settings - Time - Display"):

On.

The time is always visible in the display.

- Off

The display appears dark to save energy. Some modes are limited.

- Night Dimming

The time only shows in the display between 5:00 am and 11:00 pm. It turns off at night to save energy.

- Select the desired option.
- Confirm with OK.

Information regarding energy consumption will appear in the display.

- Confirm with OK.
- Follow further instructions in the display.

Set-up Successfully Completed is displayed.

Confirm with OK.

The oven is now ready to use.

If you accidentally select the wrong language, follow the instructions described in "Settings - Language"."

Before using for the first time

Heating up the oven for the first time and rinsing the steam injection system

New ovens can give off an unpleasant odor on first use. Heating up the oven for at least 1 hour with nothing in it will get rid of this smell. It is a good idea to rinse the steam injection system at the same time.

Ensure that the kitchen is well ventilated while the appliance is being heated up for the first time. Close doors to other rooms to prevent the smell spreading throughout the house.

- Remove any protective wrapping and sticky labels from the oven.
- Before heating the oven up, wipe the interior with a damp cloth to remove any dust or bits of packaging that may have accumulated in the oven cavity during storage and unpacking.
- Insert the FlexiClips with wire rack (available to order) to the shelf runners and insert all trays and the rack.
- Turn on the oven.

The main menu will appear.

- Select Moisture Plus <a>o

The default temperature is displayed (350 °F/160 °C).

The oven heating, lighting and cooling fan will turn on.

Set the highest possible temperature (475 °F/250 °C).

- Confirm with OK.
- Select Automatic burst of steam.

After a short time, a burst of steam is injected automatically.

Risk of injury!

Steam can cause scalding.

Do not open the door during a steam burst.

Heat up the oven for at least an hour.

After at least one hour:

Turn the oven off.

After heating up for the first time

_____ Danger of burns! Allow the oven to cool before cleaning.

- Turn on the oven.
- Select Light to turn on the oven light.
- Take all accessories out of the oven and clean them by hand (see "Cleaning and care").
- Clean the oven interior with warm water and liquid dish soap, applied with a soft sponge or cloth.
- Dry all surfaces with a soft cloth.
- Turn the lighting and the oven off.

Leave the oven door open until the oven interior is completely dry.

Energy saving tips

- Remove any accessories from the oven that you do not require for cooking.
- Try not to open the door when cooking.
- If a temperature range is given, it is best to select the lower temperature and check the food after the shortest cooking time given.
- The default setting for the Time of Day display Time - Display - Off will consume the least amount of energy.
- With the factory default setting
 Lighting On for 15 seconds the oven interior lighting turns off automatically after 15 seconds. It can be turned on again at any time by touching "Light".
- When cooking with automatic shutoff or the wireless roast probe, the
 oven heating will turn off
 automatically shortly before the end
 of cooking. The residual heat is
 sufficient to finish the cooking
 process. Energy Save will appear in
 the display. The cooling fan or hot air
 fan (depending on mode used) will
 remain on.
- The oven turns off automatically if a button is not pressed to save power.
 The amount of time before the oven turns off depends on the selected settings, e.g. mode, temperature, cooking duration, etc.

Operating the oven

Quick Guide

■ Turn on the oven.

The main menu will appear.

- Place the food in the oven.
- Select Operating Modes.
- Select the desired mode.

The oven mode and default temperature will appear.

The oven heating, lighting and cooling fan will turn on.

Adjust the default temperature if necessary.

The default temperature will be automatically accepted within a few seconds. If necessary, select Change to go back to the temperature setting (see "Additional functions - Changing the temperature").

Confirm with OK.

The required and the actual temperatures will appear.

You will see the temperature rising in the display. A buzzer will sound when the oven temperature is reached if this option is selected (see "Settings - Volume - Buzzer tone").

After the cooking process:

- Take the food out of the oven.
- Turn the oven off.

Cooling fan

After the cooking process the cooling fan will continue to run for a while after a program is complete to prevent moisture from building up in the oven, on the control panel or surrounding cabinetry.

When the temperature in the oven has fallen sufficiently the cooling fan will turn off automatically.

The default setting can be changed if desired (see "Settings - Cooling Fan").

Accessing the "Settings" menu

From the main menu:

■ Select 🔂 Settings.

They can be checked and changed, if needed.

Settings cannot be altered while a cooking program is in progress.

Changing and saving settings

- Select 🔂 Settings.
- Swipe across the screen until the desired setting appears, then touch it to select.

The settings which are currently selected will have a colored frame around them.

- Swipe across the screen until the desired option appears, then touch it to select it.
- Confirm with OK.

The setting is now saved.

Settings overview

Option	Available settings
Language 🏲	/ deutsch / english /
	Country
Time	Display
	On / Off * / Night Dimming
	Clock Type
	Analog * / Digital
	Clock Format
	24 h / 12 h (am/pm) *
	Set
Date	
Lighting	On / On for 15 seconds *
Start Screen	Main Menu
	Operating Modes
	Gourmet Center
	Special Modes
	MyMiele
	Favorites
Brightness	<u>-</u>
Volume	Buzzer tones
	Keypad tone
	Welcome Melody
Units of Measurement	Weight
	g / lb/oz *
	Temperature
	°C / °F *
Cooling Fan	Temperature Controlled *
	Time Controlled

^{*} Factory default

Option	Available settings
Self Clean	With reminder
	Without reminder *
Default temperatures	
Safety	System Lock
	On / Off *
	Sensor Lock
	On / Off *
Catalyzer	-
Electrical Version	208V / 60Hz
	220V / 60Hz
	240V / 60Hz
Sensor group	Sensor group 0 – 9
Calibrate Temperature	-
Showroom Program	Demo Mode
	On / Off *
Factory default	Settings
	Favorites
	Default temperatures
	MyMiele
Lift-up control panel	Automatically
	Manual *

^{*} Factory default

Language 🏲

The desired country and language can be set.

After selecting and confirming your choice, the language selected will appear in the display.

Tip: If you accidentally select a language you do not understand, select the submenu.

Time of day

Display

Select how you would like the time of day to appear in the display when the oven is turned off:

- On

The time of day will always appears in the display. To turn the "Light" on and off or use the "Timer" touch the relevant sensor.

Off

The display is turned off to save energy. The oven has be to be turned on before you can use it. This also applies when using the Alarm + Timer and the oven light.

- Night Dimming

To save energy, the time is only visible in the display between 5:00 am and 11:00 pm. The rest of the time it is not visible.

Clock Type

You can choose from an analogue clock face or a digital (h:min) display.

The date will also appear in the digital clock display.

Clock Format

You can select the clock format for the time of day:

24 h

The time of day is shown in a 24 hour clock format.

12 h (am/pm)

The time of day is shown in a 12 hour clock format.

Set

Set the hours and the minutes.

If there is a power failure, the current time of day will reappear once the power has been restored. The time is stored in memory for about 200 hours.

Date

Set the date.

When the oven is turned off, the date only appears if the oven is set to "Time – Clock Type – Digital".

Lighting

- On

The interior lighting is turned on during the entire cooking period.

On for 15 seconds

The oven lighting turns off 15 seconds after a program starts. Touching "Light" turns it on for another 15 seconds.

Start screen

The main menu will appear in the display when the oven is turned on. You can change this default setting so that, for instance, the oven modes or MyMiele settings appear in the display.

Brightness

The display brightness is represented by a bar with seven segments.

■ Select Darker or Lighter, to change the brightness of the display.

Volume

Buzzer tones

The volume is represented by a bar with seven segments.

Maximum volume is selected when all segments are filled. If none of the segments are filled, the volume is turned off.

- Select Quieter or Louder, to adjust the volume.
- Select On or Off to turn the buzzer tones on or off.

Keypad tone

The volume is represented by a bar with seven segments.

Maximum volume is selected when all segments are filled. If none of the segments are filled, the volume is turned off.

- Select Quieter or Louder, to adjust the volume.
- Select On or Off, to turn the keypad tone on or off.

Welcome melody

You can turn the welcome melody on or off. It sounds when the On / Off button ① is touched.

Units of measurement

Weight

g

The weight of food in MasterChef programs is shown in grams.

lb/oz

The weight of food in MasterChef programs is shown in pounds and ounces.

Temperature

- °C

The temperature is displayed in Celsius.

– °F

The temperature is displayed in Fahrenheit.

Cooling fan

The cooling fan will continue to run for some time after the oven has been turned off to prevent humidity from building up in the oven, on the control panel or in the surrounding cabinetry.

Temperature Controlled

The cooling fan turns off when the temperature in the oven drops below 160°F (70°C).

- Time Controlled

The cooling fan will turn off after approx. 25 minutes.

Condensation can cause the cabinetry and the countertop to be damaged. This could lead to corrosion of the appliance.

When keeping food warm in the oven, increases to the Time Controlled setting can lead to condensation of the control panel, moisture on the countertop and on the cabinetry. Do not adjust the Time Controlled setting and try not to leave food in the warm oven.

Default temperatures

If you often cook with temperatures that differ from the default, it makes sense to change the default temperatures.

After selecting this option, a list of oven modes will appear in the display.

■ Select the desired mode.

The default temperature is displayed along with the available temperature range.

- Change the default temperature.
- Confirm with OK.

Self Clean

- With reminder

A reminder to run the Self Program program will appear in the display.

- Without reminder

You will not be reminded to run the Self Clean program.

Safety

System lock 🔂

The system lock prevents the oven being turned on inadvertently.

The system lock will remain activated even after a power failure.

Select On to activate the system lock.

The timer can still be used when the system lock is active.

- On

The system lock is now active. If you want to use the oven, touch ⊕ for at least 6 seconds.

- Off

The system lock is not active. The oven can be used as normal.

Sensor lock

The sensor button lock prevents you from accidently turning the oven off or changing a cooking program.

- On

Before you can use a mode, touch \bigcirc for at least 6 seconds.

- Off

The buttons respond immediately to a finger touch.

Catalyzer

The level of odor reduction is represented by a bar with seven segments.

Maximum odor reduction is selected when all segments are filled. If none of the segments are filled the catalyzer is turned off.

- Select Minimum or Maximum to change the level of odor reduction.
- Select On or Off to turn the catalyzer on and off.

Voltage

Setting the voltage (electrical version)

- Select the desired voltage and corresponding frequency.
- Confirm with OK.

Sensor group

Your oven was set at the factory to automatically detect the wireless roast probe supplied. If you have purchased a new Miele roast probe, you will need to reset the sensor group (e.g. to P1-D01-0000001).

Select the sensor group that is printed on the metal tip of the wireless roast probe.

The sensor group is the second digit of the twelve-digit code (P0 – P9).

Confirm with OK.

Calibrate temperature

Using temperature calibration the temperature can be modified, in all modes and Gourmet Center (oven) and MasterChef (speed oven) programs, so that it is slightly higher or lower than shown.

The temperature calibration is represented by a bar with seven segments.



If all of the segments are filled the oven temperature is much higher than indicated in the display. If no segment is filled the oven temperature is much lower than indicated.

- Select + or -, to adjust the temperature calibration.
- Confirm with OK.

Showroom Program

This mode enables the oven to be demonstrated in showrooms without heating up. It should not be set for domestic use.

Demo Mode

If you have demo mode activated
Demo Mode is active. The appliance will
not heat up will appear when you turn
on the oven.

- On

Touch OK for at least 4 seconds to activate demo mode.

- Off

Touch for at least 4 seconds to deactivate demo mode. The oven can then be used as normal.

Factory default

Settings

Any settings that have been altered will be reset to the factory default setting.

Favorites

All Favorites will be deleted.

- Default temperatures

Any default temperatures that have been changed will reset to the factory default settings.

MyMiele

All MyMiele entries will be deleted.

Lift panel

Regardless of the setting selected, as soon as you start the self-cleaning cycle, the lift panel goes down automatically.

- Automatically

The lift panel lifts up automatically as soon as you switch the oven on.

The lift panel goes down automatically as soon as you switch the oven off.

Manual

Touch the lift panel sensor button to lift the control panel up and put it down.

MyMiele

You can personalize your oven using the MyMiele ♣ in the function by inputting frequently used processes.

It is particularly useful with Gourmet Center (oven) and MasterChef (speed oven) programs as you do not need to work through every screen in order to start your program.

You can also set processes that you have entered into MyMiele to appear in the Start screen (see "Settings – Start screen").

To add an entry

You can add up to 20 entries.

- Select MyMiele.
- Select Add entry.

You can select options from the following categories:

- Operating Modes [
- Gourmet Center Auto
- Special Modes 🛱
- Favorites 🚹
- Confirm by touching OK.

The option selected appears in the list together with the corresponding symbol.

■ Proceed as described above for any other entries. You will only be able to choose from options which have not already been selected.

Editing MyMiele

After selecting Edit you can

- add entries as long as MyMiele contains fewer than 20 entries,
- delete entries,
- sort entries as long as MyMiele contains more than 4 entries.

Deleting entries

- Select MyMiele.
- Select Edit.
- Select Delete entry.
- Select the entry that you want to delete.
- Confirm with OK.

The entry will then be removed from the list.

Sorting entries

The order can be rearranged as long as there are more than 4 entries.

- Select MyMiele.
- Select Edit.
- Select Sort entry.
- Select the entry.
- Select the position you want to move it to.
- Confirm with OK.

The entry will now appear in the position selected.

Alarm + Timer

Using "Timer", you can set an alarm for a specific time or set the timer duration to time an activity in the kitchen e.g. boiling eggs.

Two alarms can be set simultaneously, two timer durations or an alarm and a kitchen timer duration.

Using the Alarm 🖔

The alarm can be used to set a specific time at which the oven buzzer will sound.

Setting the alarm

If the setting Time - Display - Off is selected, you will need to turn the oven off before setting the alarm. The alarm time will then appear in the display when the oven is turned off.

- Select "Timer".
- Select New Alarm.
- Set the time for the alarm.
- Confirm with OK.

When the oven is switched off, the alarm time and (3) will appear instead of the time of day.

If you are cooking at the same time or if you are in a different menu, the alarm time and 👸 will appear in the top right-hand corner of the display.

At the set alarm time

- the Alarm symbol will flash next to the time in the display.
- a buzzer will sound if turned on (see "Settings - Volume - Buzzer tones").
- Select "Timer" or the alarm in the upper right of the display.

The buzzer will turn off and the symbols in the display will go out.

Changing an alarm

Select the alarm in the upper right of the display or select "Timer" and the desired alarm.

The alarm selected appears.

- Set the new time for the alarm.
- Confirm with OK.

The adjusted alarm time is now saved and will appear in the display.

Deleting an alarm

Select the alarm in the upper right of the display or select "Timer" and the desired alarm.

The alarm selected appears.

Select Reset.

The alarm will be deleted.

Using the Timer \triangle

The timer can be used to time any activity in the kitchen, e.g. boiling eggs.

The timer can also be used at the same time as a cooking program if a start and finish time have been set, e.g. a reminder to stir the dish or add seasoning.

A maximum time of 9 hours and 59 minutes can be set for the timer.

Tip: Use the timer in Moisture Plus os to remind you to inject the bursts of steam at the desired time.

Setting the timer

When the setting Time - Display - Off is set the oven must be turned on to set the timer. The timer can then be seen counting down in the display when the oven is turned off.

Boiling eggs and setting the timer for 6 minutes and 20 seconds

- Select "Timer".
- Select New Timer Time.
- Set the timer for the required time.
- Confirm with OK.

When the oven is turned off, the timer duration counts down in the display and \triangle appears instead of the time of day.

If you are cooking at the same time or if you are in a different menu, the timer duration and \triangle will appear in the top right-hand corner of the display.

Alarm + Timer

At the end of the timer

- the Timer symbol ☐ flashes,
- the time starts counting upwards,
- A buzzer will sound if turned on (see "Settings - Volume - Buzzer tones").
- Select "Timer" or the timer in the upper right of the display.

The buzzer will turn off and the symbols in the display will go out.

Resetting the timer

Select the timer in the upper right of the display, or select "Timer" and the desired timer.

The time previously set appears.

- Set a new timer duration.
- Confirm with OK.

The changed time is saved and will count down in seconds.

Canceling the timer

Select the timer in the upper right of the display, or select "Timer" and the desired time.

The time previously set appears.

■ Select Reset.

The timer has been canceled.

The oven has a wide range of modes for preparing a variety of foods.

Due to country-specific preferences for preparation of food, default temperatures and temperature ranges in °F and C° do not correspond. The temperature values have been defined as given in the chart.

Oven modes	Default	Temperature
	temperature	range
Convection Bake 👃	350 °F (160 °C)	75–475 °F
Use this mode for baking and roasting on several levels at the same time. You can cook at lower temperatures than with the Surround mode because the fan distributes the heat evenly throughout the cavity for a consistent baking temperature.		(30–250 °C)
Surround	350 °F (180 °C)	75–525 °F
This premium baking mode uses heat from the upper and lower elements to create perfect results on all baking recipes.		(30–280 °C)
Moisture Plus 🕬	350 °F (160 °C)	275–475 °F
Infuse up to 3 bursts of moisture, either manually or time driven, throughout the cooking program to ensure a soft, moist interior with a crispy crust. MasterChef Plus programs use Moisture Plus during the cooking/baking process.		(130–250 °C)
Intensive &	400 °F (170 °C)	125–475 °F
This mode gently circulates heated air from the lower heating element using the fan to create a brick oven environment. Ideal for baking pizza, focaccia, pies and tarts that require a crisp base and moist toppings.		(50–250 °C)
Auto Roast 🕒	375 °F (160 °C)	200–450 °F
For a premium result, the meat is seared at a high temperature keeping meat tender and juicy.		(100–230 °C)

Guide to the modes

Oven modes	Default temperature	Temperature range
Surround Roast	400 °F (180 °C)	75–525 °F
For roasting traditional recipes, e.g. pot roast, and braising or cooking at low temperatures.		(30–280 °C)
Convection Roast 👃	375 °F (160 °C)	75–475 °F
This mode uses the convection fan to circulate heated air throughout the oven. Ideal for cooking delicate cuts of meat, fish and crispy poultry.		(30–250 °C)
Bake	375 °F (190 °C)	200–525 °F
This mode uses traditional baking techniques to perfect pies and biscuits.		(100–280 °C)
Browning	350 °F (190 °C)	200–475 °F
For a perfectly browned topping, for example when making a gratin or browning the top of a casserole.		(100–250 °C)
Maxi Broil ""	500 °F (240 °C)	400–575 °F
For broiling meats e.g. steak, chops, kebabs, etc. The entire Browning / Broiling element will glow red to produce the required heat.		(200–300 °C)
Broil T	500 °F (240 °C)	400–575 °F
For grilling smaller quantities of steak, chops, kebabs, etc.		(200–300 °C)

Guide to the modes

Oven modes	Default temperature	Temperature range
Convection Broil	400 °F (200 °C)	200–500 °F
This mode distributes hot air from the Browning/Broiling element over the food using the fan. This allows for a lower temperature to be used then when using Broil . Ideal for broiling thicker cuts of meat (e.g. chicken, roulades).		(100–260 °C)
Rotisserie 😜	400 °F (200 °C)	
The rotisserie evenly broils and adds a finishing touch to items such as stuffed meat, tied roasts, poultry, vegetables and kabobs.		(100–260 °C)
Gentle Bake	350 °F (190 °C)	200–475 °F
A combination of different heating elements ensures excellent baked good, gratins and lasagna.		(100–250 °C)

You have placed the food in the oven, selected a mode and set the temperature.

By selecting Additional Settings you can adjust cooking times and adjust additional settings.

- Select Change.
- Select Additional Settings.

Additional options will appear in the display for you to select for change if desired.

- Duration
- Core temperature (This will only appear if you are using the wireless roast probe. You cannot set a cooking duration when using the roast probe.)
- Ready at
- Start at (This will appear if a Duration or Ready at time has been set.)
- Rapid PreHeat (This only appears if a temperature of more than 210°F (100°C) has been set for Convection Bake / Convection Roast , Auto Roast , Surround / Surround Roast or Moisture Plus .
- Crisp function (This moisture reduction feature will allow surfaces to crisp on the outside.)
- Change type of heating (This option will only appear with Moisture Plus of Steam You can combine bursts of steam with another type of heating.)
- Change Operating Mode (You can change the cooking mode during operation.)

Changing the temperature

As soon as a cooking mode is selected, a default temperature will appear in the display together with its possible range (see "Guide to the modes").

- If the default temperature is suitable for your recipe, confirm it with "OK".
- If it is not suitable for your recipe, you can change it for this particular cooking program.

You can also permanently reset the default temperature to suit your personal cooking habits (See "Settings - Default temperatures").

Example: You have selected Convection Bake 🔊 and 350°F (170°C) and can see the temperature increasing.

You want to reduce the target temperature to 310°F (155°C).

- Select Change.
- Change the temperature.
- Confirm with OK.

The adjusted target temperature is saved. The target and actual temperatures are displayed.

Rapid PreHeat

Rapid PreHeat can be used to speed up the preheating phase.

The Rapid heat-up function switches on automatically if you set a temperature of more than 212°F (100°C) for Convection Bake / Convection Roast , Auto Roast , Surround and Moisture Plus .

You can turn-off Rapid PreHeat for a relevant cooking process.

Rapid PreHeat

– On

The Browning / Broiling and convection heating elements turn on together with the fan to enable the oven to reach the required temperature as quickly as possible.

Off

Only the heating elements associated with the cooking program are turned on.

To turn the Rapid PreHeat function off:

- Select Change.
- Select Additional Settings.
- Select Rapid PreHeat.

In Rapid PreHeat, Off will appear.

Confirm with OK.

Rapid PreHeat has been deactivated.

Instead of Rapid PreHeat, Preheating will appear in the display.

- Select the required oven mode and temperature.
- Wait for the preheating phase to complete.

A buzzer will sound when the set temperature is reached, if the buzzer is set (see "Settings").

Place the food in the oven.

Using the Crisp function (Moisture Reduction)

It is a good idea to use this function when cooking items which are moist on the inside but which should be crispy on the outside, e.g. french fries.

It is also suitable for fruit cakes, such as apple cake.

You have placed the food in the oven, selected a mode and set the temperature.

You can activate the "Crisp function" with any oven mode. It must be activated separately for a cooking process. For best results, activate it at the beginning of the cooking process.

- Select Change.
- Select Additional Settings.
- Select Crisp function.

In Crisp function, On will appear.

Confirm with OK.

Moisture reduction is now activated.

Changing the oven mode

You can change the oven mode during operation.

- Select Change.
- Select Additional Settings.
- Select Change Operating Mode.
- Select the desired mode.

The new mode will appear in the display together with its default temperature.

- Change the temperature, if necessary.
- Confirm with OK.

The oven mode has been changed.

The times entered will be kept.

Setting additional durations

You have placed the food in the oven, selected a mode and set the temperature.

By entering Duration, Ready at or Start at you can automatically turn the cooking program on or off.

Duration

Enter the cooking duration required. Once the duration set has elapsed, the heating will turn off automatically. The maximum duration that can be set is 12:00 hours.

A cooking duration cannot be entered if you are using the wireless roast probe. When using the roast probe, the cooking duration is determined by when the set core temperature is reached.

- Ready at

You can specify when you would like the cooking program to complete. The oven will turn off automatically at the time set.

A Ready at time cannot be entered if you are using the wireless roast probe. When using the roast probe the end time is determined by when the set core temperature is reached.

- Start at

Set the time you would like cooking to start at. The oven will turn on automatically at the time set.

Start at can only be used together with Duration or Ready at, except when using the wireless roast probe.

Turning off automatically

It is now 11:45. The food takes 30 minutes to cook and should be ready at 12:15.

Select Duration and set 00:30 h or select Ready at and set the time for 12:15.

The oven will turn off automatically after this duration has elapsed or the time set has been reached.

Setting the duration

- Select Change.
- Select Additional Settings.
- Set the cooking duration.
- Confirm with OK.

Setting the "Ready at" time

- Select Change.
- Select Additional Settings.
- In the Ready at field, set the time at which the food should be ready.
- Confirm with OK.

Turning on and off automatically

It is recommended to use the automatic On/Off feature when roasting. Do not delay the start of the program for too long when baking. Cake mixtures and doughs will dry out, and the leavening agents will lose their effectiveness.

To turn a cooking program on and off automatically, you have a choice of how to enter the time parameters:

- Duration and Ready at
- Duration and Start at
- Ready at and Start at

It is now 11:30. The food takes 30 minutes to cook and should be ready at 12:30.

- Select Change.
- Select Additional Settings.
- In the Duration field, set 0:30 h.
- In the Ready at field, set 12:30 h.
- Confirm with OK.

The Start at time will be automatically calculated. Start at 12:00 will appear in the display.

The oven will turn on automatically when this time is reached.

Sequence of a cooking program that turns on and off automatically

Up until the start time the mode, the selected temperature, Start at and the start time will appear in the display.

After the program has started you can follow the preheating phase in the display until the required temperature has been reached.

Once this temperature is reached, a buzzer will sound if turned on (see "Settings - Volume - Buzzer tone").

After the preheating phase the remaining time will appear in the display.

The time will count down in the display. The last minute counts down in seconds.

At the end of the cooking process a buzzer will sound if turned on (see "Settings - Volume - Buzzer tones").

The oven heating and lighting are turned on. Program Finished appears in the display.

You have the option to save the program as a Favorite (see "Favorites") or to increase the cooking duration using Change. Select "Back" to go back to the main menu.

During the cooling down phase the cooling fan will continue to run.

Changing the set time

Select Change.

All options that can be changed will appear.

- Change the desired time.
- Confirm with OK.

These settings will be deleted in the event of a power failure.

Canceling cooking

■ Touch "Back" twice.

Cancel Cooking? appears in the display.

Select Yes.

The oven heating and lighting will turn off, and any durations set will be deleted

Moisture Plus Oss

Your oven is equipped with a steam injection system for cooking with moisture. Baking, roasting and cooking with Moisture Plus of guarantees optimized steam and air conduction for excellent cooking and browning results.

After selecting Moisture Plus of you need to set the temperature and the number of bursts of steam.

Available options are:

- Automatic burst of steam
 This requires enough water for one burst of steam. The burst of steam will be injected into the oven automatically after the heating-up phase.
- 1 Burst of steam
 - 2 Bursts of steam
 - 3 Bursts of steam

You have to release the bursts of steam yourself.

The steam bursts are injected into the oven cavity during the cooking program. The steam inlet is located on the ceiling of the oven interior in the rear left corner.

One burst of steam takes approx. 5–8 minutes. The number of bursts of steam and when they are injected will depend on the type of food being cooked:

- Yeast doughs will rise better if steam is injected at the beginning of the program.
- Bread and rolls will also rise better if exposed to steam at the start.
 Injecting a burst of steam at the end of the program will give the bread and rolls a shiny crust.

 When roasting meat with a high fat content, injecting steam at the beginning of roasting will help render the fat.

Moisture Plus is not suitable for mixtures which contain a lot of moisture, such as choux pastry and meringues, as the addition of steam does not allow them to dry out sufficiently.

Cooking with the Moisture Plus of function

It is normal for condensation to form on the inside of the door during steam injection. This will dissipate during the course of the cooking program.

- Prepare the food and place in the oven if no preheating is required.
- Select Operating Modes.
- Select Moisture Plus [◊55].

The default temperature (350°F/160°C) is displayed

The oven heating, lighting and cooling fan will turn on.

Setting the temperature

- Set the required temperature.
- Confirm with OK.

Setting the number of steam bursts

The oven will draw in water automatically from the water supply and then release the steam at the specified times. You will hear some pumping noises during the water intake process.

- If you would like a burst of steam to be automatically injected into the oven after the heating-up phase. select Automatic burst of steam.
- If you would like to inject one or more bursts of steam manually at specific times, select 1 Burst of steam, 2 Bursts of steam or 3 Bursts of steam.

Timing the bursts of steam

This option will only appear in the display after you have selected 1, 2 or 3 bursts of steam.

Tip: If you have selected more than one burst of steam, the second burst should be released at least 10 minutes after starting the program.

Manual bursts of steam

■ To inject the bursts of steam yourself, select Manual.

Time-controlled steam

- If you want to set a time for injecting the bursts of steam, select Time Controlled.
- Set the desired time for each burst of steam. The oven will then release the steam at the specified times. The time begins counting down when the program is started.
- Confirm by touching OK.

Moisture Plus **O**SS

Changing the type of heating

You can combine Moisture Plus with four different heating types (Convection Bake, Surround, Intensive and Auto Roast). The default setting is Convection Bake.

- Select Change.
- Select Change type of heating.
- Select the desired mode.
- Confirm by touching OK.

The cooking program will then continue using the different type of heating selected.

Injecting bursts of steam

Steam can cause scalding. Do not open the door during bursts of steam. Also, condensation on the sensors will cause then to have a slow reaction time

Automatic burst of steam

Automatic burst of steam appears in the display.

Once the preheating phase has been completed, the automatic burst of steam is injected.

The water will vaporize in the oven while steam is being released and Burst of steam active will appear in the display.

After the burst of steam Burst of steam, completed will appear in the display.

■ Continue cooking until the end of the cooking duration.

1, 2 or 3 Bursts of steam

Manual bursts of steam

When Manual has been selected, you can trigger bursts of steam once Start Manual burst of steam appears.

Please wait until the preheating phase is completed to allow the steam to be distributed evenly by the warm air in the oven.

Tip: Set the "Timer" as a reminder.

Select Start Manual burst of steam.

The burst of steam will be released and Burst of steam active will appear in the display.

■ Proceed as described to inject further bursts of steam.

Burst of steam, completed will appear in the display after each burst of steam.

■ Continue cooking until the end of the cooking duration.

Time-controlled steam

The oven will release the steam after the specified amount of time.

Evaporating residual moisture

When cooking with added moisture, the water will be equally distributed between the number of steam bursts and completely used up, as long as the program is not interrupted.

However, if a program that uses added moisture is interrupted (either manually or due to a loss of power) before all the bursts of steam have been injected, the unused water will remain in the evaporation system.

The next time the Moisture Plus of mode or a MasterChef Plus program is used, Evaporate Residual Moisture? will appear in the display with the options Skip and Yes.

It is best to start the residual water evaporation right away so that only fresh water is steamed onto the food during the next cooking program.

The residual moisture evaporation process

The oven will heat up and the residual water in the oven compartment will evaporate.

Depending on the amount of water, this can take up to approximately 30 minutes.

Steam can cause scalding. Do not open the door.

The moisture will condense on the door and in the oven compartment and needs to be wiped off after the oven has cooled down.

Starting residual water evaporation immediately

Steam can cause scalding. Do not open the door while the residual water is being evaporated.

■ Select the Moisture Plus os mode or a MasterChef Plus program.

Evaporate Residual Moisture? will appear in the display.

Select Yes.

Evaporate Residual Moisture and a time then appear in the display.

The evaporation process will start. You can monitor the remaining time in the display.

The time displayed depends on the amount of water in the evaporation system. This time may be corrected during the evaporation process to reflect the actual amount of water left in the system.

At the end of the residual water evaporation process, Program Finished appears in the display.

■ Touch the "Back" sensor.

A cooking process using Moisture Plus or a MasterChef Plus program can now be carried out.

During residual water evaporation, moisture will condense on the door and in the oven interior. Be sure to wipe away the condensation once the interior has cooled down.

Skipping residual moisture evaporation

/!\ Skipping the residual moisture evaporation process can cause water to overflow into the oven cavity.

Do not cancel the evaporation process.

■ Select the Moisture Plus function or a MasterChef Plus program.

Evaporate Residual Moisture? appears.

■ Select Skip.

A cooking process using Moisture Plus or a MasterChef Plus program can now be carried out.

You will be prompted to carry out the evaporation of the residual moisture process the next time you select the Moisture Plus os function or a MasterChef Plus program and when you turn the oven off.

Gourmet Center

Your oven has a wide range of MasterChef, and MasterChef Plus programs that enable you to achieve excellent cooking results with ease. Simply select the appropriate program for the type of food you are cooking and follow the instructions in the display.

In the Gourmet Center you will find:

- MasterChef programs for the preparation of cakes, meats, fish dishes, desserts, etc.
- MasterChef Plus program for the preparation of bread with Moisture Plus.

List of food types

The MasterChef programs can be found under Gourmet Center Auto – MasterChef.

- Baked Goods
- Fish
- Meat
- Pizza
- Potatoes
- Poultry

MasterChef Plus

In MasterChef Plus a variety of bread programs are available. These MasterChef programs work with Moisture Plus.

Using MasterChef and MasterChef Plus programs

From the Main Menu:

- Select Gourmet Center.
- Select MasterChef or MasterChef Plus.

A list of food types will appear in the display.

Select the desired type (there is only one type for MasterChef Plus).

The MasterChef or MasterChef Plus programs available for the food type selected will then appear.

Select the desired MasterChef or MasterChef Plus program.

The individual steps that must be completed before starting the program appear as a list in the display.

Depending on the program selected, the following information or instruction will appear in the display:

- Type of cookware
- Shelf level
- Use of the wireless roast probe
- Cooking time
- Follow the instructions on the display

Notes on using these programs

- After cooking, allow the oven interior to cool down to room temperature again before starting a MasterChef or MasterChef Plus program.
- Some programs require a preheating phase before food can be placed in the oven. A prompt will appear indicating when to add the food.
- The duration quoted for MasterChef programs is an estimate. It may increase or decrease depending on the program. When using the roast probe, the duration will be determined by when the core temperature is reached. The duration, in particular with meat, will vary depending on the initial temperature of the food.

Search

You can search the Gourmet Center by the name of the food type and MasterChef program.

This search is a full-text search and can also be used to search for parts of words.

From the Main Menu:

■ Select Gourmet Center.

A list of food types will appear in the display.

- Select Search.
- Use the keyboard to enter the desired search text, e.g. "bread".

The number of hits will be shown in the bottom right of the display.

If no match is found, or if there are more than 40 matches, the hits field will be deactivated and you will need to modify the search text.

Select hits.

The matching food types and programs will then appear.

Select the desired program, or select the food type and then the desired program.

The program will begin.

■ Follow the instructions on the display.

MasterChef Plus Recipes

On the following pages you will find some bread recipes for the MasterChef plus programs.

Baguette

Yields: 3 Loaves

Ingredients

26 oz. Bread Flour (approx. 5 cups plus 1 tablespoon)

i tablespoon)

2 cups lukewarm water (16 oz)

4 teaspoons instant yeast

3 teaspoons salt

Method

In a mixing bowl of a stand up mixer, whisk together the bread flour, yeast and salt. Make sure that the salt and yeast do not come into direct contact. With a paddle attachment, slowly add the water. Then switch to a dough hook and knead for 8 minutes.

Turn the dough out onto a lightly flourdusted countertop. Shape into a ball. Cover with plastic wrap. Let rest for 30 minutes.

Knead the dough by hand for 1-3 minutes. Cover the dough and let rest 1½ hours.

Decompress the dough by gently indenting with fingers into the center of the dough. Stretch and fold the dough. Working along the length of the dough, start from the upper edge of the dough, pull forward, away from you and then bring it to the center. Pull the bottom of the dough backwards (towards yourself) and fold to the center. Do the same for the left and right side of the dough. Flip the dough over and cover with plastic wrap. Let rest 1 hour.

Divide the dough into three equal portions

Shape the dough into 6" cylinders. Working with one piece of dough at a time, (keeping the other covered in plastic wrap), shape into a rectangle. Working along the length of the dough, press with three fingers gently making several indentations into the dough. Repeat the process; roll the dough over onto itself three times until the upper edge meets the lower edge and creates a deep seam. Sealing each turn with your fingers. Pinch the seam tight and let rest for about 5 minutes (or when the dough is relaxed enough to roll) with the seam facing up. Cover with a towel.

Roll and shape the baguettes to fit the universal tray. Place on universal tray, seam side down, and let rest for about 5 minutes covered with a towel.

Score each baguette 5 times and place directly into oven. Select the MasterChef Plus program for Baguettes.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Baguettes

Level: see display

Baking time: approx. 70 minutes

Banana Bread

Yields: 1 Loaf

Ingredients

1 cup walnuts, coarsely chopped

1 3/4 cups bread flour

3/4 cup granulated white sugar

1 teaspoon baking powder

1/4 teaspoon baking soda

1/4 teaspoon salt

1 teaspoon ground cinnamon

2 large eggs, lightly beaten

1/2 cup unsalted butter, melted and cooled

3 ripe large bananas, mashed well

1 teaspoon pure vanilla extract

Method

In a large mixing bowl, whisk the walnuts, flour, sugar, baking powder, baking soda, salt, and cinnamon; set aside. Mix the butter, mashed bananas, eggs and vanilla with a wooden spoon in a medium bowl. Fold the wet banana mixture into the dry ingredients with a rubber spatula just until combined. Be careful not to over mix.

Pour batter into a prepared loaf pan that has been greased and dusted with flour.

Place loaf pan into oven and select the MasterChef Program for Banana Bread.

Follow the directions in the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Banana Bread

Level: see display

Baking time: approx. 70 minutes

Brioche

Yields: 8 Brioches

Ingredients for dough

15.2 oz. bread flour (approx., 2 3/4 cups plus 3 tablespoons) 1 1/2 teaspoon osmotolerant yeast 2 tablespoons plus 1 1/4 teaspoon sugar 3/4 teaspoon salt 1/4 cup water 4 large eggs 19 tablespoons butter

Ingredients for egg wash

1 egg whisked Pinch of salt 1/2 teaspoon milk

Method

Cut butter into ½ inch pieces and place on a plate. Let butter sit at room temperature until softened. In the bowl of a stand mixer, add flour, yeast, sugar and salt. Whisk to combine. Make sure yeast and salt do not come into direct contact.

With the paddle attachment, add the water and eggs until well combined. Switch to a dough hook and knead for about 10 minutes.

When dough is soft and elastic, gradually add the softened butter one piece at a time until well incorporated. (If butter is not thoroughly incorporated, it will be difficult to roll out the dough.)

Transfer dough to a large greased bowl and cover with plastic wrap. Place the bowl into refrigerator for about 15 hours.

Remove the dough from the refrigerator and turn out onto a flour-dusted countertop. Divide the dough into 4 equal squares. Roll the dough into cylinders. Visually mark the dough cylinder into thirds. Place the edge of your hand on the top third and make a sawing/rolling motion.

With the flat part of your hand, pat down the thicker sides to 1½ inch thickness. Take your thumb and poke a hole about a ½ inch from the bottom.

Take the top third and loop it through the bottom hole.

Shape the brioche. Set each piece into a greased mold with the larger (base) part on the bottom.

Repeat steps for the 8 brioches.

Place brioches on the perforated baking tray. Brush with egg wash.

Place in oven and select MasterChef Plus Program for Brioche.

Follow the directions in the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Brinche

Level: see display

Baking time: approx. 47 minutes

Ciabatta

Yields: 2 Loaves

Ingredients for Sponge

16 oz. 00 flour or Italian-style flour (approx. 3 1/4 cups)
.3 oz. instant yeast (2 teaspoons)
17 oz. water, lukewarm (2 1/4 cups)
.8 oz. olive oil (2 tablespoons)

Ingredients for Final Dough

.5 oz. salt (1 3/4 teaspoons) 9 oz. 00 flour or Italian-style flour (approx. 1 cup plus 3 tablespoons)

Method

In the bowl of a stand mixer, add in the flour and the yeast and whisk together.

With a paddle attachment, add the wet ingredients until a soft, smooth sponge is formed. Loosely cover with plastic wrap and let proof for 1 hour in the mixing bowl.

After proofing slowly, add the ingredients for the final dough with the paddle attachment. Mix the dough for about 2 minutes maximum. The dough should feel sticky to the touch.

Grease a baking sheet with olive oil. Transfer the dough to the baking pan and cover with lightly oiled plastic wrap. Shape the dough into a rectangle and let rise at room temperature for 20 minutes.

Stretch and fold the dough. Fold the short end of the rectangle over each other (away from you) then fold it to the center.

Then fold the bottom of the dough down (towards you) and fold to the center. Do the same for the left and right side of the dough. Turn the dough over seam side down gently and cover with plastic wrap. Let the dough rest for 20 minutes and repeat the procedure three more times.

During the last 20 minute rest select the MasterChef Plus program for Ciabatta. Follow the directions in the display. (Oven will Preheat). Once the last twenty-minutes has past, transfer the Ciabatta to a flour-dusted universal tray. Dust the top of the dough with flour. Using a dough cutter, cut the dough lengthwise to create two long loaves. Shape the loaves evenly. Using your first three fingers gently make about five rows of indentations in the dough about ¼" deep.

Once the oven has preheated place the Ciabatta in the oven

Settings

Gourmet Center \ MasterChef plus \ Bread \ Ciabatta

Level: see display

Baking time: approx. 52 minutes

Cinnamon Raisin Bread

Yields: 1 Loaf

Ingredients for dough

3 1/2 cups (18.6 oz.) Bread Flour 3 T + 2 t (2 oz.) Granulated Sugar 1 t (0.3 oz.) Salt 1 1/4 t (0.2 oz.) Osmotolerant Yeast 2 T + 1/2 t (1 oz) Vegetable Oil 2 Large Eggs 2 Large Egg Yolks, reserve whites and whisk until frothy 3/4 to 1 cup Water 1/4 t (0.2 oz) Cinnamon 1 cup (6 oz) Baking Raisins

Ingredients for cinnamon sugar (for dusting)

1/4 cup Sugar 1 T Cinnamon

Method

Mix wet and dry ingredients separately (excluding the raisins and the cinnamon sugar).

While using a stand-up mixer with a paddle attachment, slowly add the wet to the dry and mix until incorporated.

Switch to a dough hook and knead at low speed for about 6 minutes. In the last two minutes add raisins

When raisins are thoroughly incorporated into the dough, remove and shape into ball. Place the dough ball into greased bowl. Cover with plastic wrap and let rise for 1 hour.

Next, on a lightly floured surface, knead dough for 2 minutes. Place back into the greased bowl and proof for 1 hour.

Roll dough into a rectangle about 1/2 inch thick, sprinkle heavily with cinnamon sugar. Roll like a jelly roll to fit the length of a loaf pan. Pinch off any seams. Place into a well-greased loaf pan.

Egg wash the loaf with reserved egg whites and cover with plastic wrap and proof for 60 minutes.

Egg wash again and dust with cinnamon sugar to taste.

Place in oven and select MasterChef Plus Program for Cinnamon Raisin Bread.

Follow the directions in the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Cinnamon Raisin Bread

Level: see display

Baking time: approx. 82 minutes

French Bread

Yields: 2 Loaves

Ingredients

26 oz. French Style Flour (approx. 5 cups plus 1 tablespoon)
2 cups lukewarm water (16 oz)
4 teaspoons instant yeast
3 teaspoons salt

Method

In a mixing bowl of a stand mixer, whisk together the French flour, yeast and salt. Make sure that the salt and yeast do not come into direct contact. With a paddle attachment, slowly pour in water. Then switch to a dough hook and knead for 8 minutes.

Transfer dough to a lightly flour-dusted work surface. Shape the dough into a ball. Cover with plastic wrap. Let rest for 30 minutes.

Knead dough for 5 minutes by hand. Cover the dough and let rest 1½ hours.

Stretch and fold the dough. Start from the top of the dough pull forwards (away from you) then bring it to the middle. Then pull bottom of the dough backwards (towards yourself) and fold to the middle. Do the same for the left and right side of the dough. Flip the dough over and cover with plastic wrap. Let rest 1 hour.

Divide the dough in half and shape into loaves that are about 10" long and 2" wide and tapered at the ends.

Place on perforated baking tray. Cover with a towel and rest for 20 minutes.

Score the loaves three times and place directly into the oven and select the MasterChef Plus program for French Bread.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ French Bread

Level: see display

Baking time: approx. 65 minutes

Italian Bread

Yields: 2 Loaves

Ingredients

25.4 oz. bread flour (approx. 4 3/4 cups plus 3 tablespoons)

6 oz. extra fancy (fine grain) semolina flour (approx. 1 cup)

1 tablespoon sugar

1 tablespoon instant yeast

1 tablespoon salt

1 pound lukewarm water (approx.

2 cups)

1/4 cup extra virgin olive oil Untoasted sesame seeds

Method

Mix the bread flour, semolina flour, sugar, yeast and salt together in the bowl of a stand mixer. Make sure yeast and salt do not come into direct contact. With a paddle attachment, slowly add the wet ingredients until combined.

Switch to a dough hook and knead for about 10 minutes.

Turn dough out onto a lightly floured work surface. Shape the dough into a ball, cover with plastic wrap and proof for 1½ hours

Divide the dough into equal two pieces.

Shape into two loafs that are about a 14" long by 2" wide and taper at both ends. Place dough on perforated baking tray and cover with plastic wrap. Proof for another 20 minutes.

Score dough 3 times, lightly brush with water and sprinkle with sesame seeds immediately.

Place in oven and select the MasterChef Plus program for Italian Bread.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Italian Bread

Level: see display

Baking time: approx. 58 minutes

Jalapeño Cheese Bread

Yields: 2 Loaves

Ingredients

2 cups hot water

- .2 ounces instant yeast
- 2 teaspoons sugar
- 2 tablespoons olive oil
- 5 cups unbleached all-purpose flour
- 9 ounces cheddar cheese, grated
- 4 ounces fresh jalapeños, finely chopped
- 2 tablespoons salt
- 3 tablespoons garlic powder (or to taste)

Extra grated cheddar cheese, to cover loaves

Method

In a measuring cup add the water, yeast and 1 teaspoon of sugar. Mix together until incorporated. Let rest for 10 minutes or until foamy.

Add the olive oil to the water and yeast mixture.

In the bowl of a stand mixer, add all of the dry ingredients except for the garlic powder. Make sure the cheddar and jalapeños are coated with flour.

With a dough hook attachment, slowly add the wet ingredients to the dry.

Mix about 5 minutes or until well incorporated. During the last minute add in the garlic powder.

Transfer the dough into a well-greased large bowl and cover. Proof for about 1 hour

Then shape into loaves, place into a well-greased tea loaf pan and cover. Proof for another 1 hour.

Grate extra cheddar to cover the top of the loaves as desired.

Place the loaves in the oven and select the MasterChef Plus program for Jalapeño Cheese Bread.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Jalapeño Cheese Bread

Level: see display

Baking time: approx. 77 minutes

Multigrain Bread

Yields: 2 Loaves

Ingredients

15 oz. nine grain flour blend (approx. 3 cups plus 2 tablespoons)

16.5 oz. bread flour (approx. 3 cups plus 3 tablespoons)

16.5 oz. bread flour (approx. 3 cups plus 3 tablespoons)

1 1/3 cups harvest grains mix

3 teaspoons salt

4 teaspoons instant yeast

1 tablespoon light brown sugar

1 tablespoon honey

4 tablespoons vegetable oil

3 cups water

Method

In the bowl of a stand mixer, add the dry ingredients and whisk together. Make sure the yeast does not come into contact with salt.

In a small bowl, combine honey, vegetable and water. With the paddle attachment, slowly incorporate the wet ingredients into the dry.

Switch to a dough hook and knead for about 8 minutes.

Turn the dough out onto a work surface and shape the dough into a ball.

Place the dough into an oiled bowl, cover with plastic wrap and proof for 1 hour.

Divide dough and shape into two round loaves and place on perforated baking tray.

Place into oven immediately and select the MasterChef plus program for Multigrain Bread.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Multigrain Bread

Level: see display

Baking time: approx. 70 minutes

Rolls

Yields: 8 Rolls

Ingredients

21.2 oz. unbleached bread flour (approx. 4 cups plus 1 tablespoon) 2 teaspoons instant yeast 2 1/2 teaspoons salt 8 ounces sourdough starter (approx. 1 cup)

13.4 oz. water (approx. 1 3/4 cups)

Method

In the bowl of a stand mixer, combine flour, yeast and salt. Mix together with a whisk. With the paddle attachment mix in sourdough starter until coated with the dry ingredients. Slowly incorporate water, mix until combined. Switch to the dough hook and knead for 15 minutes

Dust countertop lightly with flour. Transfer dough to countertop and knead by hand for 5 minutes. The dough will be slightly sticky. Dust dough very lightly with flour as needed.

Shape the dough into a ball and cover with plastic wrap, let rest for 2 hours on countertop

Divide dough into 8 equal portions and shape into rolls. Cover with plastic wrap and let rest for 30 minutes.

Place dough on the perforated baking tray.

Score dough and make one quick slice down the center of the roll.

Immediately place rolls in oven and select MasterChef Plus program for Rolls.

Follow the directions on the display

Settings

Gourmet Center \ MasterChef plus \ Bread \ Rolls

Level: see display

Baking time: approx. 38 minutes

Rye Bread

Yields: 2 Loaves

Ingredients for Preferment

5.6 oz. bread flour (approx.1 cup plus 2 tablespoons)

.02 oz. instant yeast (approx.

1/8 teaspoon)

.2 oz. salt (approx. 3/4 teaspoon)

5.4 oz. water (approx. 3/4 cup)

Ingredients for Final Dough

14 ounces bread flour (approx.

2 3/4 cup)

11 oz. medium rye flour (approx.

2 1/2 cups plus 1 tablespoon)

.2 oz. instant yeast (approx.

1 1/2 teaspoons)

.375 oz. salt (approx.1 1/2 teaspoons)

14 oz. water (approx. 3/4 cup)

2 oz. caraway seeds (1 1/2 teaspoons)

Method

In the bowl of a stand mixer, combine flour, yeast and salt for the preferment. Then add 5.4 ounces of lukewarm water. Mix until thoroughly incorporated. Cover with plastic wrap and let rise for 1 hour or up to 15 hours at room temperature.

In the bowl of a stand mixer, combine all of the dry ingredients for the final dough together except for the caraway seeds. Add dry ingredients to preferment. With the paddle attachment, slowly drizzle in the 14 ounces of lukewarm water. Switch to a dough hook. Knead for about 6 minutes. Add the caraway seeds during the last two minutes of mixing.

Remove dough from the bowl and shape into a ball. Cover the dough and proof for 1½ hours.

Divide dough in half. Shape into two loaves. Start by patting the dough into a rectangle about the length of the tea loaf pan (12") and about 6" wide. Fold the dough into thirds; repeat this two more times until you have a log. Pinch the ends and the long seam to seal.

Place into ceramic tea loaf pans. Cover and let rest for 35 minutes.

Place into oven and select the MasterChef Plus program for Rye Bread.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Rve Bread

Level: see display

Baking time: approx. 73 minutes

San Francisco Sourdough

Yields: 2 Loaves

Ingredients

27.5 oz. bread flour (approx. 5 1/4 cups plus 2 tablespoons)

.03 oz. instant (approx.

2 1/2 teaspoons)

.7 oz. salt (approx. 2 1/2 teaspoons) 10.5 sour dough starter (approx.

1 1/4 cups)

2 cups water (1 pound)

Method

Add bread flour, yeast and salt in the bowl of a stand mixer. Mix together with a whisk. Add the sourdough starter, mix until coated with the dry ingredients. Slowly incorporate water. Mix until combined. Switch to a dough hook and knead for 15 minutes.

Dust a work surface lightly with flour. Turn the dough onto the work surface and knead by hand for 3-5 minutes. The dough will be slightly sticky. Dust the dough very lightly with flour as needed.

Shape into a ball and cover with plastic wrap, proof for 2 hours on countertop

Divide dough into 2 equal portions and shape into a boule (round loaf). Place loaves on perforated baking tray. Cover loosely with plastic wrap and let rest for 20 minutes.

Score the dough with 4 strokes to form a square design with a lame (double edge blade) or a very sharp paring knife.

Immediately place in oven and select the MasterChef Plus Program for Sourdough Bread.

Follow the directions in the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Sourdough Bread

Level: see display

Baking time: approx. 50 minutes

Walnut Bread

Yields: 2 Loaves

Ingredients

26 oz. French Style Flour (approx. 5 cups plus 1 tablespoon)
2 cups lukewarm water (16 oz)
4 teaspoons instant yeast
3 teaspoons salt
2/3 cups walnuts
2/3 cup dried cherries

Method

In a mixing bowl of a stand mixer, whisk together the French flour, yeast and salt. Make sure that the salt and yeast do not come into direct contact. With a paddle attachment, slowly pour in water. Then switch to a dough hook and knead for 8 minutes. During the last two minutes add in the cherries and the walnuts.

Transfer dough to a lightly flour-dusted work surface. Shape the dough into a ball. Cover with plastic wrap. Let rest for 30 minutes.

Knead dough for 5 minutes by hand. Cover the dough and let rest 1½ hours.

Stretch and fold the dough. Start from the top of the dough pull forwards (away from you) then bring it to the middle. Then pull bottom of the dough backwards (towards yourself) and fold to the middle. Do the same for the left and right side of the dough. Flip the dough over and cover with plastic wrap. Let rest 1 hour.

Divide the dough in half and shape into round loaves.

Place on perforated baking tray. Cover with a towel and rest for 20 minutes.

Score the loaves three times and place directly into the oven and select the MasterChef Plus program for Walnut Bread.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Walnut Bread

Level: see display

Baking time: approx. 72 minutes

White Bread

Yields: 2 Loaves

Ingredients

26 oz. Bread Flour (approx. 5 cups plus

1 tablespoon)

2 cups lukewarm water (16 oz)

4 teaspoons instant yeast

3 teaspoons salt

Method

In a mixing bowl of a stand mixer, whisk together the French flour, yeast and salt. Make sure that the salt and yeast do not come into direct contact. With a paddle attachment, slowly pour in water. Then switch to a dough hook and knead for 8 minutes.

Transfer dough to a lightly flour-dusted work surface. Shape the dough into a ball. Cover with plastic wrap. Let rest for 30 minutes.

Knead dough for 5 minutes by hand. Cover the dough and let rest 1½ hours.

Stretch and fold the dough. Start from the top of the dough pull forwards (away from you) then bring it to the middle. Then pull bottom of the dough backwards (towards yourself) and fold to the middle. Do the same for the left and right side of the dough. Flip the dough over and cover with plastic wrap. Let rest 1 hour.

Divide the dough in half and shape into loaves that are about 10" long and 2" wide and tapered at the ends.

Place on perforated baking tray. Cover with a towel and rest for 20 minutes.

Score the loaves three times and place directly into the oven and select the MasterChef Plus program for White Bread.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ White Bread

Level: see display

Baking time: approx. 53 minutes

Whole Grain Bread

Yields: 2 Loaves

Ingredients

29.3 oz. bread flour (approx. 5 cups plus 2 tablespoons)

14.6 oz. whole wheat flour (approx.

3 cups plus 2 tablespoons)

1 tablespoon salt

1 tablespoon instant yeast

4 oz. sour dough starter (approx.

1/2 cup)

11/3 cup whole grains (your favorite blend)

29.2 oz. water (approx. 3 3/4 cups)

Method

In the bowl of a stand mixer combine all the ingredients except for the water with the paddle attachment. Slowly drizzle in water until combined. Switch to the dough hook attachment and knead for about 4 minutes.

Turn the dough out to a lightly dusted work surface. Shape the dough into a ball. Cover with plastic wrap. Let rest for 30 minutes.

Knead the dough by hand for one minute. Cover the dough and let rest 1½ hours.

Stretch and fold the dough; start from the top of the dough, stretch up (away from you) then bring it to the center. Then stretch the bottom of the dough up (towards you) and fold in the middle. Do the same for the left and right sides of the dough. Turn the dough over, seam side down and cover with plastic wrap. Let rest 1 hour.

Divide the dough into 2 portions. Shape each portion into a rectangle; start by taking one of the dough portions and shape into a rectangle, roughly the dimension of a loaf pan. With your first three fingers gently make several indentations into the dough. Next, roll the dough over three times. Sealing each turn with your hand. Pinch the seam tightly and place seam side down into well-greased loaf pans.

Cover and let rest for 35-40 minutes.

Place into oven and select the MasterChef Plus program for Whole Grain Bread.

Follow the directions on the display.

Settings

Gourmet Center \ MasterChef plus \ Bread \ Whole Grain Bread

Level: see display

Baking time: approx. 75 minutes

Favorites

You can create and save up to 20 of your own programs.

- Each one can have up to 10 cooking stages. This enables you to save your most frequently used recipes very accurately. Each stage contains a mode, temperature and duration or core temperature.
- You can specify the shelf level(s) for the food.
- You can enter a program name for your recipe.

When you next select the program, it will start automatically.

There are different ways of creating a Favorite:

- At the end of running a MasterChef Program, save it as a separate program.
- After running a program with a set duration, select Save.

Then name the program.

Creating a Favorite

- Select Favorites.
- Select Create Program.

You can now specify the settings for cooking stage 1.

Follow the instructions in the display:

Select and confirm the cooking mode, temperature and duration or core temperature.

Depending on the mode selected you can add the functions Rapid PreHeat and Crisp function in Additional Settings.

Settings for the 1st cooking stage have now been set.

More cooking stages can be added, for example, if you would like to add another cooking mode to follow the first.

- If additional cooking stages are required, select Add and proceed as you did for the 1st cooking stage.
- When you have completed setting the cooking stages. select Finish.

Set the shelf level(s) to be used:

- Select the desired level(s).
- Confirm with OK.

A summary of your settings will appear in the display.

- Check the settings and select OK to confirm, or select Change to correct the settings.
- Select Save.
- Enter the program name using the keyboard.

You can add a line break for longer program names using the [symbol.

Once you have entered the program name select Save.

A message will appear in the display confirming that the name has been saved.

Confirm with OK.

You can start the saved program immediately, delay the start or change the cooking stages.

More information regarding Change Cooking Stages can be found in "Changing favorites".

Starting a Favorite

- Place the food in the oven.
- Select Favorites.

The program names will appear in the display.

■ Select the desired program.

You can start the saved program immediately, delay the start or show the cooking stages.

- Start Now

The program will start right away and the oven heating will turn on.

- Start Later

This option will only appear if you are using the wireless roast probe. You can specify when you would like the program to start. The oven heating will turn on automatically at the time set.

- Ready at

You can specify when you would like the cooking program to complete. The oven will turn off automatically at the time set

Start at

You can specify when you want the program to start. The oven heating will turn on automatically at the time you set.

Favorites

Display Stages

A summary of your settings will appear in this display. You can adjust the setting under Change (see "Changing Favorites").

- Select the desired menu item.
- Confirm the message regarding which shelf level to use with OK.

The selected program will begin automatically right away or at the time set.

Changing Favorites

Changing cooking stages

Cooking stages in a MasterChef program that have been saved under a different name cannot be changed.

■ Select Favorites.

The program names will appear in the display.

- Select Edit.
- Select Change Program.
- Select the desired program.
- Select Change Cooking Stages.

The setting specified for a cooking stage can be changed or more cooking stages can be added to the program.

- Change the program as desired (see "Creating a Favorite").
- Check the settings and select OK to confirm.
- Select Save.
- If necessary, change the name (see "Creating a Favorite") and select Save.

The changes made to the program will be saved.

Changing the name

■ Select Favorites.

The program names will appear in the display.

- Select Edit.
- Select Change Program.
- Select the desired program.
- Select Change name.
- Change the name (see "Creating a Favorite") and select Save.

A message will appear in the display confirming that the name has been saved.

Confirm with OK.

The new program name will be saved.

Deleting a Favorite

■ Select Favorites.

The program names will appear in the display.

- Select Edit.
- Select Delete Program.
- Select the desired program.
- Select Yes.

The program is deleted.

You can delete all of your Favorites at the same time (see "Settings - Factory Default - Favorites").

Bake

Eating food which has been cooked correctly is important for good health.

Only bake cakes, pizza, french fries, etc. until they are golden brown. Do not overcook them.

Oven modes

Depending on how you would like the food prepared, you can use Convection Bake , Intensive , Moisture Plus of Surround.

Bakeware

The bakeware used depends on the oven mode chosen and how the food is prepared.

- Convection Bake , Intensive , Moisture Plus ;
 Baking tray, universal tray, any heatresistant baking dishes.
- Surround ::

 Dark metal, enamel or aluminum
 baking tins with a matte finish, as
 well as heat-resistant glass, ceramic
 and coated dishes can be used.
 Avoid bright, shiny metal tins as they result in uneven or poor browning, and in some cases cakes might not cook properly.

- Always place baking pans on the wire rack.
 - Position rectangular pans with the longer side across the width of the rack. This will allow for optimum heat distribution and even baking results.
- When baking cakes with fruit toppings or deep cakes, place the tin in the universal tray to catch any spillages.

Parchment paper / Greasing the pan

All Miele accessories (baking tray, universal tray, perforated baking tray and round baking dish) are treated with PerfectClean finish.

Surfaces treated with PerfectClean finish generally do **not** need to be greased or covered with parchment paper.

Parchment paper is only needed with:

- anything with a high salt content (e.g. pretzels, bread sticks), because sodium can damage the PerfectClean surface;
- meringues or dishes with a high eggwhite content, because they are more likely to stick,
- frozen food cooked on the wire oven rack.

Temperature

As a general rule, select the lower temperature given in the chart.

Choosing a baking temperature higher than those recommended may reduce the cooking time, but will lead to uneven browning, and unsatisfactory cooking results.

Baking duration \bigcirc

Check if the food is cooked at the end of the shortest duration quoted. To check if a cake is ready insert a wooden skewer or toothpick into the center, it should come out clean.

Shelf levels 51

The shelf level on which you place your food to bake will depend on the oven mode and the number of trays being used.

- Convection Bake
 - 1 tray: level 2
 - 2 trays: levels 1+3 / 2+4 3 trays: levels 1+3+5
- Moisture Plus (5)55 1 tray: level 2
 - tray: level 2
- Intensive 1 tray: level 1 or 2
- Surround 1 tray: level 1 or 2

If using both the universal tray and other baking trays to simultaneously bake on multiple levels, position the universal tray below the baking trays.

Bake moist baked goods and cakes/ pies on no more than two levels at the same time.

Roast

Always follow USDA guidelines on food safety.

Oven modes

Depending on how you would like the food cooked, you can use Convection Bake / Convection Roast , Moisture Plus , Auto Roast , Surround / Surround Roast or a MasterChef program.

Cookware

Any heat-resistant cookware can be used:

Wire oven rack, grilling and roasting insert (if available) on the universal tray, roasting pans, heat-resistant glass/earthen/cast iron dishes, roasting bags

Temperature 1

As a general rule, select the lower temperature provided in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

When cooking with Convection Bake / Convection Roast , Moisture Plus or Auto Roast , select a temperature that is approx. 25°F (20°C) lower than the temperature for Surround / Surround Roast .

Shelf level 5

As a general rule, use level 2.

Tips

- Resting time: At the end of the program, take the roast out of the oven, cover with aluminum foil and let stand for about 10 minutes. This helps retain the juices when the meat is sliced.
- The larger the cut of meat, the lower the temperature setting should be.
- Use a roast probe for accurate cooking temperatures and best results.

Wireless roast probe



The wireless roast probe allows you to accurately monitor the food's internal temperature during the cooking process. It is dishwasher safe.

How it works

The metal part of the wireless roast probe is inserted into the food. There is a temperature sensor in the metal tip which measures the core temperature of the food during cooking.

The temperature sensor is located approx. 3/4" (2 cm) from the tip. Insert the metal part so that the temperature sensor is positioned in the middle of the food (see "Important notes on using the wireless roast probe").

The maximum core temperature setting is 210°F (99°C). Please refer to the roasting chart and the "Slow roasting" section for information about the types of meat and the corresponding core temperatures.

The core temperature value is sent via radio signal from the transmitter in the handle of the wireless roast probe via the antenna in the back wall of the oven to the electronic module of the appliance as soon as the food is put in the oven with the roast probe inserted.

Uninterrupted transmission of the radio signal is only possible when the door is closed. If the oven door is opened during the cooking program, e.g., to baste the meat, the radio signal will be interrupted. It will only resume after the door has been closed. It will take a few seconds for the current core temperature to once again appear in the display.

The temperature sensor will be destroyed at temperatures above 212°F (100°C). As long as it remains inserted in the food, there is no risk of damage, since the maximum core temperature setting is 210°F (99°C).

If you are not using the wireless roast probe do not keep it in the oven during cooking. Always put it back into the storage sleeve on the front right of the Cup & Plate Warming Drawer (see the "Guide to the oven" chapter).

Roast

When to use the wireless roast probe

Apart from MasterChef programs, Special Modes and Favorites, the wireless roast probe can be used with the following functions:

- Auto Roast
- Convection Bake
- Intensive
- Surround =
- Moisture Plus ◊৩
- Convection Broil

Important notes on using the wireless roast probe

To ensure that the probe works correctly, please observe the instructions below.

 
- Do not use deep, narrow cooking containers made of metal, as these will weaken the radio signal.
- Do not place any metal objects, such as lids or aluminum foil, above the wireless roast probe. Do not use the wire oven rack and universal tray on a shelf level above the food containing the roast probe. Glass lids may be used.
- Do not use another standard metal cooking thermometer when using the wireless roast probe.
- Do not allow the handle of the wireless roast probe to sit in any sauce or cooking liquid, or to rest on the food or the edge of the cooking container.

Risk of breakage!

Do not use the wireless roast probe to lift or carry the food.

Please also note the following information:

- The meat can be placed in a pot or on the universal tray and wire oven rack.
- The metal part of the wireless roast probe must be fully inserted into the center of the food. The handle should be angled upwards. Make sure that the handle is not horizontal, facing the door or the corners of the oven interior.



- When cooking poultry, insert the metal part into the thickest part of the breast. You can find the thickest part of the breast by pressing the area with your thumb and index finger.
- Do not let the metal part touch any bones, and do not insert it into a particularly fatty area of the meat.
 The oven may turn off too early if the tip comes into contact with the probe.
- If the meat contains heavy marbling, select the highest core temperature stated in the roasting chart.

- When using roasting bags or aluminum foil, insert the probe through the bag or foil into the center of the meat. You can also place meat inside the bag/foil with the probe already inserted. Be sure to follow the instructions provided by the manufacturer of the roasting bag / aluminum foil.
- The wireless roast probe can only be inserted horizontally into flat foods, such as fish. Therefore, place flat food in glass or ceramic cooking containers, since the walls of a metal container will interfere with the radio signals.

If the wireless roast probe is no longer recognized during cooking, a message will appear in the display. Change the position of the probe in the food.

Roast

Using the wireless roast probe

When cooking in the oven, use the **wireless** roast probe.

It is located in the storage sleeve on the front right of the Cup & Plate Warming Drawer (see the "Guide to the oven" chapter).

- Remove the wireless roast probe from the storage sleeve.
- Insert the metal part of the wireless roast probe fully into the food. Make sure that the handle is angled upwards.
- Put the food in the oven.
- Close the door.
- Select an oven mode or MasterChef program.

The message Continue cooking with roast probe? will appear.

- Select Yes.
- Adjust the default temperature if necessary.
- Change the default core temperature if necessary.

The core temperatures cannot be changed for the MasterChef programs.

You can also start the process at a later time. Select Additional Settings and set a time in the Start at field.

Duration and Ready at cannot be set because the total time depends on how long it takes for the core temperature to be reached.

Time left display

After a certain time, the estimated duration of the cooking process remaining (time left) will appear in the display.

The time left is calculated from the cooking temperature selected, the required core temperature and the pattern of the increasing core temperature.

The time left first shown is an estimate. As the cooking process continues, the time is revised continuously, and a more accurate figure is shown.

The time left will be deleted if the cooking or core temperature is changed or if a different mode is selected. If the door is opened for a longer time, the time left will be recalculated.

Displaying the core temperature

As soon as the time remaining appears, you can also display the actual core temperature.

- Select Change.
- Select Display core temperature.
- Select On.
- Confirm with OK.

The actual core temperature will also appear in the display.

Roast

Using residual heat

Shortly before the end of the cooking program the oven heating will turn off. The residual heat in the oven is sufficient to complete the cooking process.

Using the residual heat in the oven saves energy.

Energy Save Phase will appear in the display to show that the oven is in energy save mode. The measured core temperature is no longer visible.

The cooling fan and hot air fan (if turned on) will continue to run.

When the selected core temperature has been reached,

- Program Finished appears in the display,
- A buzzer will sound if turned on (see "Settings - Volume - Buzzer tones").

Tip: If the food is not sufficiently cooked, insert the probe into another place and repeat the program.

This cooking method is ideal for cooking beef, pork, veal or lamb when a tender result is desired.

First, using a cooktop sear the meat on all sides to seal in the juices.

Then place the meat in a preheated oven. It will be cooked at a low temperature for an extended time allowing the meat to become very tender.

The meat will rest and the juices start to circulate evenly throughout. This gives the meat a very tender and juicy result.

Tips

- Use fresh, lean meat that has been trimmed. Remove the bones before cooking.
- When searing, use a suitable cooking oil or fat that can withstand high temperatures (e.g. clarified butter, vegetable oil).
- Do not cover the meat during cooking.

Cooking will take approx. 2-4 hours, depending on the size and weight of the meat, as well as the desired degree of doneness and browning.

Cooking time ⊕ / Core temperatures / ↑

Always observe USDA food safety quidelines.

Meat	(-1-)	M
	[min]	°F/°C
Beef Tenderloin	80–100	138/59
Sirloin		
- rare	50–70	118/48
- medium	100–130	135/57
- well done	160–190	156/69
Pork tenderloin	80–100	145/63
Smoked pork chop *	140–170	154/68
Filet of veal	80–100	140/60
Veal loin *	100-130	145/63
Saddle of lamb *	50–80	140/60

boneless

After cooking:

Because the cooking temperatures are very low:

- The meat can be carved immediately.
 No resting time is required.
- The cooking result will not be affected if the meat is left in the oven after the program is complete. It can be kept warm until you serve it.
- The meat is at an ideal temperature to be eaten right away. Serve on prewarmed plates with a hot sauce or gravy to keep warm.

Slow Roasting

Using the Slow Roasting function

- Select Special Modes.
- Select Slow Roasting.
- Set the required temperature.
- Set the core temperature.
- Follow the instructions in the display. Let the wire oven rack and universal tray preheat in the oven.
- While the oven is preheating, sear the meat on all sides on the cooktop.

Danger of burns!

When the oven is hot use pot holders to insert, remove or turn the food, or when adjusting the oven shelves, etc.

Once Use the roast probe appears in the display, place the seared meat on the rack and insert the wireless roast probe, so that the metal tip is fully in the center of the meat.

For more information see "Roasting - Wireless roast probe".

Place the universal tray on the rack and then place the rack into the oven on the shelf level indicated.

Use Caution!
The Browning / Broiling element will be hot. Danger of burns!

Close the door.

When the program is completed Program Finished will appear in the display and a buzzer will sound, if turned on (see Settings - Volume - Buzzer tone").

If the meat is not cooked to your satisfaction you can extend the cooking time.

Adjusting the Slow Roasting temperature

Use the wire oven rack with the universal tray positioned on top. Do not use the Rapid PreHeat function to preheat the oven.

- Slide the universal tray and rack onto shelf level 2.
- Select Operating Modes.
- Select the Surround ☐ mode and set the temperature to 265°F (130°C).
- Turn off the Rapid PreHeat function by selecting Change – Additional Settings – Rapid PreHeat – Off.
- Preheat the oven with the universal tray and wire oven rack for approx. 15 minutes.
- While the oven is preheating, sear the meat on all sides on the cooktop.

Burn hazard!
Use pot holders when inserting, removing or turning hot food, or when adjusting shelves, etc. in a hot oven.

- Place the seared meat on the wire oven rack.
- Select Change.
- Reduce the temperature to 210°F (100°C).
- Allow the meat to finish cooking.

You can set the cooking program to switch off automatically (see "Additional functions - Setting the cooking time").

Broil

Danger of burns!

Broil with the oven door closed. If you broil with the door open the hot air will escape from the oven before it has been cooled by the cooling

The controls will get hot.

Oven modes

Maxi Broil ***

This mode delivers excellent browning and broiling results when cooking larger amounts of food. Use to broil chops, ribs and large quantities of meat and for browning large dishes.

The entire Browning/Broiling element will become red hot to produce the necessary heat.

Broil T

This mode delivers excellent browning and broiling results when cooking smaller amounts of food. Use to broil chops, ribs and small quantities of meat and for browning small dishes.

 
Only the center of the Browning/ Broiling element will become red hot to produce the necessary heat.

Convection Broil

For broiling thicker items, e.g. poultry or London broil.

The Browning/Broiling element and the fan switch on in alternating phases.

Cookware



Use the universal tray with the grilling and roasting insert (if available), and place the tray in the oven. The insert prevents any collected meat juices from burning, allowing them to be used for gravy and sauces.

Temperature 1

As a general rule, select the lower temperature provided in the chart. If higher temperatures are used, the meat will brown on the outside, but will not be properly cooked through.

Preheating

Always preheat the oven for about 5 minutes with the door closed before Broiling.

Shelf levels 5

Select the shelf level according to the thickness of the food.

- Thin cuts: Shelf level 3 or 4

- Thick cuts: Shelf level 1 or 2

Broiling time

Flat pieces of fish and meat usually take 6–8 minutes per side.

When broiling thicker pieces, each side will take a bit longer. Make sure that the pieces have roughly the same thickness so that their broiling times do not vary too greatly.

Testing doneness

Always observe USDA food safety guidelines.

Preparing food for broiling

Rinse the meat under cold water and pat dry. Do not season the meat with salt before broiling, this will draw out the juices.

Brush the meat with oil, if necessary. Do not use other types of fat as they can easily burn and cause smoke.

Clean fish as usual. To enhance the flavor, salt or lemon can be added.

Broil

Broil

- Place the grilling and roasting insert (if available) in the universal tray.
- Place the food on top.
- Select the required oven mode and temperature.
- Preheat the Browning/Broiling element for approx. 5 minutes with the door closed.

Danger of burns!
When the oven is hot use pot holders to insert, remove or turn the food, or when adjusting the oven shelves, etc.

 
- Place the food on the appropriate shelf level (see the "Broiling chart").
- Close the door.
- Turn the food halfway through cooking.

Using the rotisserie to broil


The rotisserie is an optional accessory for use with the Rotisserie $\stackrel{\longleftarrow}{\rightleftarrows}$ mode.

The rotisserie can support a maximum weight of 11 lbs (5 kg).


■ Slide the wire oven rack or the FlexiClips and wire rack onto level 1.



- Slide the latches on the rotisserie into the notches of the universal tray.
- Secure the meat at the middle of the rotisserie spit using clips.

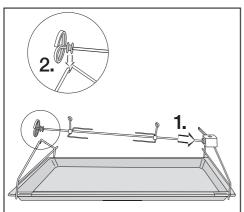

■ Insert the pointed end of the spit into the rotisserie (1) and place the roller in the holder (2) as illustrated.

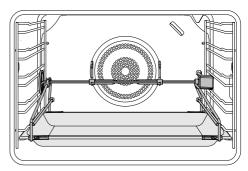

- Slide the universal tray and rotisserie onto the wire oven rack or onto the FlexiClips and wire oven rack. Insert the drive shaft for the rotisserie motor into the slot at the back of the oven.
- Close the door.
- Select the Rotisserie [##] mode.
- Set the temperature and cooking time.

The rotisserie motor will switch on after a slight delay. The rotation browns the food evenly on all sides.

After cooking:

- Remove the food from the oven.
- Turn the oven off.

Special Modes

In addition to the MasterChef programs your oven has a variety of Special Modes.

■ Select Special Modes.

The following Special Modes are available:

- Defrost
- Dehydrate
- Reheat (to reheat plated meals)
- Warm-up Cookware
- Proof
- Slow Roasting
 See "Slow Roasting" for more information.
- Pizza
- Sabbath Program

This section also gives information on the following applications:

- Gentle Bake
- Canning
- Frozen food

Defrost

Use the Defrost mode to gently defrost frozen food.

The temperature can be set between 75-150°F (25-50°C).

- Select Special Modes.
- Select Defrost.
- If necessary, adjust the default temperature and set the duration.
- Follow the instructions in the display.

Air is circulated throughout the cabinet to gently defrost the food.

Risk of salmonella poisoning! Be sure to strictly observe proper hygiene rules when defrosting poultry.

Do not use the liquid from the defrosted poultry.

Tips

- Remove the packaging and place the frozen food on the universal tray or in a suitable bowl or dish.
- When defrosting poultry, place it on the wire oven rack and position the rack on the universal tray so that the poultry does not sit in the defrosting liquid.

Special Modes

Dehydrate

This program is designed for traditional drying of food to preserve it.

The temperature can be set between 75-250°F (80-100°C).

It is important that fruit and vegetables are ripe and not bruised before they are dehydrated.

- Prepare the food for dehydrating.
- Peel and core apples, and cut into slices 1/4" (.5 cm) thick.
- Core plums if necessary.
- Peel, core and cut pears into wedges.
- Peel and slice bananas.
- Clean mushrooms, then either halve or slice them.
- Remove parsley and dill from the stem.
- Distribute the food evenly over the roasting pan.

You could also use the rack or perforated baking tray, if available.

- Select Special Modes.
- Select Dehydrate.
- If necessary, adjust the default temperature and set the duration.
- Follow the instructions in the display.

Food	Approx. dehydrating time	
Fruit	2–8 hours	
Vegetables	3–8 hours	
Herbs*	50–60 minutes	

- Because this program uses the fan, it is recommended that you use Surround with a temperature of 75-250°F (80-100°C) for drying herbs.
- Reduce the temperature if condensation begins to form in the oven.

⚠ Danger of burns!
Use pot holders when removing the dehydrated food from the oven.

Allow the fruit or vegetables to cool down after dehydrating.

Dried fruit must be completely dry, but also soft and elastic. Juice should not escape when cut.

■ Store in sealed glass jars or tins.

Reheat

This program is designed for reheating plated meals and uses added moisture.

The available options are:

- Pizza
- Large roasting pan
- Bakes

Use heat-resistant cookware.

- Place the food to be reheated in a dish on the rack. Do not cover.
- Select Special Modes 🖾.
- Select Reheat.
- Select the desired dish and adjust the power level.
- Follow the instructions on the display

♠ Burn hazard!

Use pot holders when removing dishes from the oven. Condensation may accumulate on the bottom of the dish.

Warm-up Cookware

This program is designed to warm your cookware.

The temperature can be set between 75-175°F (50-80°C).

Use heat-resistant cookware.

- Place the rack on shelf level 2 and place the cookware to be heated on it.
- Select Special Modes.
- Select Warm-up Cookware.
- If necessary, adjust the default temperature and set the duration.
- Follow the instructions in the display.

⚠ Danger of burns!

Use pot holders when removing dishes from the oven. Condensation may accumulate on the bottom of the dish.

Special Modes

Proof

This program was designed to proof dough without humidity.

The temperature can be set between 75-125°F (30-50°C).

- Select Special Modes.
- Select Proof.
- If necessary, adjust the default temperature and set the duration.
- Follow the instructions in the display.

If you would like to proof dough with the addition of moisture, select the appropriate MasterChef program.

Pizza

This program is designed specifically for baking pizza.

The temperature can be set between 300-475°F (160-250°C).

- Select Special Modes.
- Select Pizza.
- If necessary, adjust the default temperature and set the duration.
- Follow the instructions in the display.

Sabbath Program

This program is designed for religious observance.

Select the Sabbath Program and then select the oven mode and temperature.

The program will only start once the door is opened and closed:

- The cooking process will start after about 5 minutes using Surround or Bake .
- The oven will heat up to the temperature you have set and will maintain this temperature for a maximum of 72 hours.
- The interior lighting does not come on, even when the door is opened.

If Settings - Lighting - On has been selected, the lighting will remain turned on throughout the program.

- Sabbath Program appears in the display constantly.
- The time of day is turned off.

Once the Sabbath Program has started it cannot be changed or saved as a Favorites.

Using the Sabbath Program

The program can only be canceled by turning the oven off.

- Select Special Modes.
- Select Sabbath Program.
- Select the desired mode.

The Sabbath Program cannot be started if the timer is being used.

- Set the required temperature.
- Confirm with OK.

The oven is now ready for use.

Sabbath Program and the temperature set will appear.

- Open the door to start the program.
- Place the food in the oven.
- Close the door.

The oven heating will turn on after 5 minutes.

To end the program early:

■ Turn the oven off.

Special Modes

Gentle Bake

The Gentle Bake mode is ideal for casseroles and gratins.

You can select a temperature setting from 200-475°F (100-250°C).

- Select Gentle Bake and change the default temperature if necessary.
- Follow the instructions on the display.

Canning

Always observe USDA food safety guidelines.

Canning containers

Danger of injury!

Do not use the appliance to heat up or can food in sealed jars or containers. Pressure will build up inside them and they can explode causing damage to the appliance, as well as the risk of injury and scalding.

Only use jars designed for canning:

- Canning jars,
- Jars with twist-off lids.

Canning fruit and vegetables

We recommend using the Convection Bake M mode.

The instructions below are for 6 oneliter glass jars.

- Slide the universal tray onto shelf level 2. Place the jars on the tray.
- Select the Convection Bake mode and a temperature of 300-340°F (150–170 °C).
- Wait until bubbles rise evenly in the jars.

Then reduce the temperature to avoid a boil-over.

Fruit / Cucumbers

As soon as bubbles begin to rise evenly in the jars, reduce the temperature to the lowest setting. Then, leave the jars in the warm oven for an additional 25-30 minutes.

Vegetables

- Reduce the temperature to 210°F (100°C) as soon as bubbles begin to rise evenly in the jars.
- After the canning time has finished, reduce the temperature to the lowest setting and leave the jars in the oven for an additional 25-30 minutes.

After canning

Danger of burns!
Use pot holders when removing the jars from the oven.

- Take the jars out of the oven.
- Cover the jars with a towel and leave to set for approx. 24 hours.
- Make sure all jars are closed properly when storing them.

Special Modes

Frozen food

Tips for pizza, French fries, croquettes and other similar items

Cakes, pies, pizza, baguettes

- Bake frozen pizza on parchment paper placed on the wire oven rack.
- Cook smaller frozen food items on parchment paper placed on a baking tray or the universal tray.
- For smaller frozen food items, use the lowest temperature recommended on the packaging.
- Turn small frozen food items several times during cooking.

Preparation

Handling food carefully will help protect your health.

- Select the oven mode and temperatures recommended on the food's packaging.
- Preheat the oven.
- Place the food in the preheated oven on the shelf level recommended on the packaging.
- Check the food at the end of the shortest time recommended on the packaging.

① Danger of burns!

Make sure the heating elements are turned off and allowed to cool completely.

Danger of injury! The steam from a steam cleaner could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean this appliance.

All surfaces can discolor or be damaged if unsuitable cleaning agents are used. The front of the oven, in particular, will be damaged by oven cleaners and descalers. All surfaces are susceptible to scratches. Scratches on glass surfaces could cause a breakage. Remove any cleaning agent residues immediately.

Unsuitable cleaning agents

To avoid damaging surfaces when cleaning, do not use:

- Cleaners containing soda, ammonia, acids or chlorides
- Lime removers on the front of the ovens
- Abrasive cleaning agents, such as scouring powder, scouring cream, pumice stones
- Solvent-based cleaners
- Stainless steel cleaners
- Dishwasher cleaners
- Glass cleaners
- Ceramic cooktop cleaners
- Hard, abrasive sponges and brushes, such as pot scrubbers or used sponges that still contain traces of abrasive cleaner
- Eraser sponges
- Sharp metal scrapers
- Steel wool
- Spot cleaners
- Oven cleaners*
- Stainless steel scouring pads*
 - * Can be used to remove very heavy soiling from PerfectClean surfaces.

If stains and food residues are allowed to remain on surfaces for a longer period of time, it may no longer be possible to remove them. Continued use without cleaning will make the oven much harder to clean. Remove any soiling immediately.

The accessories are not dishwashersafe, with the exception of the wireless roast probe.

Tips

- Soiling caused by spilt juices and cake mixtures is best removed while the oven is still warm. Use caution and make sure the oven is not too hot - Danger of burns.
- To make cleaning easier you can dismantle the oven door, remove the side runners and lower the Browning/ Broiling element.

Normal soiling

There is a seal around the oven interior which seals the inside of the door.

Take care not to rub, damage or move the gasket.

- Remove normal soiling immediately using a clean sponge with warm water and liquid dish soap applied with a clean, damp microfiber cloth.
- After cleaning, ensure that any detergent residue is removed with clean water.
 - This is particularly important when cleaning surfaces treated with PerfectClean enamel as detergent residue can impair the non-stick properties.
- After cleaning, dry the surfaces with a soft cloth.

Wireless Roast Probe

The wireless roast probe can be cleaned in the dishwasher.

Stubborn soiling

Spilt fruit and roasting juices may permanently discolor surfaces of the oven. This discoloration is permanent but will not affect the performance of the oven. Do not use force to remove these stains. Clean using the instructions in this manual.

- Baked on deposits can be removed with a glass scraper or a nonabrasive stainless steel scrubbing pad.
- Stubborn soiling on PerfectClean surfaces can be cleaned using Miele Oven Cleaner. It must only be applied to cold surfaces in accordance with the instructions on the packaging.

Non-Miele oven spray must only be used in a cold oven and for no longer than 10 minutes.

- If necessary, the rough side of a dish sponge can be used to remove the soiling.
- After cleaning, remove all oven cleaning agent residues thoroughly with clean water, and dry with a soft cloth.

Cleaning the oven interior with Self Clean &

Instead of cleaning the oven by hand, you can use the Self Clean (5) program.

Any grime that has accumulated will be broken down and burnt to ash as a result of the high temperatures.

This oven has three Self Clean levels, each with a different duration:

- Level 1 for light soiling
- Level 2 for heavier soiling
- Level 3 for very heavy soiling

Once the Self Clean program has started, the door will lock automatically. It cannot be opened again until the program has ended.

You can also set a delayed start time for the Self Clean program, in order to take advantage of off-peak electricity rates, for example.

At the end of the Self Clean program, any remaining residues (e.g., ash) can be easily wiped away.

Once you start the Self Clean program, the grill and the griddle will be turned off.

During the Self Clean program, the grill and the griddle cannot be turned on.

Preparing for the Self Clean program

The high temperatures used during self cleaning will damage accessories that are not designed for cleaning in the Self Clean program. Please remove these accessories from the oven before starting the Self Clean program. This also applies to accessories purchased separately.

The following accessories are suitable for cleaning during the Self Clean program and can remain in the oven:

- Shelf runners
- FlexiClip telescopic runnersHFC92
- Wire oven rackHBBR48-2
- Take all accessories that are not "Self Clean safe" out of the oven.
- Slide the wire oven rack into the top shelf level

If not removed, coarse soiling can smoke and cause the Self Clean program to turn itself off.

■ Remove any coarse soiling before running the Self Clean program.

Starting the Self Clean program

Danger of burns!

When Self Cleaning the front of the oven becomes hotter than with normal oven use.

Prevent children from touching the oven during the Self Clean program.

- Select Maintenance.
- Select Self Clean.
- Select the level required according to the level of soiling.
- Confirm with OK.

Follow the instructions in the display.

Confirm with OK.

Starting the Self Clean program

- To start the Self Clean program immediately, select Start Now.
- Confirm by touching OK.

The Self Clean program will then start.

The door locks automatically. The oven heating and cooling fan functions are then automatically activated.

The oven light does not come on during the Self Clean program.

The time remaining for the Self Clean program appears in the display. This time cannot be changed.

You can use the timer while the Self Clean program is running. When the set time has elapsed, the buzzer will sound and \triangle will flash The time will then continue to increase in the display.

The buzzer will stop and the visual indicators will go out after you touch the "Timer" sensor.

Delaying the start of the Self Clean program

- To delay the start of the Self Clean program, select Start Later.
- Set the desired time for starting the Self Clean program.
- Confirm by touching OK.

The door will lock automatically. Start at and the set start time appear in the display.

Up until the start time you can alter the start and end time with Change.

As soon as the start time has been reached, the oven heating and the cooling fan will turn on automatically. The duration remaining will appear in the display.

At the end of the Self Clean program

When the duration remaining reaches 00:00 h, a message will appear in the display to tell you that the door is unlocking.

When the door lock has been deactivated:

- Program Finished appears in the display,
- A buzzer will sound if turned on (see "Settings - Volume - Buzzer tones").
- Turn the oven off.

Acoustic and visual signals are turned off.

♠ Burn hazard!

Danger of burns! Wait until the oven has cooled down before removing any residual soiling left in the oven compartment from the Self Clean program.

Wipe any residues (e.g., ash) left behind after the Self Clean program out of the oven compartment and off of any accessories. The amount of ash will vary depending on how dirty the oven was.

Most soiling can be easily removed using a clean, soft sponge and a mild solution of warm water and liquid dish soap.

Depending on the degree of soiling before cleaning, there may be a visible layer of soiling across the inner glass pane on the door. This should be removed using the scouring side of a dish sponge or with a stainless steel spiral sponge and liquid dish soap. Extend and retract the FlexiClip telescopic runners several times after running the Self Clean cleaning program.

Please note:

- There is a seal around the oven interior which seals the inside of the door. Take care not to rub, damage or move the gasket.
- After the Self Clean program, the FlexiClip telescopic runners may appear discolored or have a lighter color in some places. This will not affect the functioning of the runners in any way.
- Spilt fruit juices may cause lasting discoloration to enameled surfaces.
 This discoloration is permanent but will not affect the efficiency of the enamel. Do not attempt to remove these marks.

The Self Clean program is canceled

If the Self Clean program is canceled the oven door will remain locked until the temperature inside the oven drops to below 535°F (280°C).

The following will cause the Self Clean program to cancel:

- Turning the oven off.
- A power failure.

If you turn the oven off the display still show Turn appliance off?.

If you would like to cancel the Self Clean program, select Yes.

The door will unlock once the temperature in the oven has dropped below 535°F (280°C) and the oven is turned off.

If you would like to continue running the Self Clean program, select No.

The Self Clean program will continue.

Once the power returns after a power failure, Program Canceled Cooling Down will appear in the display.


The door will unlock once the temperature in the oven has dropped below 535°F (280°C) and the oven is turned off.

A buzzer will sound if turned on (see "Settings - Volume - Buzzer tones").

Program Finished appears in the display.

- Select "Back".
- Start the Self Clean program again.


Removing the door

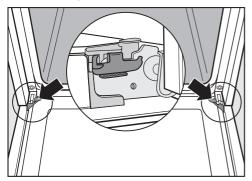

The door is connected with brackets on each door hinge.

Before the door can be removed the hinges must first be unlocked.

■ Open the door fully.

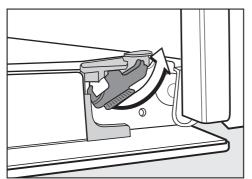


■ Release the locking clamps by turning them as far as they will go.

Do not attempt to take the door off the brackets when it is in the horizontal position, the brackets will spring back against the oven.


Do not use the handle to pull the door off the brackets, the handle could break.

Close the door until it rests partially open.

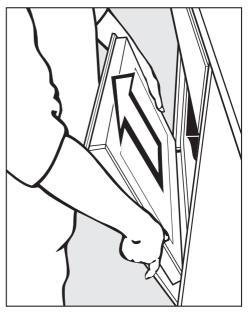

■ Holding the door securely at both sides, lift it straight upwards.

Reinstalling the door

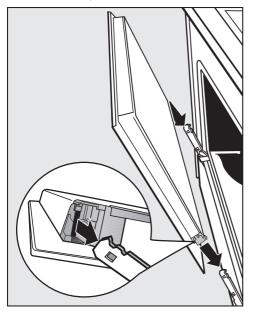


Hold both sides of the door securely and carefully fit it onto the brackets of the hinges.

Make sure that the door goes on straight.

■ Open the door fully.

If the locking clamps are not locked, the door can easily become detached from the brackets and be damaged.

You must make sure that the locking clamps are locked again.

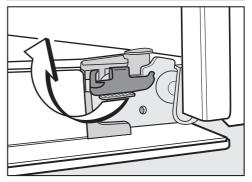

■ To relock the locking clamps, turn them back up to the horizontal position as far as they will go.

Removing the shelf runners


Danger of injury!

Do not use the oven without the shelf runners correctly inserted.

You can remove the shelf runners together with the FlexiClip telescopic runners (if present). If you wish to remove the FlexiClip telescopic runners separately in advance, follow the instructions in "Features – Inserting and removing the FlexiClip telescopic runners."

♠ Burn hazard!

Make sure that the heating elements are switched off and that the oven interior has cooled down completely.

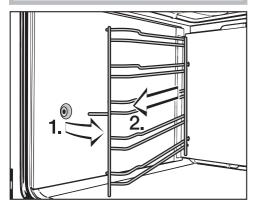

■ Pull the front of the shelf runners out of the holder (1.) and remove the runners from the oven (2.).

The runners can be **installed** in the reverse order.

Use care when installing the parts in the oven.

The following faults can be corrected without contacting the Miele Service Department. If in doubt, please contact Miele.

① Danger of injury! Repairs should only be carried out by a qualified and trained professional in accordance with local and national safety regulations. Unauthorized repairs could cause personal injury or machine damage.

Problem	Possible cause and solution
This display is dark.	The time of day display is deactivated. When the appliance is turned off, the time of day display is turned off. As soon as the oven is turned on, the time of day will appear. If you want it to be displayed continuously, the setting to turn the time of day display back on must be changed (see "Settings – Time of day - Display").
	There is no power to the appliance. Check if the circuit breaker has tripped.
System Lock ⊕ appears in the display when the oven is turned on.	The system lock ⊕ is On. ■ You can unlock the oven to start a cooking program by pressing ⊕ for at least 6 seconds. ■ To permanently deactivate the lock, see "Settings - System Lock ⊕".

Problem	Possible cause and solution
The oven does not heat up.	Demo mode is activated. The oven can be operated but will not heat up. Deactivate Demo mode (see "Settings – Showroom Program").
Power Failure - Program Canceled appears in the display.	There has been a power failure which has caused the current cooking process to stop. Turn the oven off and then back on again. Restart the cooking process.
12:00 appears in the display.	The power supply was interrupted for longer than 200 hours. Reset the date and time.
Maximum operating duration reached appears in the display.	The oven was operated for an unusually long period of time. The Safety cut-out feature has been activated. Confirm with OK. Clear the message Program Finished by selecting "Back". The oven is now ready to use.
⚠ Fault XX appears in the display.	A fault has occurred that you cannot resolve. Contact Miele Technical Service.
Door not locked appears in the display.	 The Self Cleaning program door lock is not locking. Turn the oven off and then back on again. Then restart the Self Clean program. If the message appears again, contact Miele Technical Service.
Door not released appears in the display.	The door lock for the Self Clean program will not deactivate. Turn the oven off and then back on again. If the door lock still does not deactivate itself, contact Miele.
No signal to roast probe. Reposition roast probe in the oven. appears in the display.	The wireless roast probe is not recognized. Reposition the probe in the food. If the oven still does not recognize the wireless roast probe, it may be faulty. A replacement roast probe can be ordered from Miele.

Problem	Possible cause and solution
Fault with moisture control - the MasterChef programs will operate without moisture appears in the display after a MasterChef Plus has been selected.	The evaporation system is faulty. Contact Miele Service. In the meantime, you can run a program that does not use added moisture.
Fault with moisture control - Moisture Plus program not available appears in the display after selecting Moisture Plus OM.	The steam injection system is faulty. ■ Contact Miele Technical Service. ■ Use the Convection Bake ♣ program instead of Moisture Plus 🕬.
A noise is heard after the cooking process is complete.	The fan remains turned on after a cooking program (see "Settings - Cooling fan").
The oven has turned itself off.	The oven turns off automatically if a button is not pressed after a certain amount of time or after a cooking program has ended to save power. Turn the oven back on.
Baked goods are not cooked properly after following the times given in the chart.	A different temperature than that given in the recipe was used. ■ Select the temperature required for the recipe.
	The ingredient quantities are different from those given in the recipe. Double check the recipe. The addition of more liquid or more eggs will make a wetter mixture which will take longer to cook.

Problem	Possible cause and solution		
The browning is uneven.	The wrong temperature or shelf level was selected. ■ There will always be a slight unevenness. If the unevenness is great, check whether the correct temperature and shelf level were selected.		
	That material or color of the bakeware is not suitable for the oven mode selected. ■ When using Surround □ use matte, dark colored pans. Light colored, shiny pans will not produce as desirable results.		
	The catalyzer has been set at too high a level. This can lead to an uneven browning result on more delicate food such as sponge cakes. Set the odor reduction catalyzer to a lower level or turn it off (see "Settings - Catalyzer").		
The oven lighting turns off after a short time.	The oven is factory set to turn off automatically after 15 seconds. This setting can be changed (see "Settings - Lighting").		
The oven lighting does	The halogen bulb needs to be replaced.		
not turn on.			
	The lamp cover may be damaged if it falls. When removing the cover hold it firmly so that it does not fall. Place a towel on the oven floor and open door to avoid damage.		
	 Disconnect the appliance from the power supply. Loosen the bulb cover with the tool supplied at the back of the frame. Do not touch the halogen blub with bare fingers. Observe the manufacturers instructions. Remove the halogen bulb. Replace it with a new halogen bulb (Sylvania 66740, 120 V, 40 W, G9, FS1). Press the bulb cover back into place. Reconnect the oven to the electrical supply. 		

Problem	Possible cause and solution
There is soiling in the over after the Self Clean program.	The Self Clean program burns off soiling in the oven and leaves it as ash. Using a soft sponge, warm water and liquid dish soap remove the ashes. If coarse soiling remains, start the Self Clean program again with a longer duration.
Grill and griddle are turned off/cannot be	Once you start the self cleaning program, grill and griddle will be turned off.
turned on	This is not an error. The Safety cut-out feature has been activated. At 1-minute intervals, a maximum of 5 ignition tests will be performed.
	Turn the grill and griddle control knob to the right until it reaches the "Off" position. At the end of the self clean program, you can turn rill and griddle on again.
	During the self cleaning program, grill and griddle cannot be turned on.
	This is not an error. The Safety cut-out feature has been activated. At 1-minute intervals, a maximum of 5 ignition tests will be performed.
	Turn the grill and griddle control knob to the right until it reaches the "Off" position. At the end of the self clean program, you can turn grill and griddle on again.
The rack and other accessories make a noise when being pushed into or pulled	The heat resistant surface of the shelf runners creates friction when accessories are taken in and out of the oven.
out of the oven.	■ To reduce the friction, lubricate the runners with a few drops of cooking oil applied with a paper towel. Repeat this process after each Self Clean program.

Technical Service

After sales service

In the event of a fault which you cannot easily correct yourself, please contact:

- your Miele dealer, or
- the Miele Technical Service Department.

See back cover for contact details.

Please quote the model and serial number of your appliance when contacting Miele.

You will find this information on the data plate, which is behind the toe-kick cover.

Warranty

For further information, please refer to your warranty booklet.

Copyright and licenses

Miele uses software to operate and control the appliance.

The copyright authorization from Miele and other relevant software suppliers (e.g. Adobe) must be respected.

Miele and their suppliers reserve the rights to the software components.

In particular the following are prohibited:

- copying and distribution,
- modifications and derivations,
- decompilation, reverse engineering, disassembling and other such reductions of software.

This product contains Adobe® Flash® Player Software under licence from Adobe Systems Incorporated, Adobe Macromedia Software LLC. Adobe and Flash are registered trademarks of Adobe Systems Incorporated.

Components which fall under GNU General Public Licence and further Open Source licenses are integrated into the software.

An overview of the integrated Open Source components and a copy of the current licence can be obtained at http://www.miele.com/device-software-licenses. You will need to enter the specific product name.

Miele will provide the source code for all components of software licensed under the GNU General Public License and comparable Open Source licenses.

For source code requests, please email info@miele.com.

Please have the model and serial number of your appliance available before contacting Technical Service.

U.S.A.

Miele, Inc.

National Headquarters

9 Independence Way Princeton, NJ 08540 Phone: 800-843-7231 609-419-9898

Fax: 609-419-4298 www.mieleusa.com

Technical Service & Support Nationwide

Phone: 800-999-1360 Fax: 888-586-8056

TechnicalService@mieleusa.com





Canada

Importer
Miele Limited

Headquarters and Miele Centre

161 Four Valley Drive Vaughan, ON L4K 4V8 www.miele.ca

Customer Care Centre

Phone: 800-565-6435 905-532-2272 customercare@miele.ca

Germany Manufacturer

Miele & Cie. KG Carl-Miele-Straße 29 33332 Gütersloh



HR1954; HR1955; HR1956



M.-Nr. 09 898 081 / 00